IMPRESSION

Leader © 2011 Leader International Inc.
Impression is a trademark and service mark of Leader International Inc.
All products distributed by Leader International Inc. Unless otherwise indicated.
All other brand names, trademark and service marks are property of their owners.
225 S. Lake Avenue,Suite 300 , Pasadena, CA 91101
www.leaderinternationalinc.com

IMPRESSION

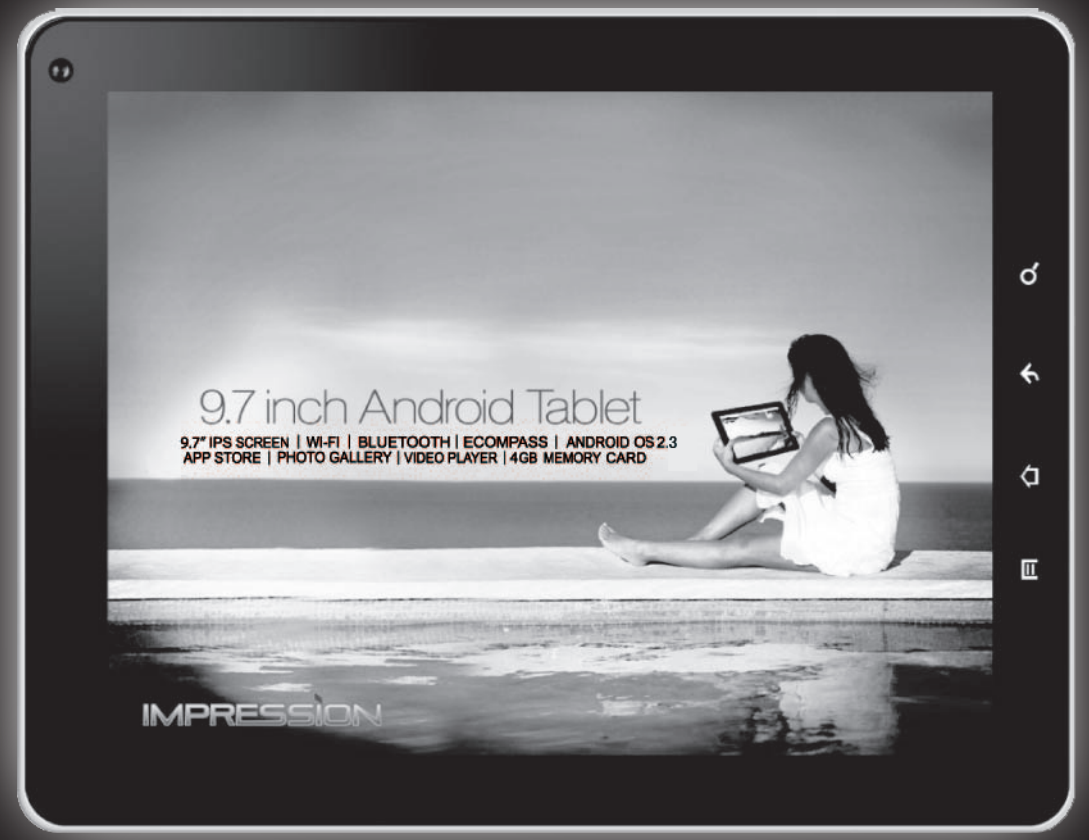
9.7 inch Android Tablet
9.7" IPS SCREEN | WI-FI | BLUETOOTH | ECOMPASS | ANDROID OS 2.3
APP STORE | PHOTO GALLERY | VIDEO PLAYER | 4GB MEMORY CARD
IMPRESSION

9.7” ANDROID TABLET

Instruction Manual

Contents

Controls 2
FunctionKeys 3
Touch Screen Interface 6
Settings 10
Camera/Camcorder 22
Web Browsing 23
ApplicationInstaller 24
Task Manager 25
File Manager 25
KOBO 28
SAM 31
Music Player 34
Video Player 36
Picture Browser 37
Email Setup 39
Clock Settings 42
Specifications 44
FCC Statement 46

Contents

1	Speakers
2	Power
3	Camera
4	Volume
5	Reset
6	Indicator
7	Camera Shutter

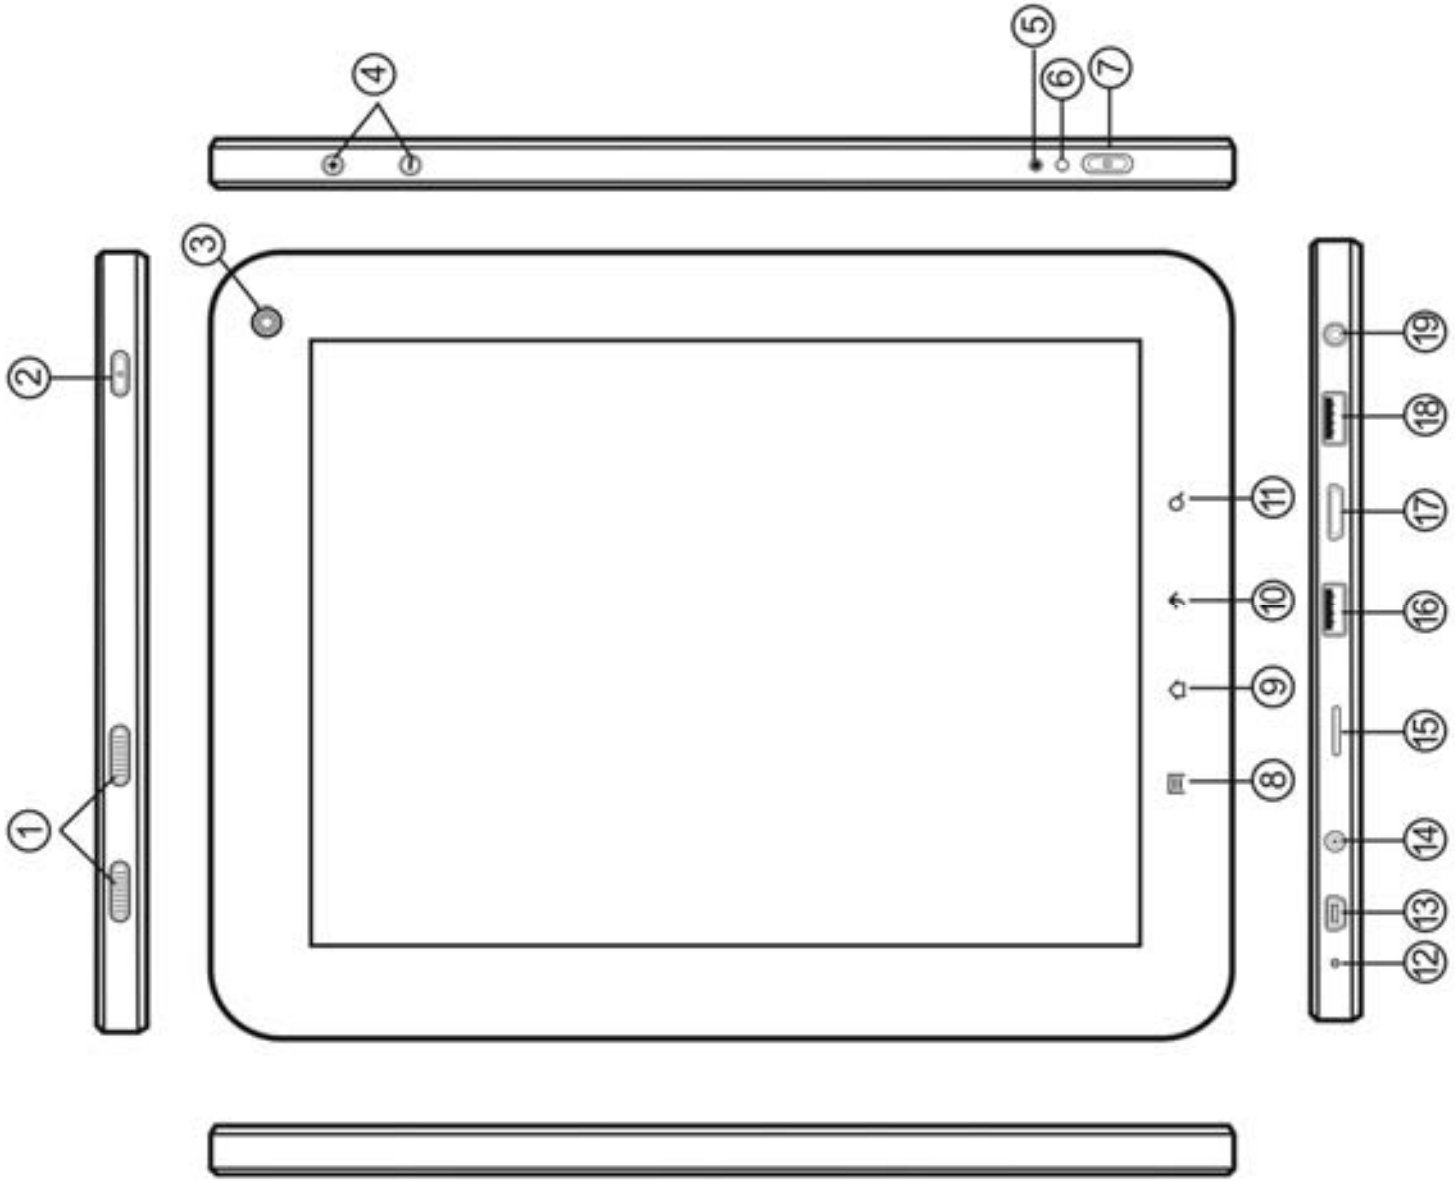

8	Menu Key
9	Home Key
10	Backspace Key
11	Search Key
12	Microphone
13	Mini USB Jack
14	Charge Jack
15	Micro SD Slot
16	USB 1 Jack
17	HDMI Jack
18	USB 2 Jack
19	Earphone Jack

Function Keys

Home Key

- In the option program, menu or webpage, press home key to return to the main interface.
- Press & hold the home key and it will show your recently opened applications.

Menu Key

- Press the Menu key to open the sub-menu for this page.
- Press the menu key again to close the sub-menu.
- Press & hold the menu key in an application to open/close the virtual keyboard.
- When the screen is locked, press the Menu key to enable the screen. Press it again to unlock the screen.
  (If you have set the unlock mode, you can unlock the screen based on your settings.)

Backspace Key

- Press the BACKSPACE key to return to the previous operation or previous screen.

Search Key

- Press search to enter search input interface.

On/Off Key

Turn ON

- Press and hold Power ON/OFF key to turn on the tablet pc.

Turn OFF

- Press ON/OFF key to lock the screen and enter sleep mode.
- Press and hold ON/OFF key: The mode selection window pops up. You can then choose silent mode, or power off.
- Volume Key
- Press + to increase the volume.
- Press - to reduce the volume.

Recover Factory Settings

- Press and hold the Camera button together with press turn on/off,. A red screen will be displayed, then the tablet will reset to original factory settings.

Update System Version

- Press Volume Θ button and reset button together, it will show the blue screen.
- Then it will show the update status.

Accessories Included in The Package:

1 Tablet pc

2 Power adapter

3 USB cable

4 Instruction Manual

5 Warranty Card

6 Stop card

7 Registration card

8 Protective Pouch

Touch Screen Interface

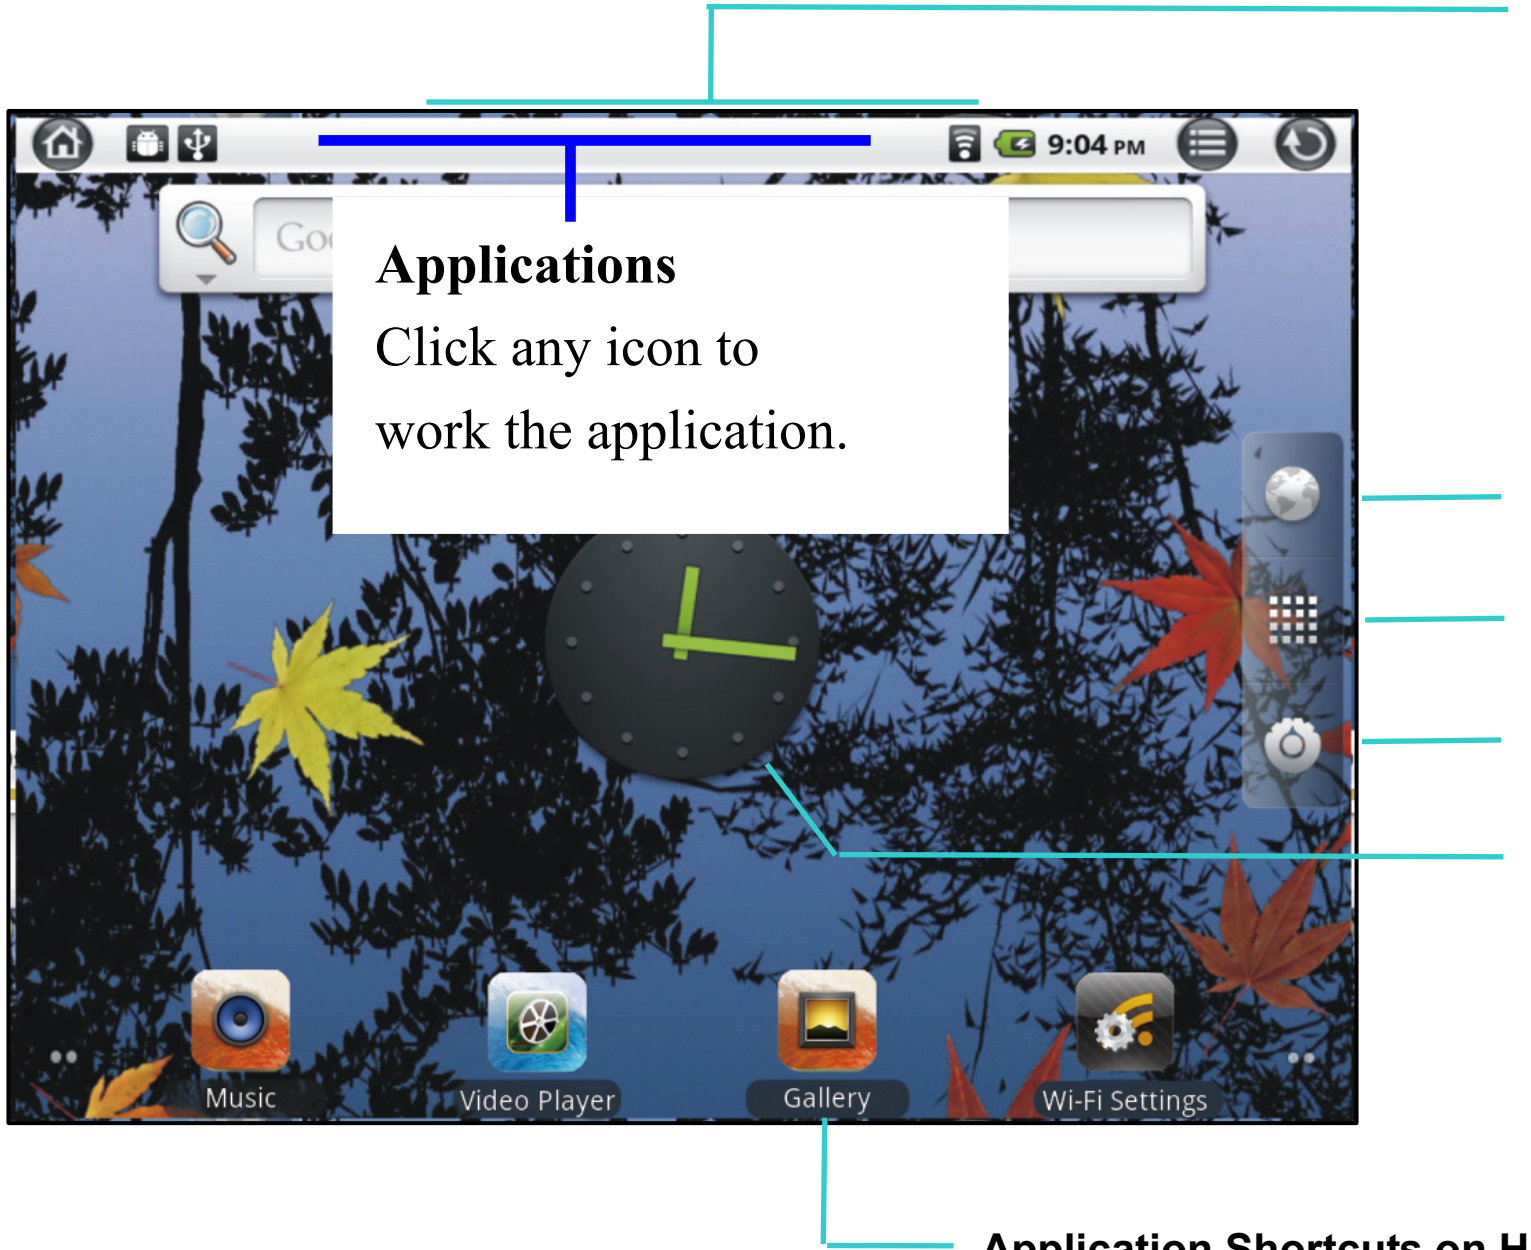
9:04 PM
Goo
Music
Video Player
Gallery
Wi-Fi Settings

Applications

Click any icon to work the application.

Status Bar

Left side of the status bar shows applications running

Right side shows alerts, sub-menu Wi-Fi connection, battery charge, etc.

Browser

Applications

Settings

Widgets

Application Shortcuts on Home Screen

Screen Interface

Main screen interface is similar to a computer desktop.
Place application shortcuts and widgets here.
Touch and “swipe” to go to next page, move things on the screen, etc.
Touch 2 fingers and spread apart or bring together to zoom pictures in and out.

Widgets

Press the screen for 1-2 seconds. The “Add to Home screen” menu will pop up offering you options to add widgets, change wallpaper, etc.

Deleting Application shortcuts

Press and hold down the application button on the screen. The application list button will change to a trash can. Drag the application to the trash.

Status Bar

Pay attention to the status bar on the top of screen. If icons show on the left, it is a reminder that applications are running. On the right of the status bar, there are alarm settings, Wi-Fi connection, battery charge, etc.

Status Bar Icons

🔇	**Mute**	✓	**Finished Downloading**
⇧ ⇩	**Uploading / Downloading**	📶	**Wi-Fi Service Connected & Available**
⏰	**Alarm clock**	▶	**Playing Music**
💾	**SD Card Nearly Full**	🔋	**Battery Power Status**
🔋	**Charging**		

When a prompt is displayed on the status bar, touch it to open the notification.

- Click selection window to open prompt message
- Click on the top of the column to read the full message
- Close the column

Application List

Click the Application List icon to show the application library.

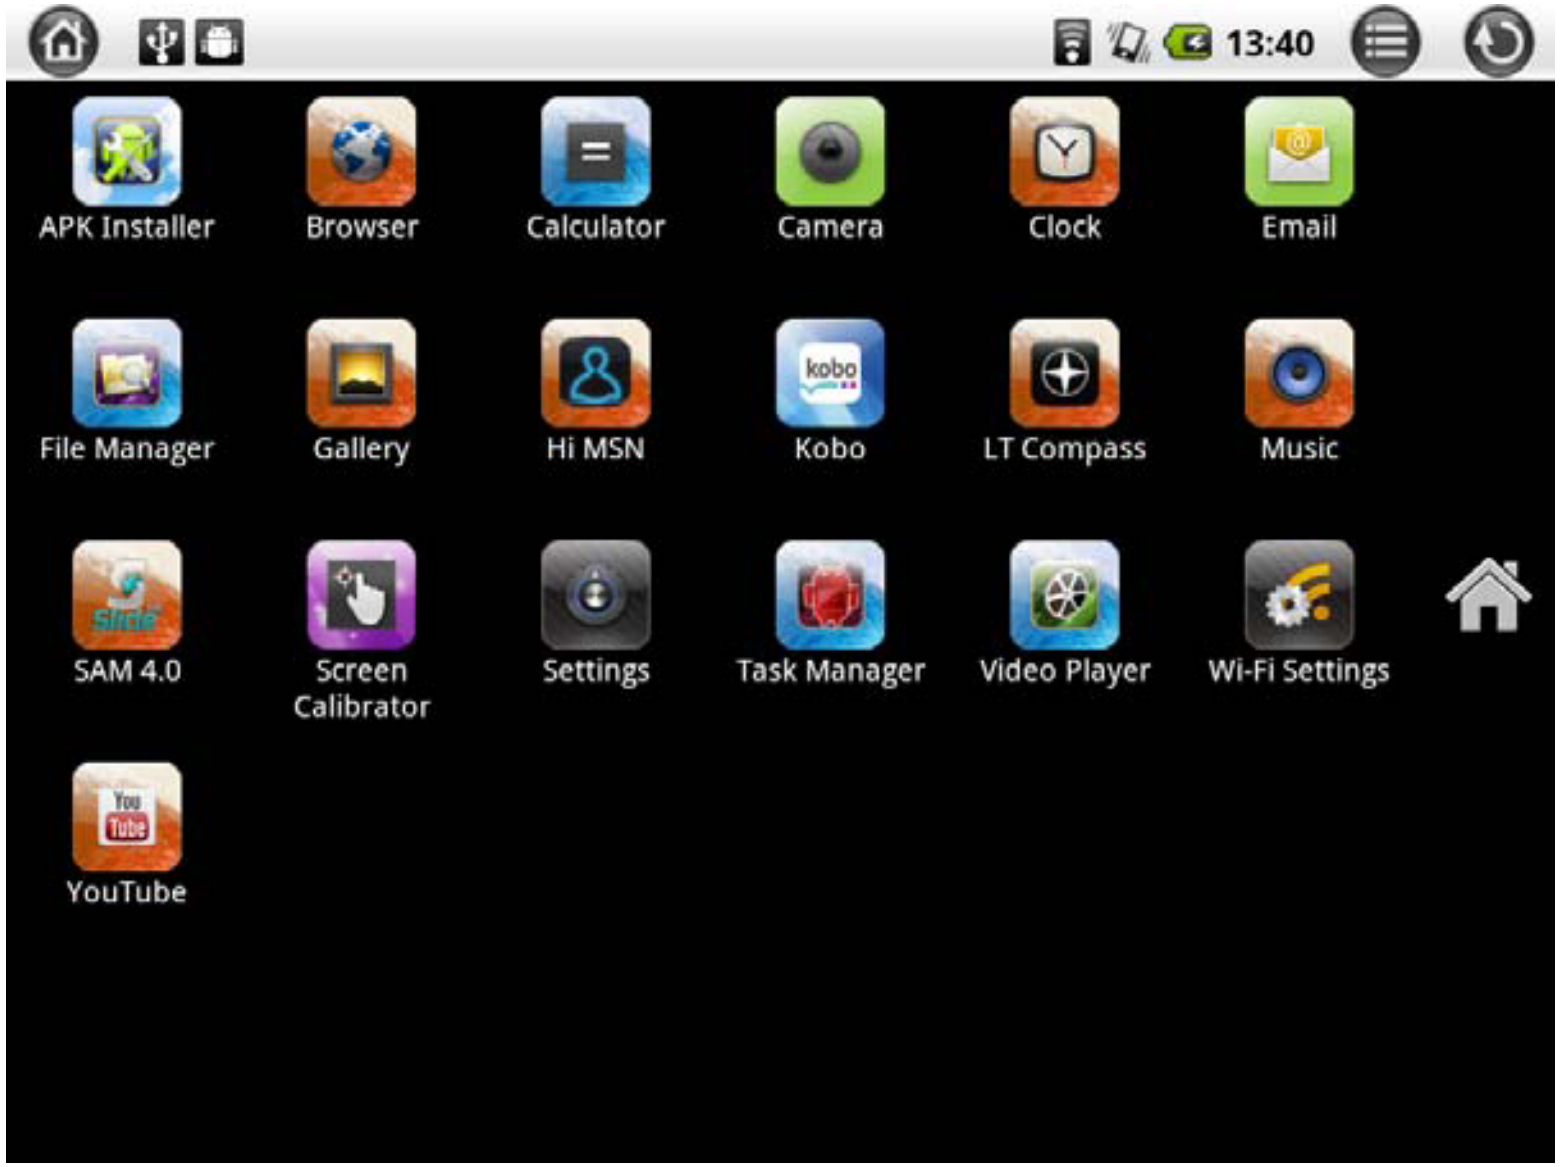
13:40
APK Installer
Browser
Calculator
Camera
Clock
Email
File Manager
Gallery
Hi MSN
Kobo
LT Compass
Music
SAM 4.0
Screen Calibrator
Settings
Task Manager
Video Player
Wi-Fi Settings
YouTube

Touch an application icon to start it up.

Press and hold the application icon and a shortcut will be added to the home screen.

Press the “Home” key in the application list interface to return to the home screen.

Settings

Touch Screen Calibration

In the application list screen, Click the “Screen Calibrator” icon:

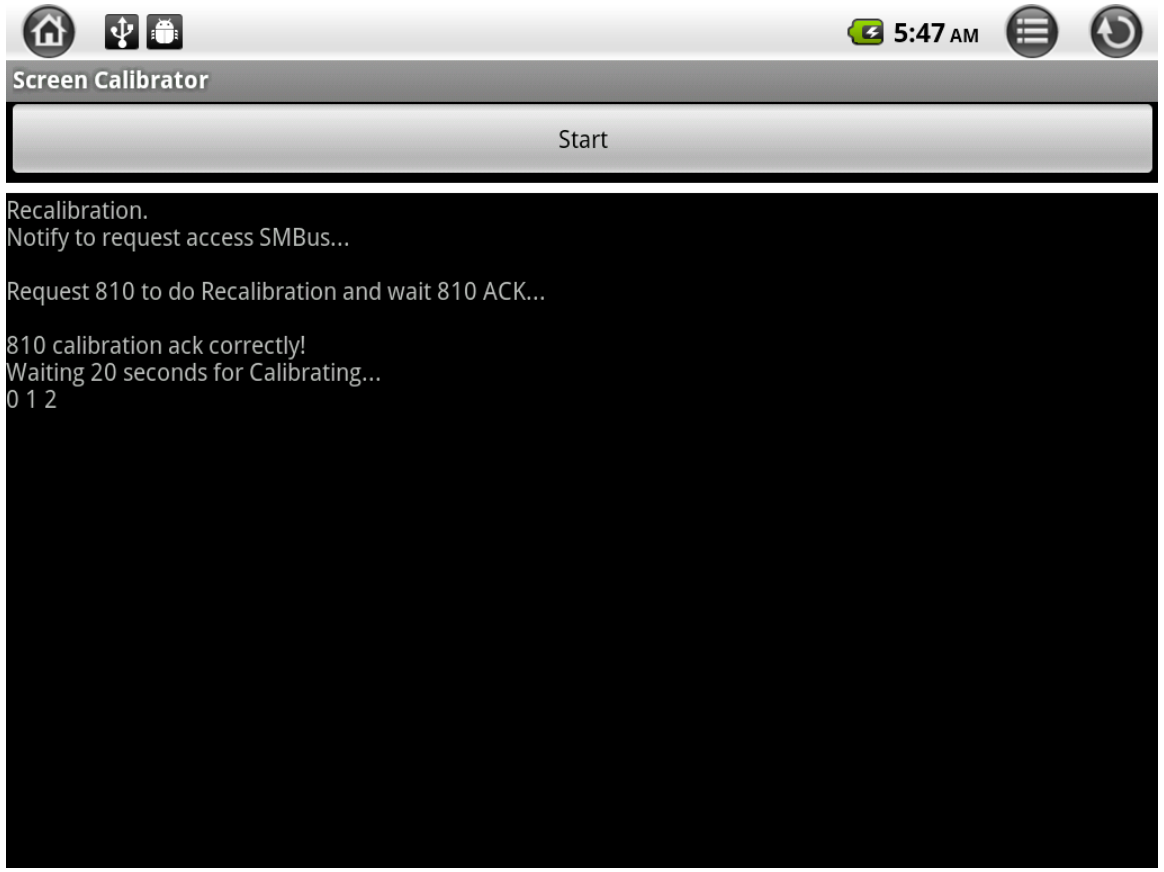

```
Recalibration.
Notify to request access SMBus...

Request 810 to do Recalibration and wait 810 ACK...

810 calibration ack correctly!
Waiting 20 seconds for Calibrating...
0 1 2
```

1 Click “ReCalibration”
2 Click “Start”
3 The screen will automatically recalibrate in about 20 seconds

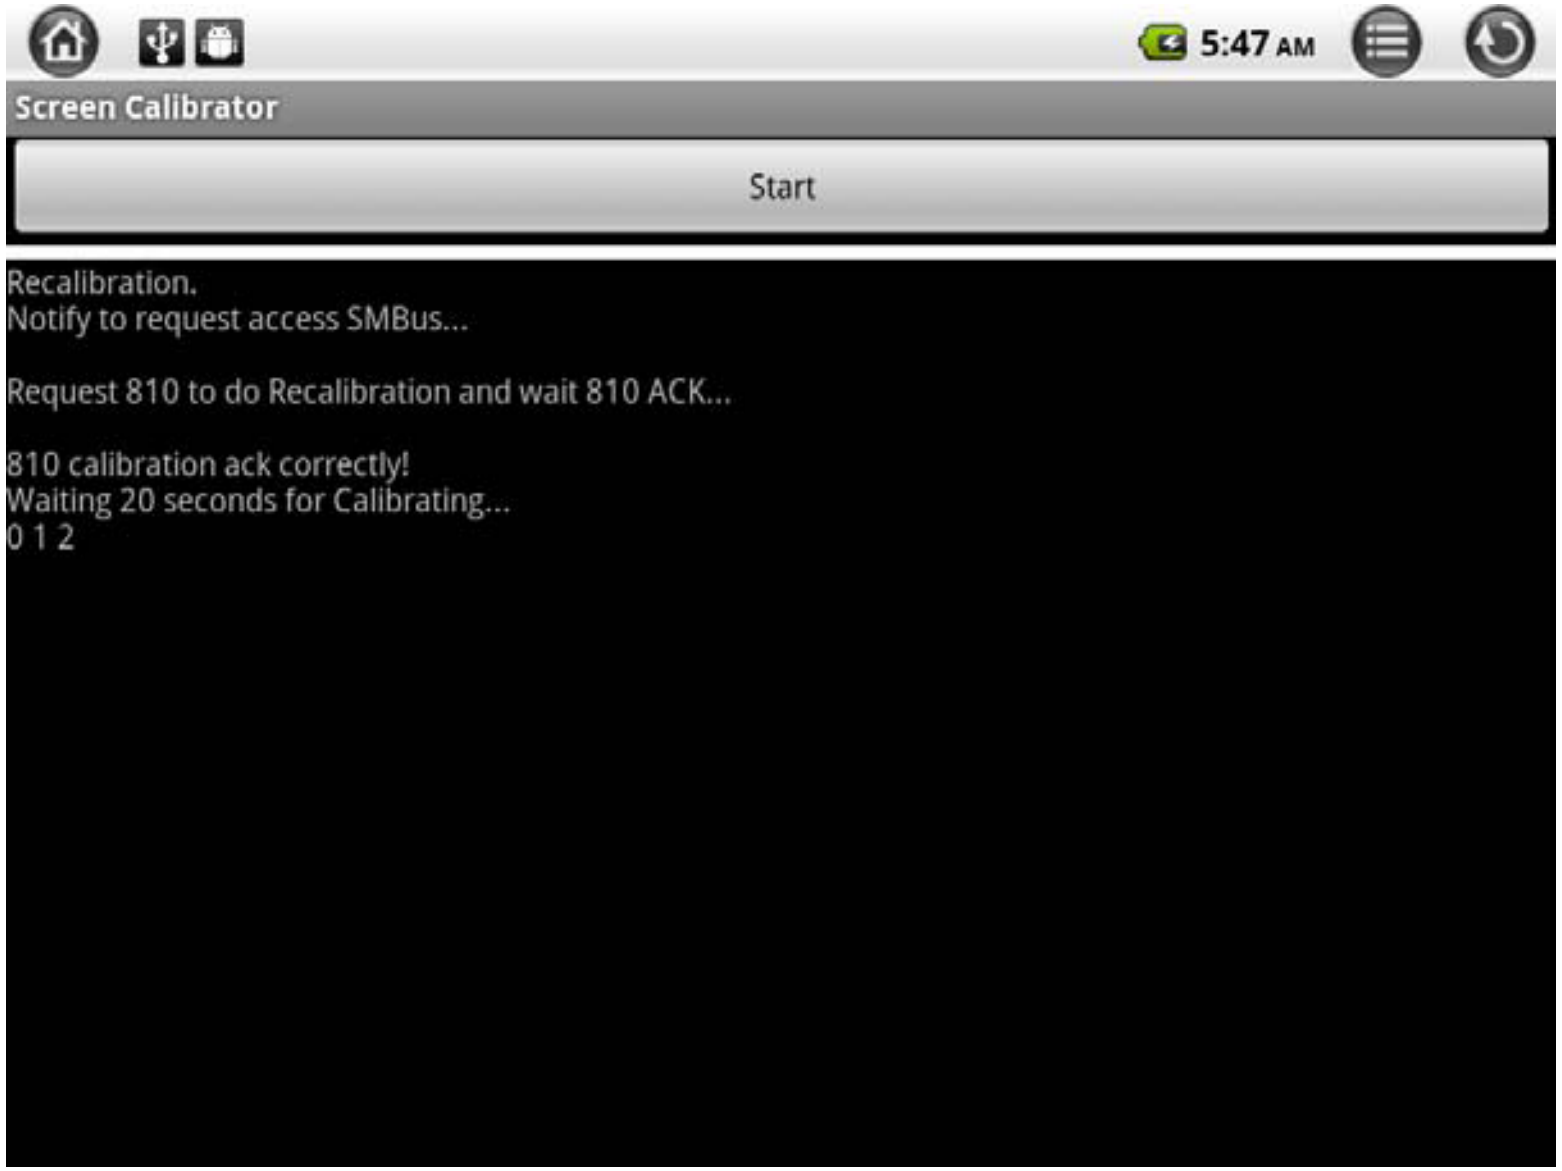
5:47 AM
Screen Calibrator
Start

```
Recalibration.
Notify to request access SMBus...

Request 810 to do Recalibration and wait 810 ACK...

810 calibration ack correctly!
Waiting 20 seconds for Calibrating...
0 1 2
```

1.Click “Calibration”

2.Click start, it will calibrate automatically

3.After 20 seconds, it’s ok.

Language Settings

Touch: “Settings” > “Language & keyboard’ > “Select language” > Choose Language

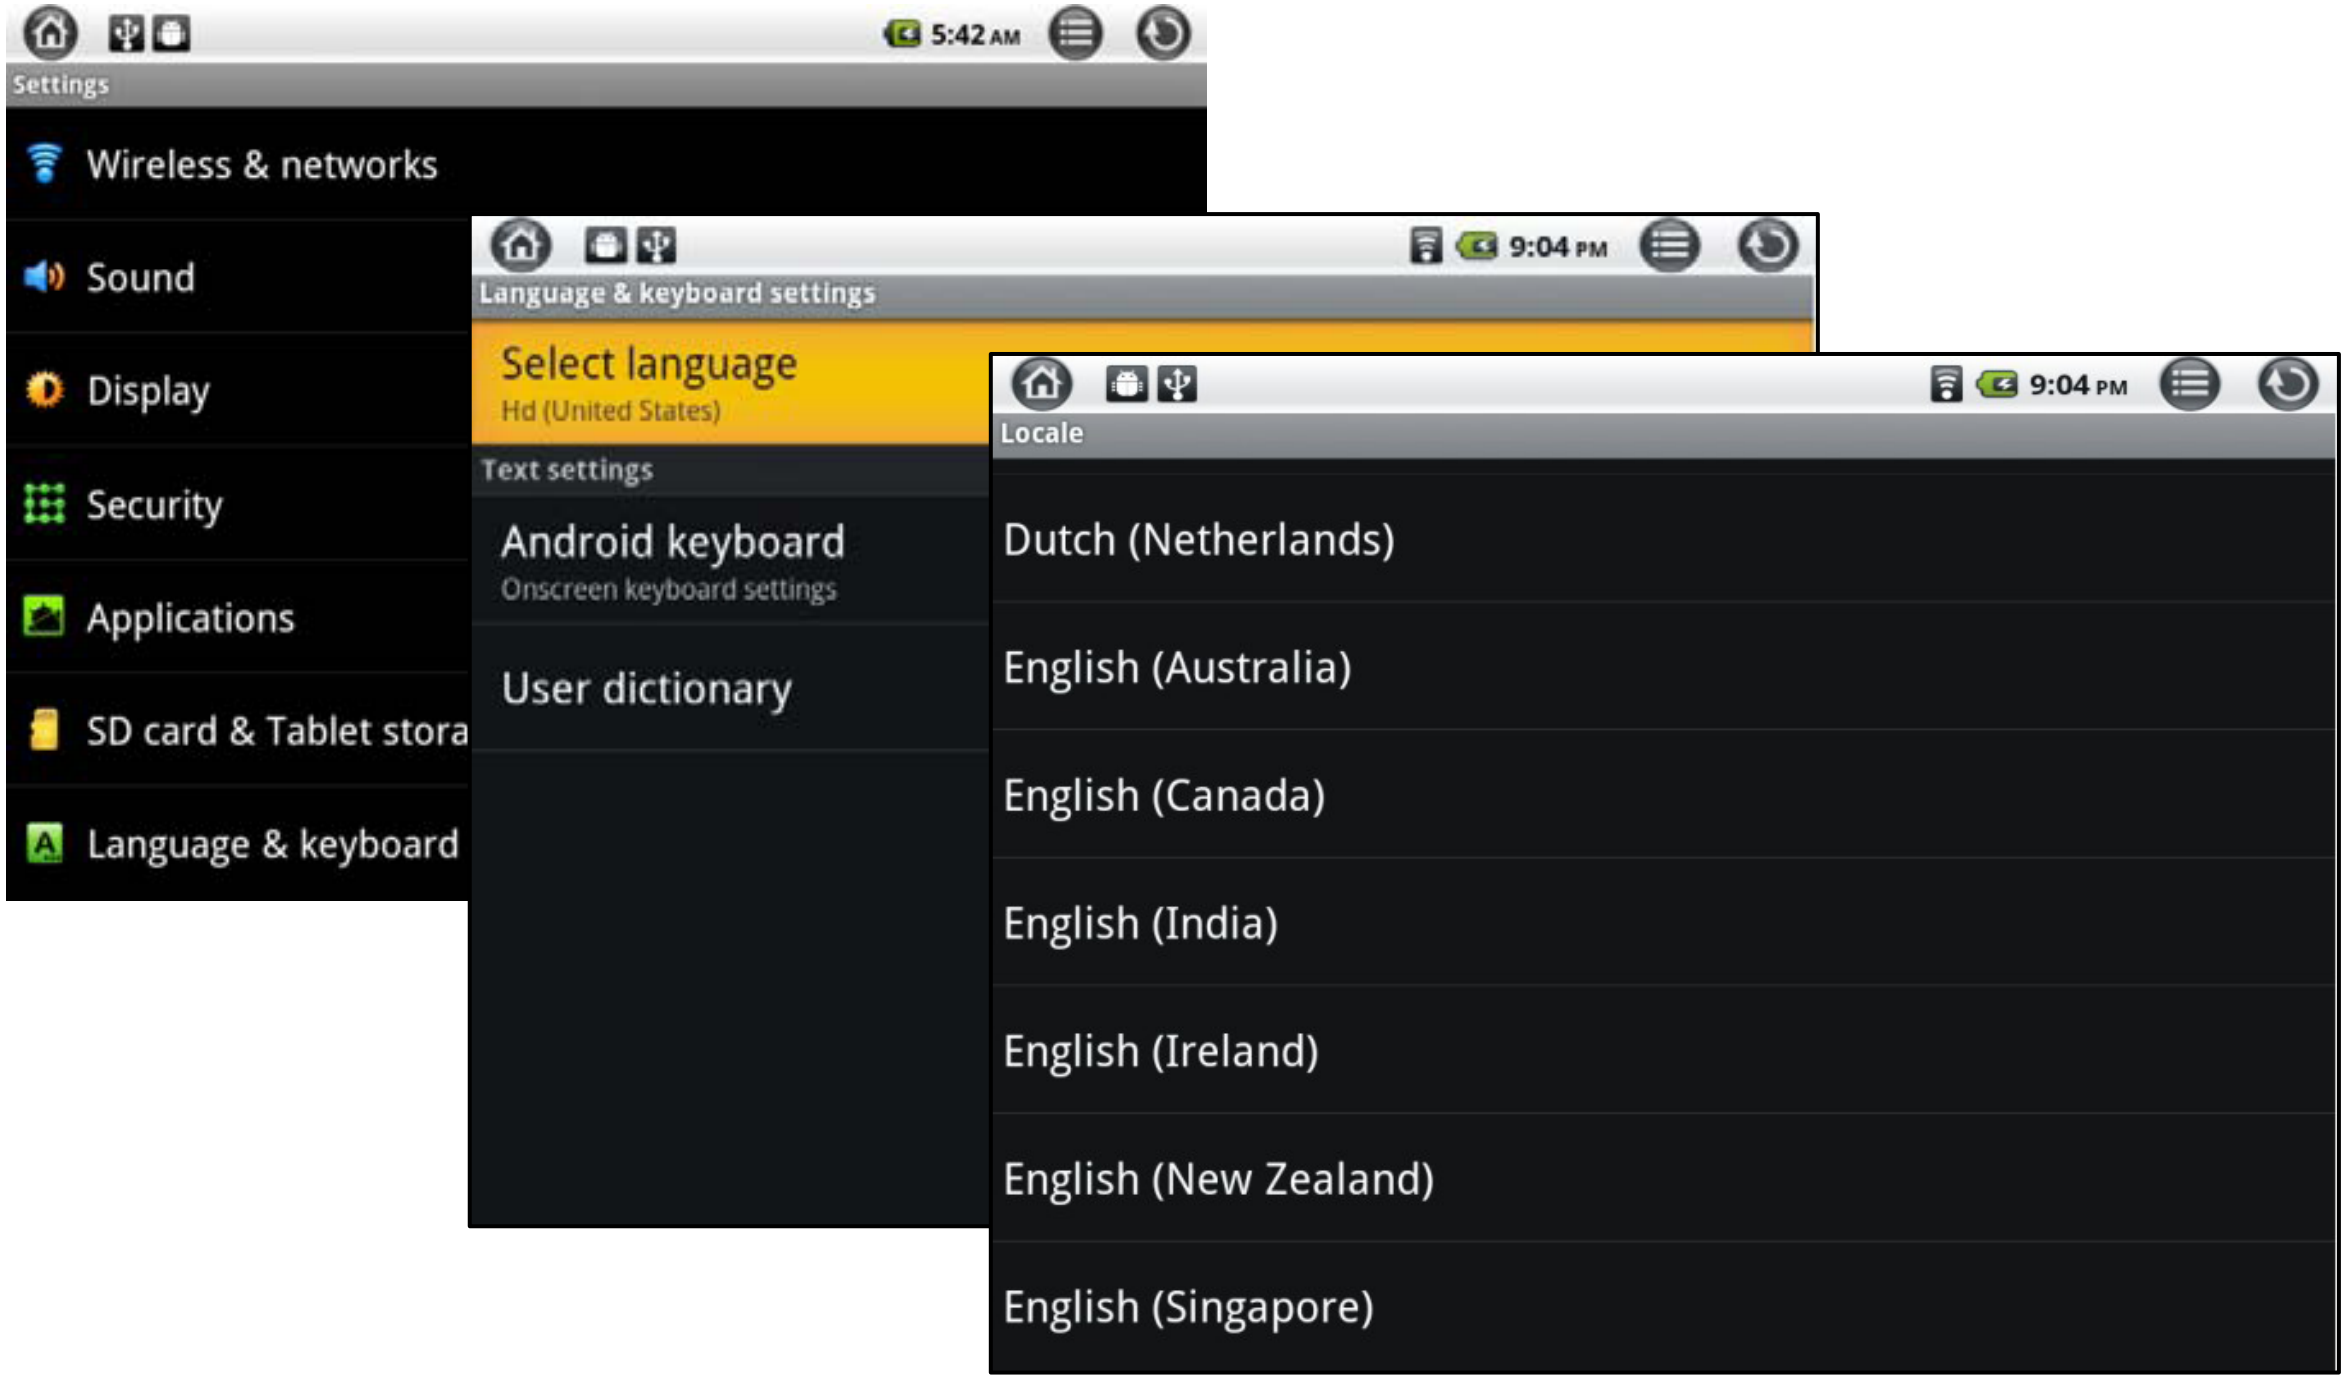
5:42 AM
Settings
Wireless & networks
Sound
Display
Security
Applications
SD card & Tablet stora
Language & keyboard
9:04 PM
Language & keyboard settings
Select language
Hd (United States)
Text settings
Android keyboard
Onscreen keyboard settings
User dictionary
9:04 PM
Locale
Dutch (Netherlands)
English (Australia)
English (Canada)
English (India)
English (Ireland)
English (New Zealand)
English (Singapore)

Screen Brightness Settings

Touch: “Settings” > “Display” > “Brightness” > Adjust slider and hit “OK”

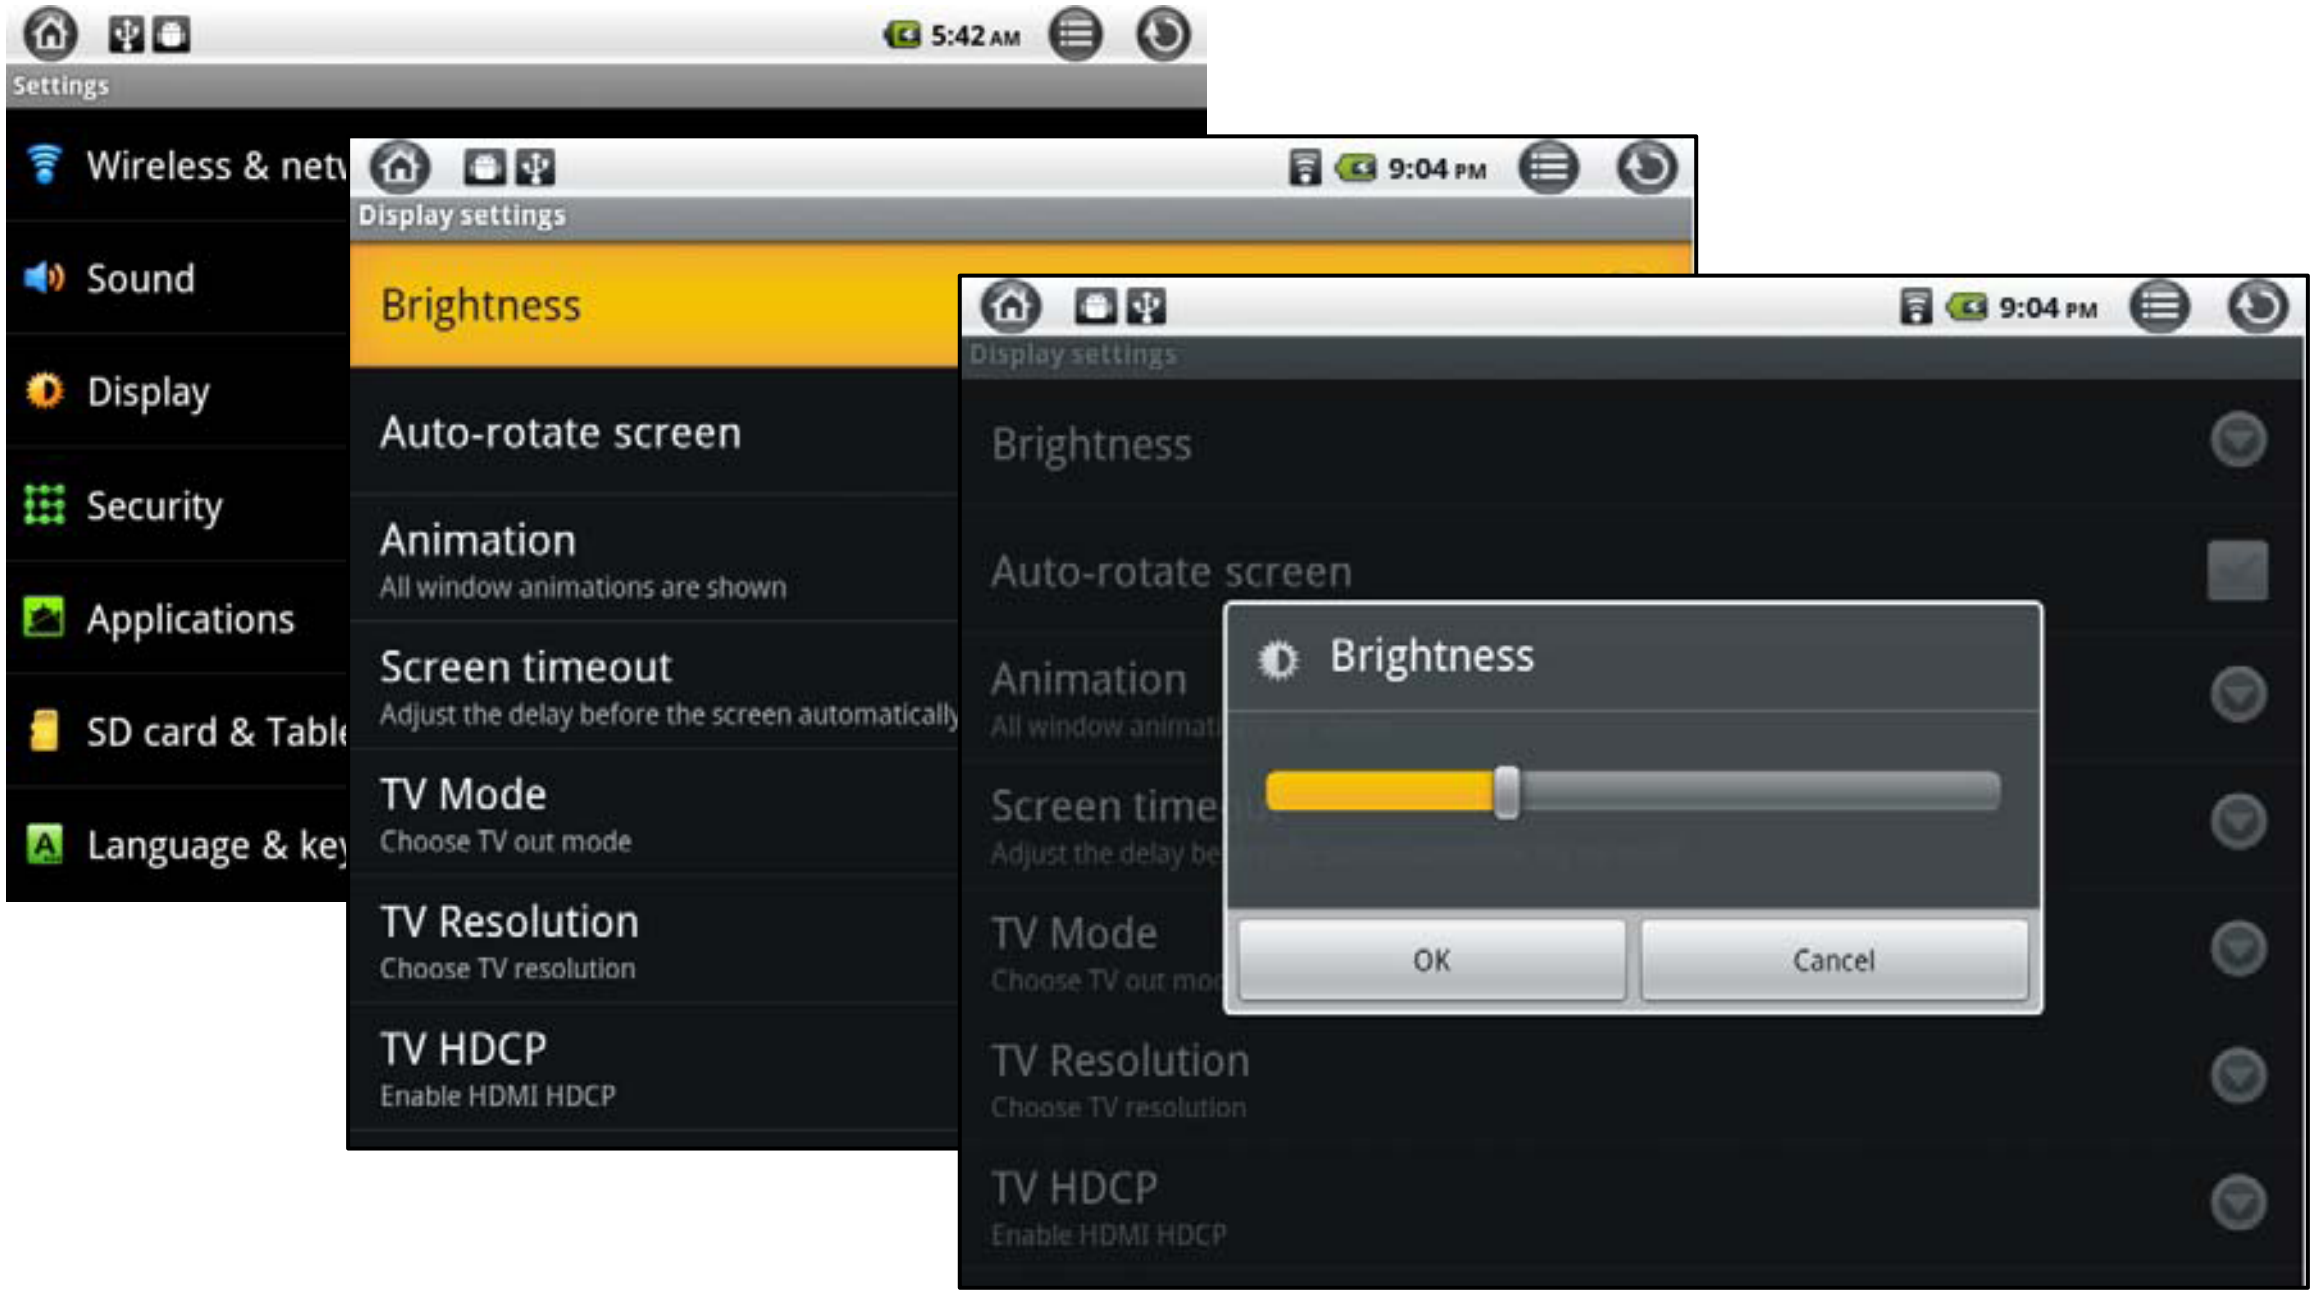

5:42 AM

Settings

Wireless & netw

Sound

Display

Security

Applications

SD card & Table

Language & key

9:04 PM

Display settings

Brightness

Auto-rotate screen

Animation

All window animations are shown

Screen timeout

Adjust the delay before the screen automatically

TV Mode

Choose TV out mode

TV Resolution

Choose TV resolution

TV HDCP

Enable HDMI HDCP

9:04 PM

Display settings

Brightness

Auto-rotate screen

Animation

All window animati

Screen time

Adjust the delay be

TV Mode

Choose TV out mo

TV Resolution

Choose TV resolution

TV HDCP

Enable HDMI HDCP

Brightness

OK

Cancel

Screen Timeout Settings

Touch: “Settings” > “Display” > “Screen Timeout” > Choose Time

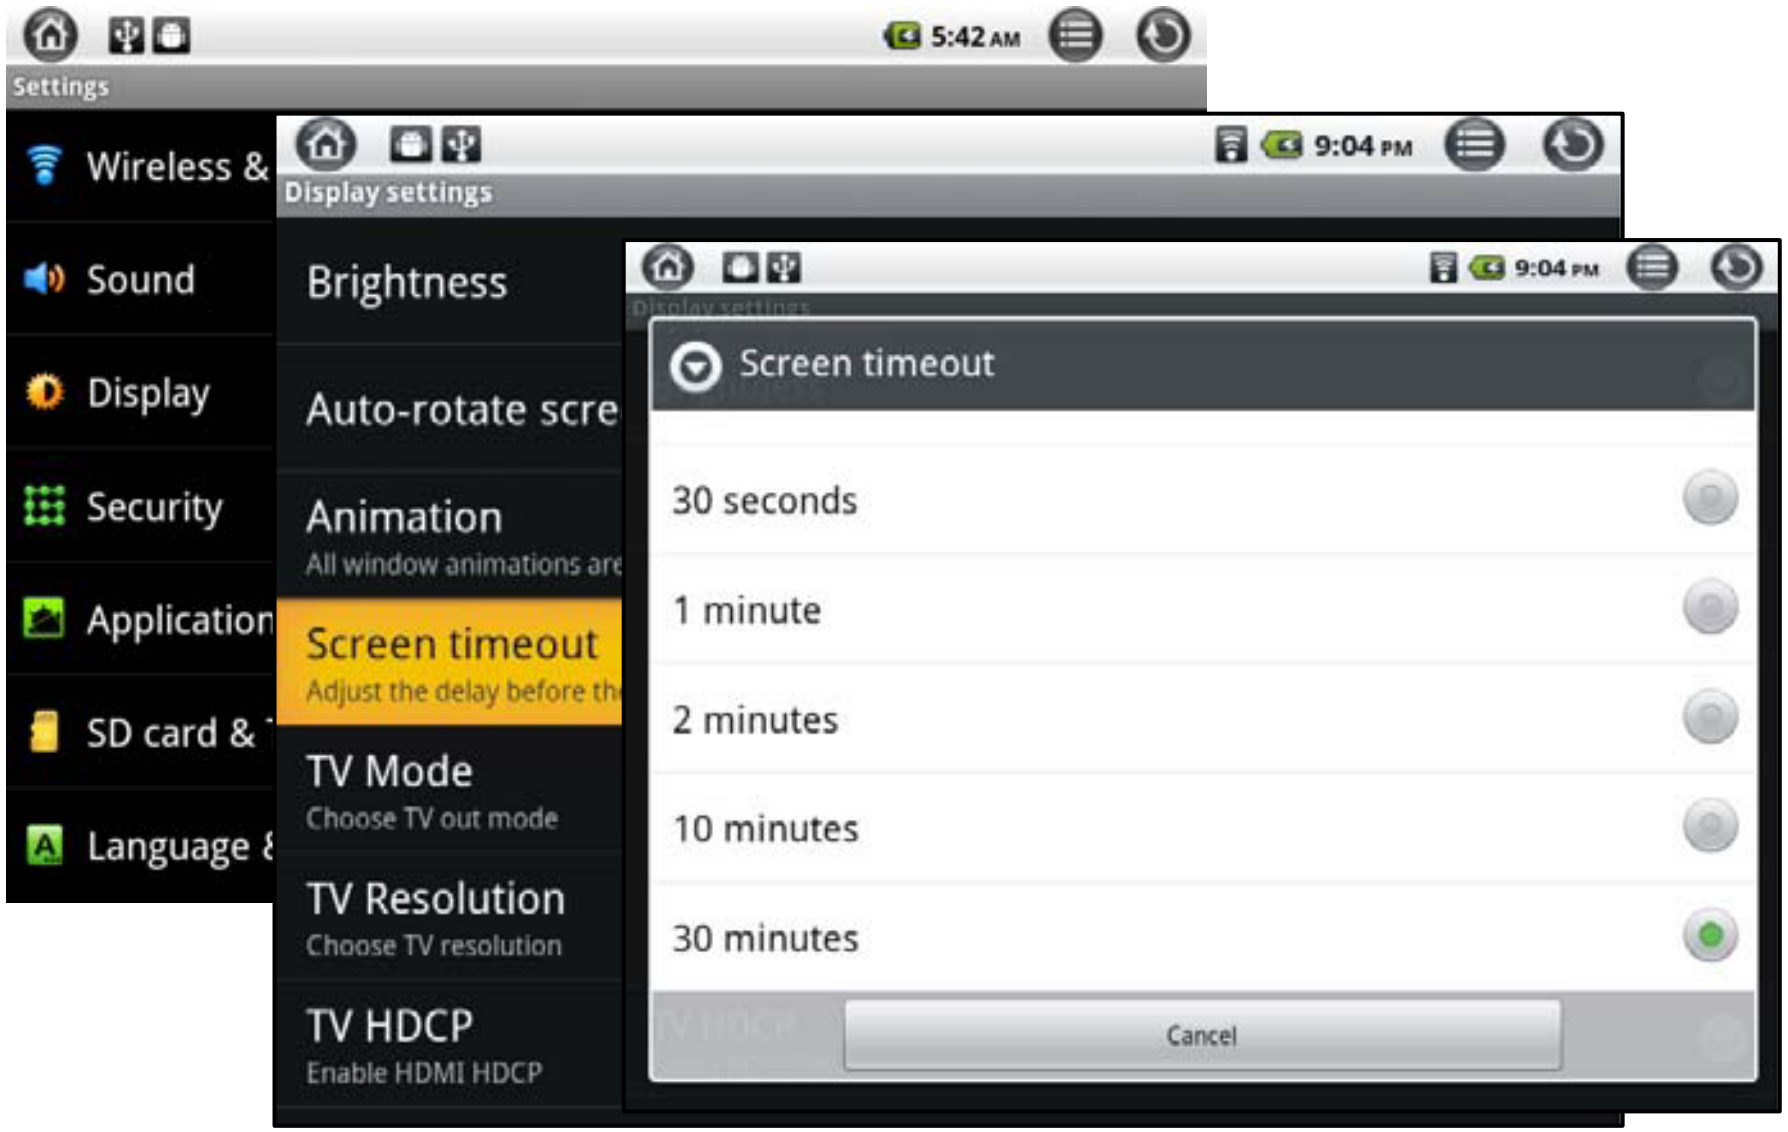
5:42 AM
Settings
Wireless &
Sound
Display
Security
Application
SD card &
Language &
9:04 PM
Display settings
Brightness
Auto-rotate scre
Animation
All window animations are
Screen timeout
Adjust the delay before th
TV Mode
Choose TV out mode
TV Resolution
Choose TV resolution
TV HDCP
Enable HDMI HDCP
9:04 PM
Display settings

Screen timeout

30 seconds ○

1 minute ○

2 minutes ○

10 minutes ○

30 minutes ●

Cancel

SD card Mount / Un-Mount

After inserting a micro-SD card to the tablet, do the following to install the card.

Touch: “Settings” > “SD Card & Tablet Storage” > “Mount SD card”

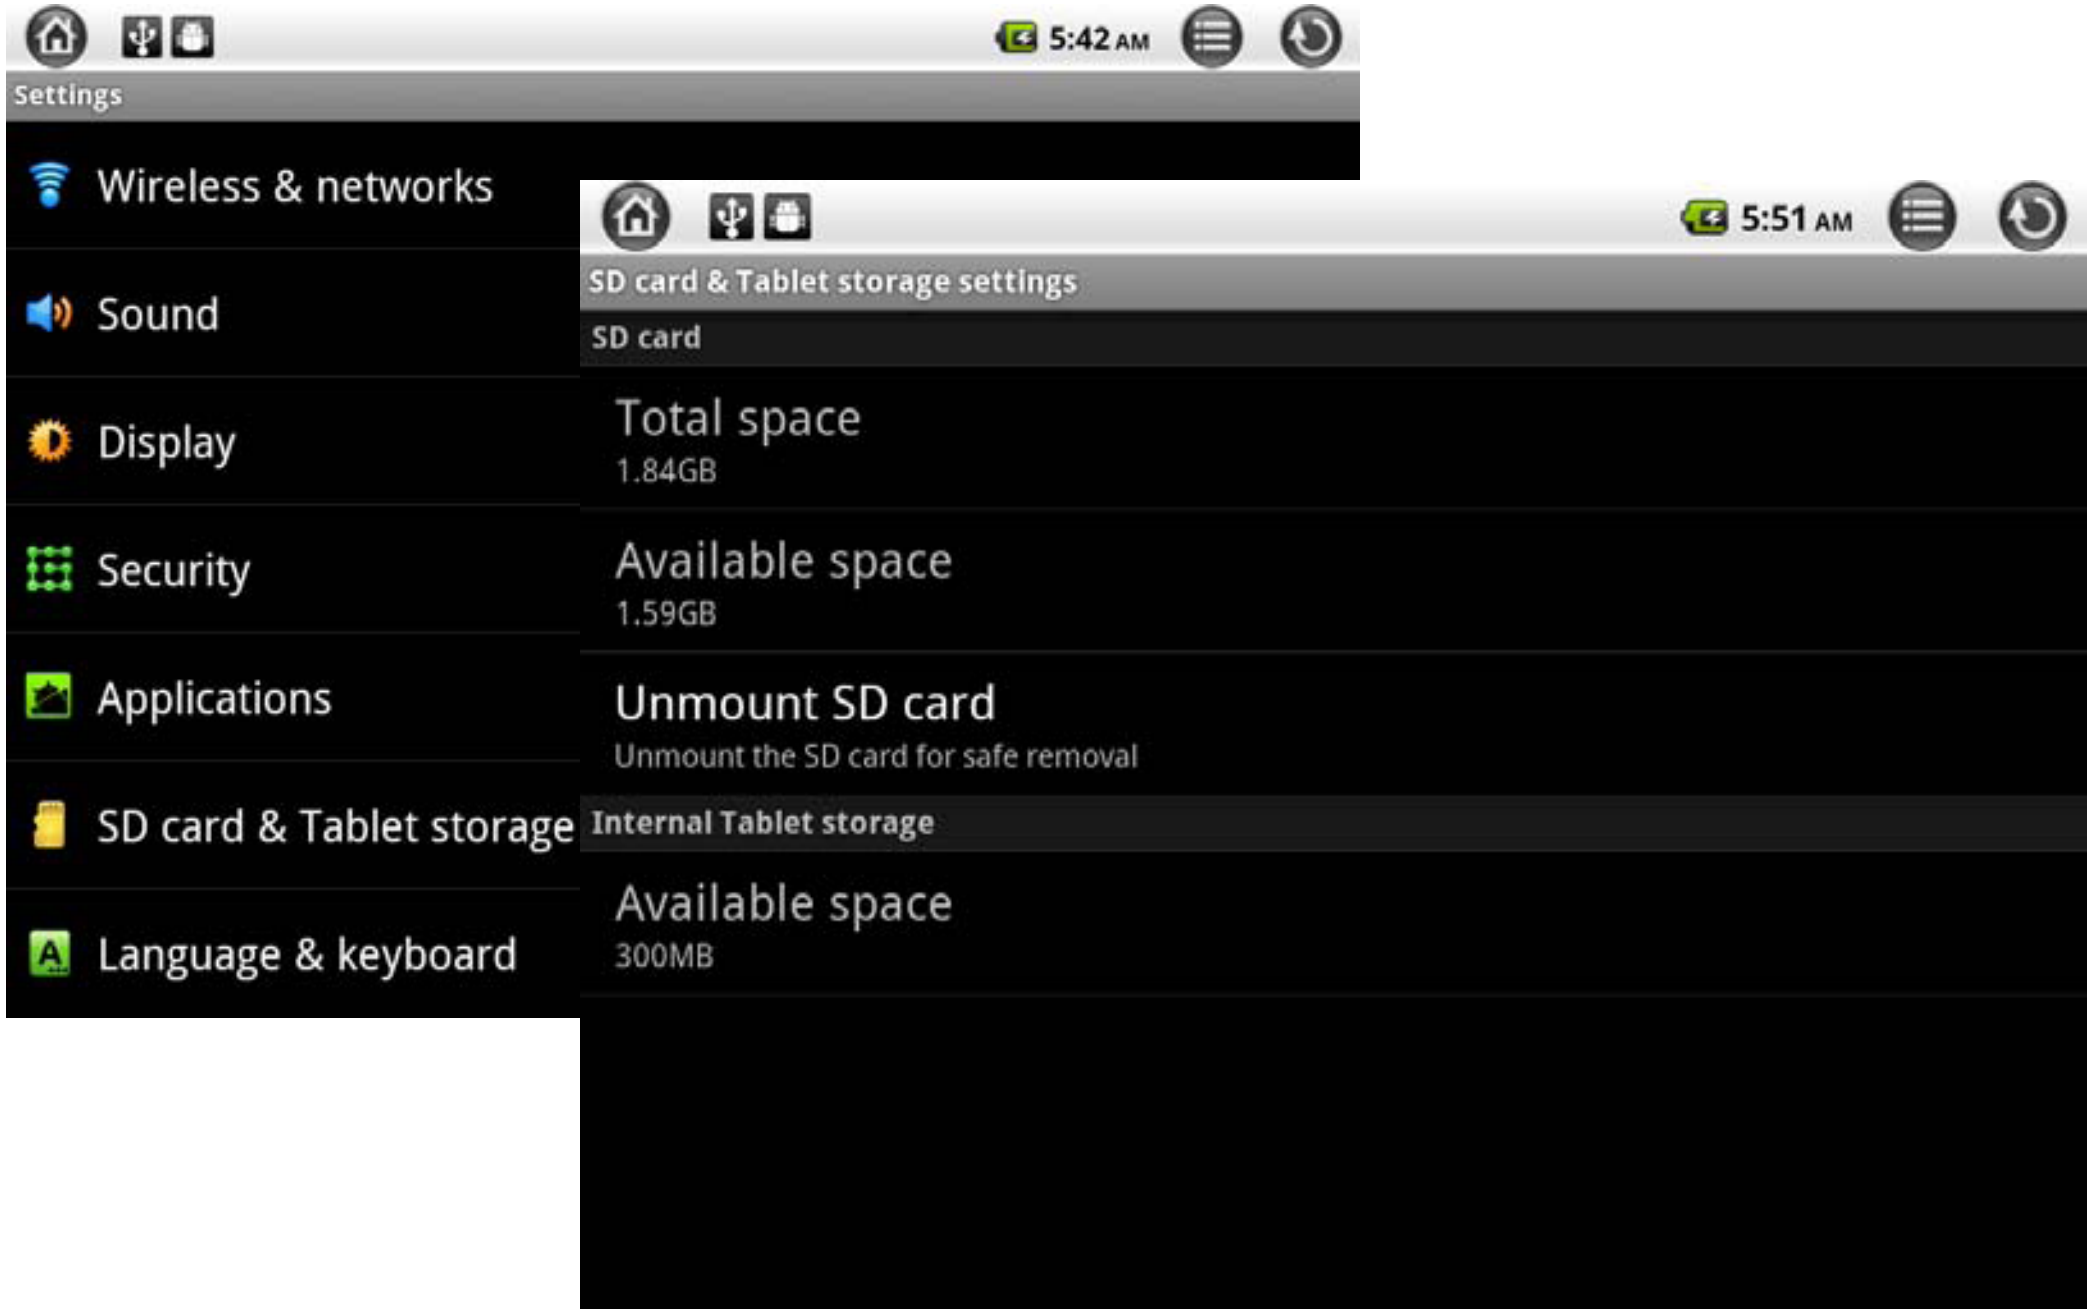
5:42 AM
Settings
Wireless & networks
Sound
Display
Security
Applications
SD card & Tablet storage
Language & keyboard
5:51 AM

SD card & Tablet storage settings

SD card

Total space
1.84GB

Available space
1.59GB

Unmount SD card
Unmount the SD card for safe removal

Internal Tablet storage

Available space
300MB

SD card Mount /Un-Mount (continued)

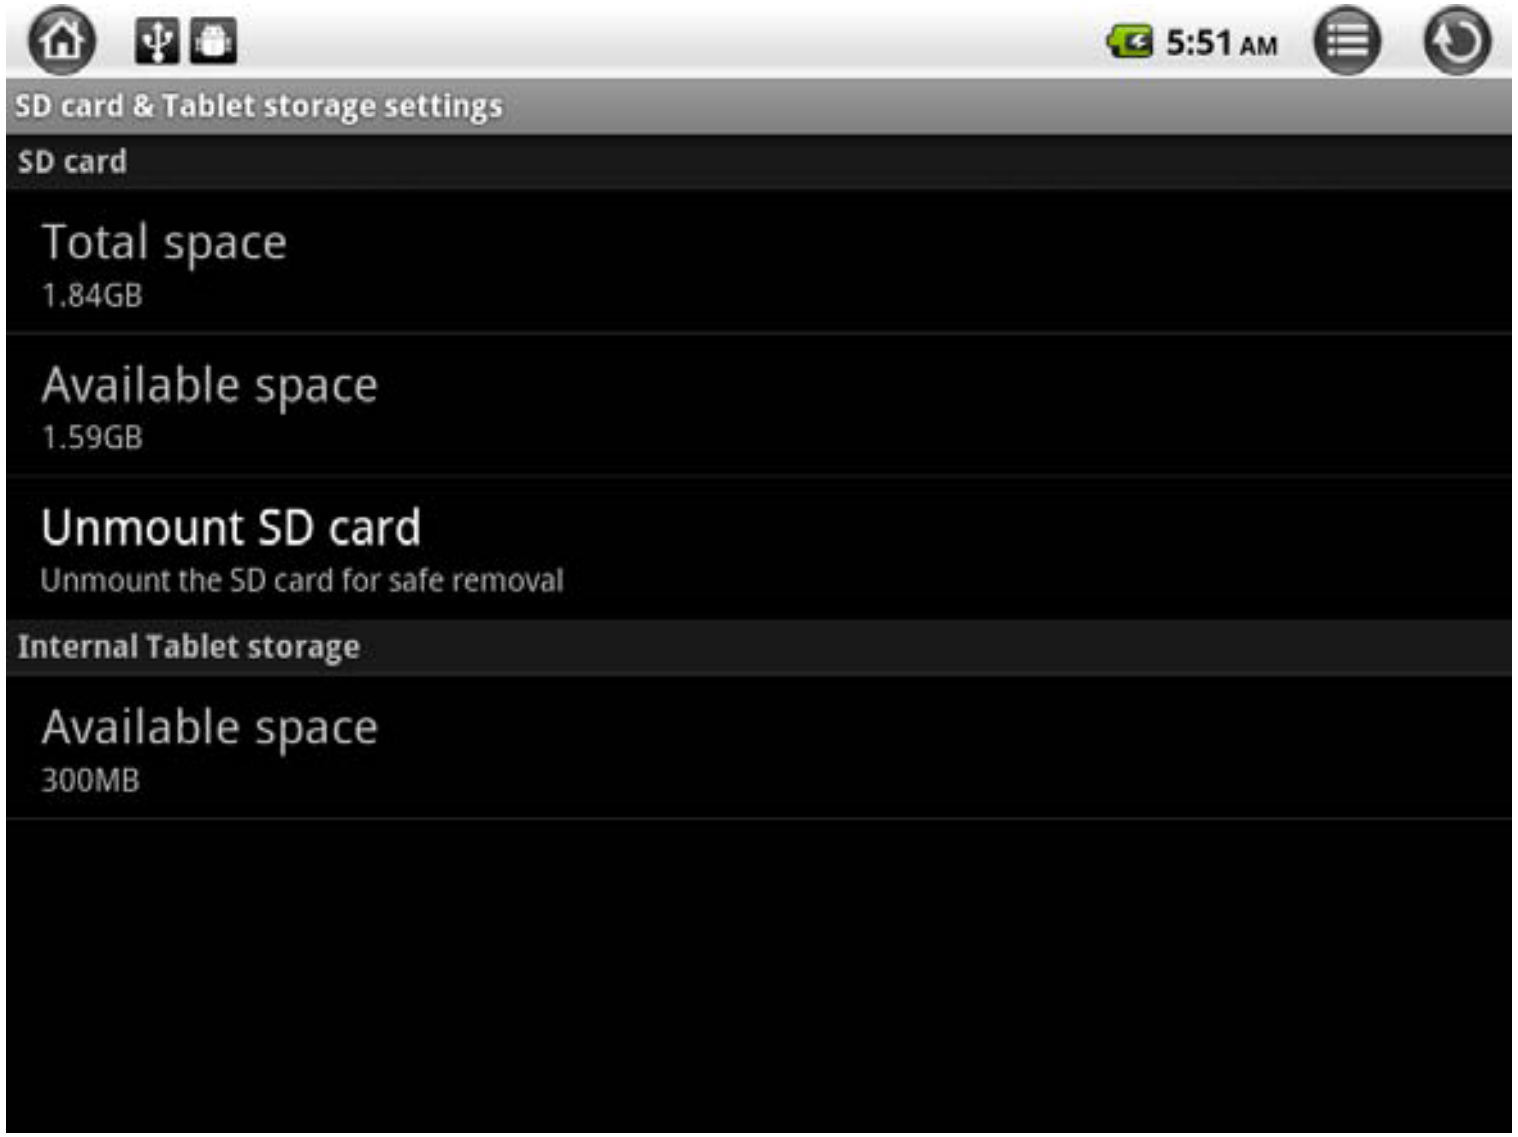

SD card & Tablet storage settings

SD card

Total space
1.84GB

Available space
1.59GB

Unmount SD card
Unmount the SD card for safe removal

Internal Tablet storage

Available space
300MB

The Settings screen will also show how much memory is available on the card as well as on the internal memory.

After mounting a card, the selection will change to “Unmount SD card”

To uninstall the card select this option.

HDMI device output

To set up the HDMI output:

Touch: “Settings” > “Display” > “TV Mode” > (continued on next page)

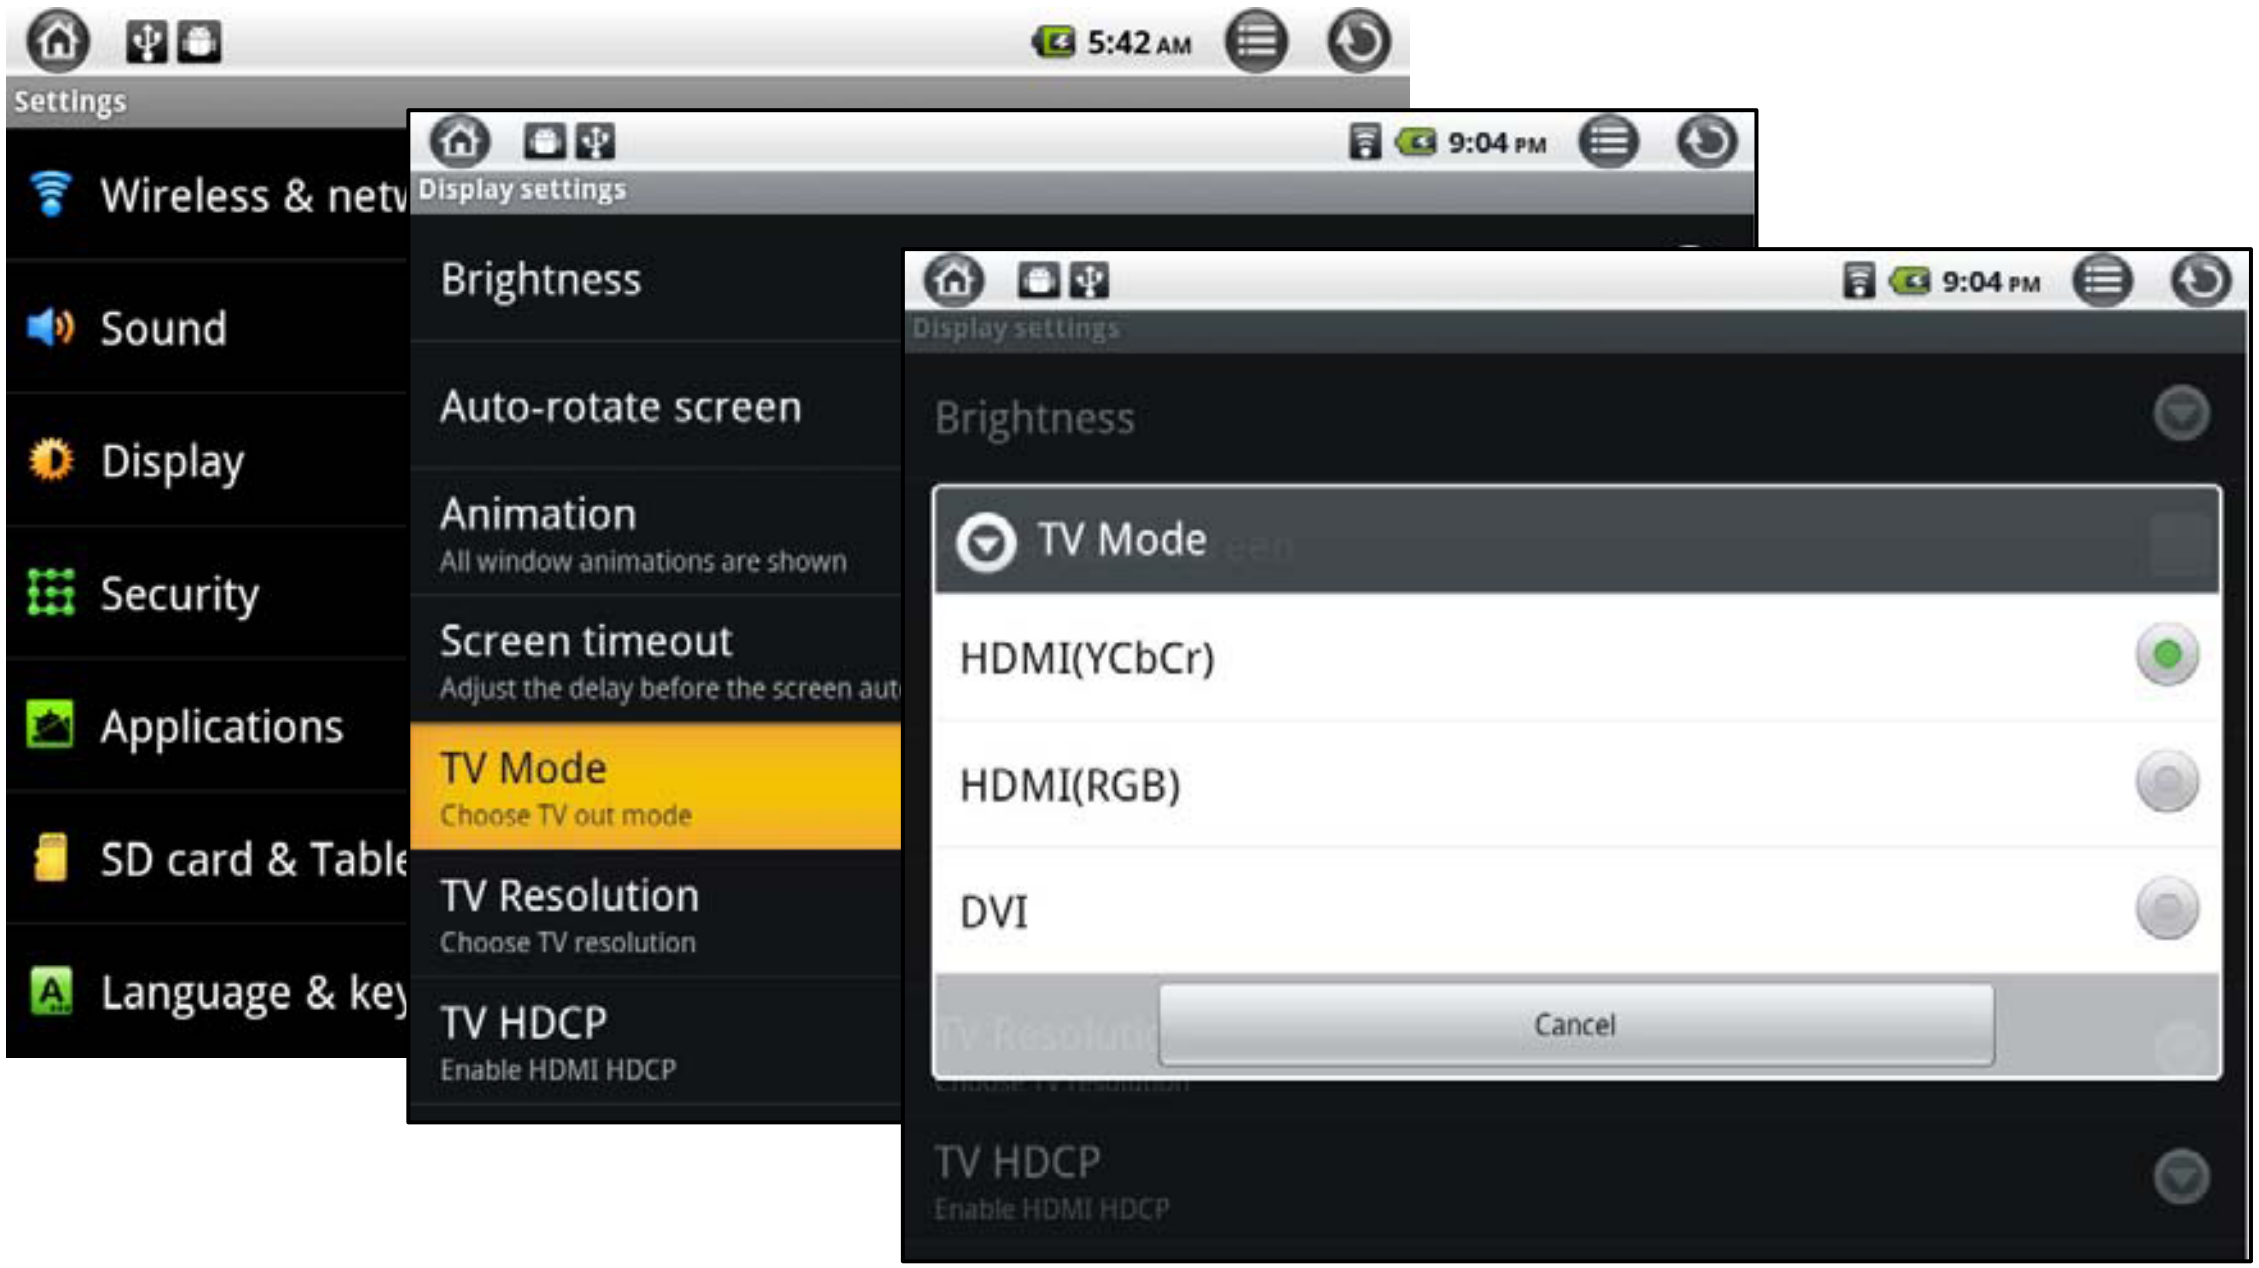
5:42 AM
Settings
Wireless & netw
Sound
Display
Security
Applications
SD card & Table
Language & key
9:04 PM
Display settings
Brightness
Auto-rotate screen
Animation
All window animations are shown
Screen timeout
Adjust the delay before the screen aut
TV Mode
Choose TV out mode
TV Resolution
Choose TV resolution
TV HDCP
Enable HDMI HDCP
9:04 PM
Display settings
Brightness
TV Mode
HDMI(YCbCr) ●
HDMI(RGB) ○
DVI ○
Cancel
TV HDCP
Enable HDMI HDCP

HDMI device output (continued)

Select HDMI output mode > Resolution > and select whether TV supports HDMI

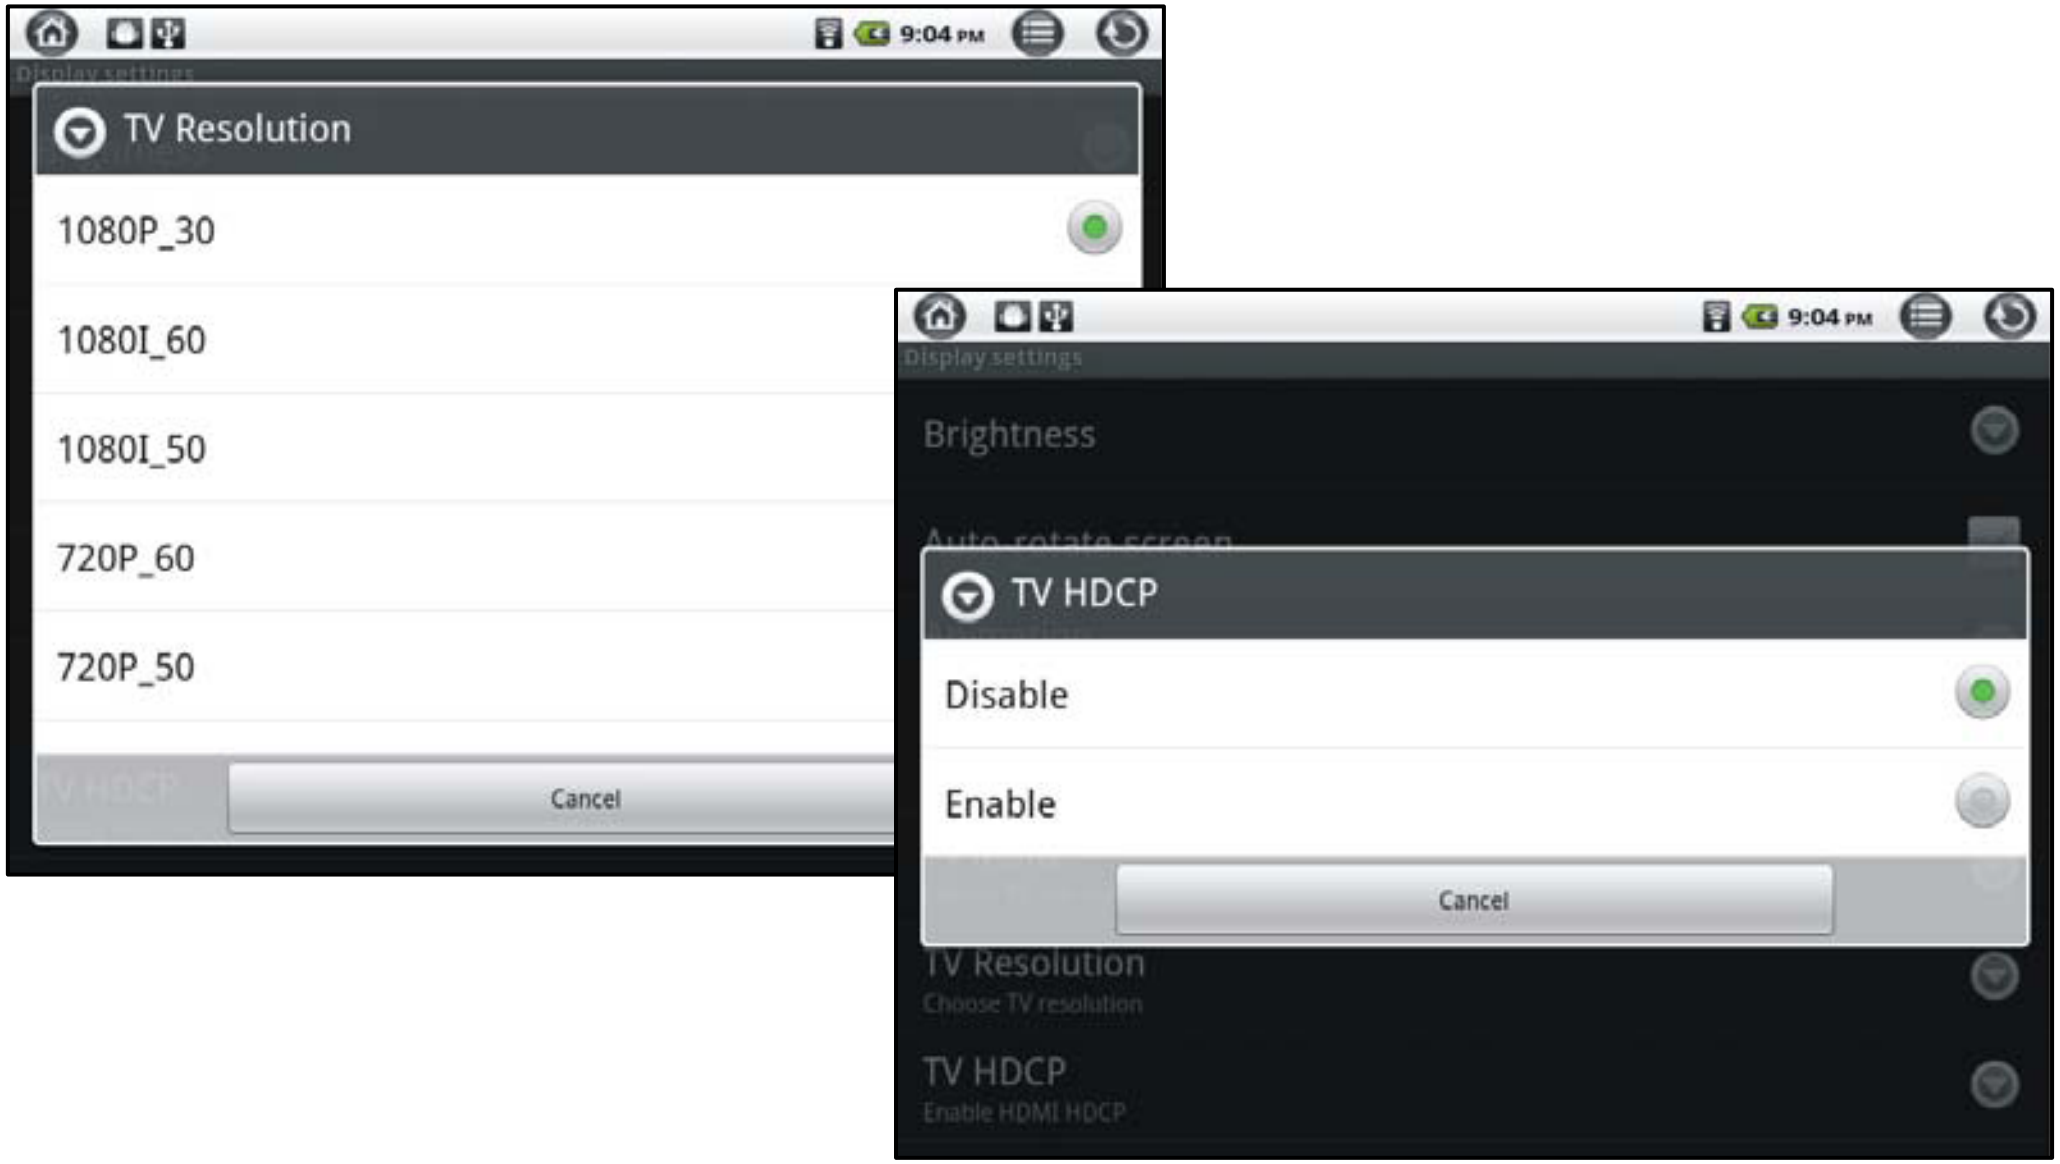
9:04 PM
Display settings

TV Resolution

- 1080P_30 ●
- 1080I_60
- 1080I_50
- 720P_60
- 720P_50

Cancel

9:04 PM
Display settings
Brightness
Auto-rotate screen

TV HDCP

- Disable ●
- Enable ○

Cancel
TV Resolution
Choose TV resolution
TV HDCP
Enable HDMI HDCP

USB Connections

USB indicator when connected

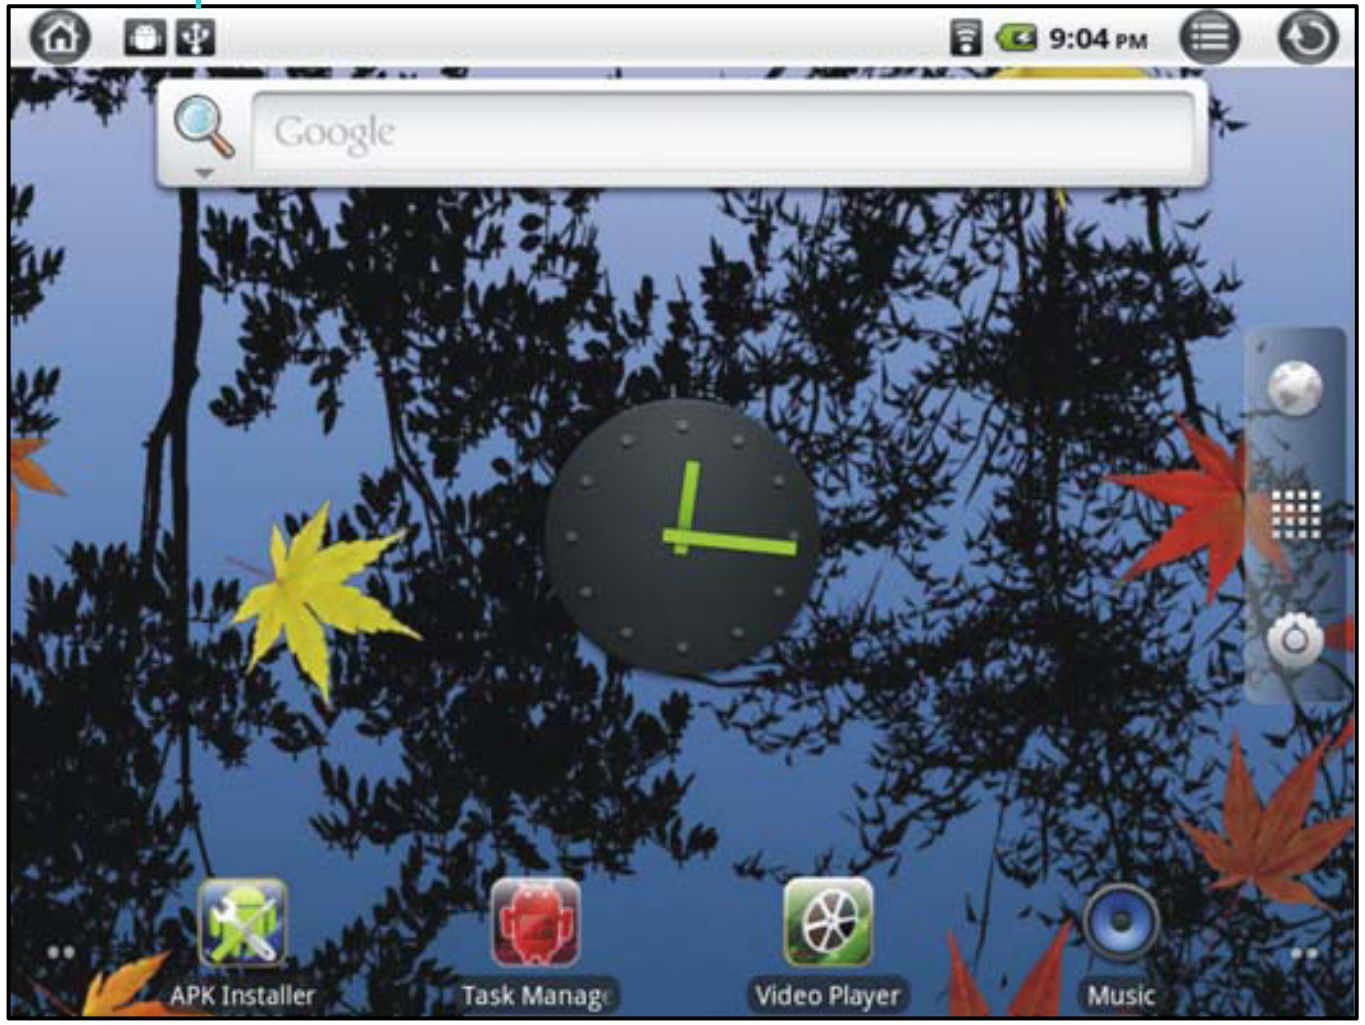
9:04 PM
Google
APK Installer
Task Manage
Video Player
Music

To connect a USB device such as a flash drive, plug it into USB #1 or USB #2 port (see page 2).

The USB connection icon will be displayed, however you must first install the device.

First, touch the status bar and swipe down to open the dialog box.

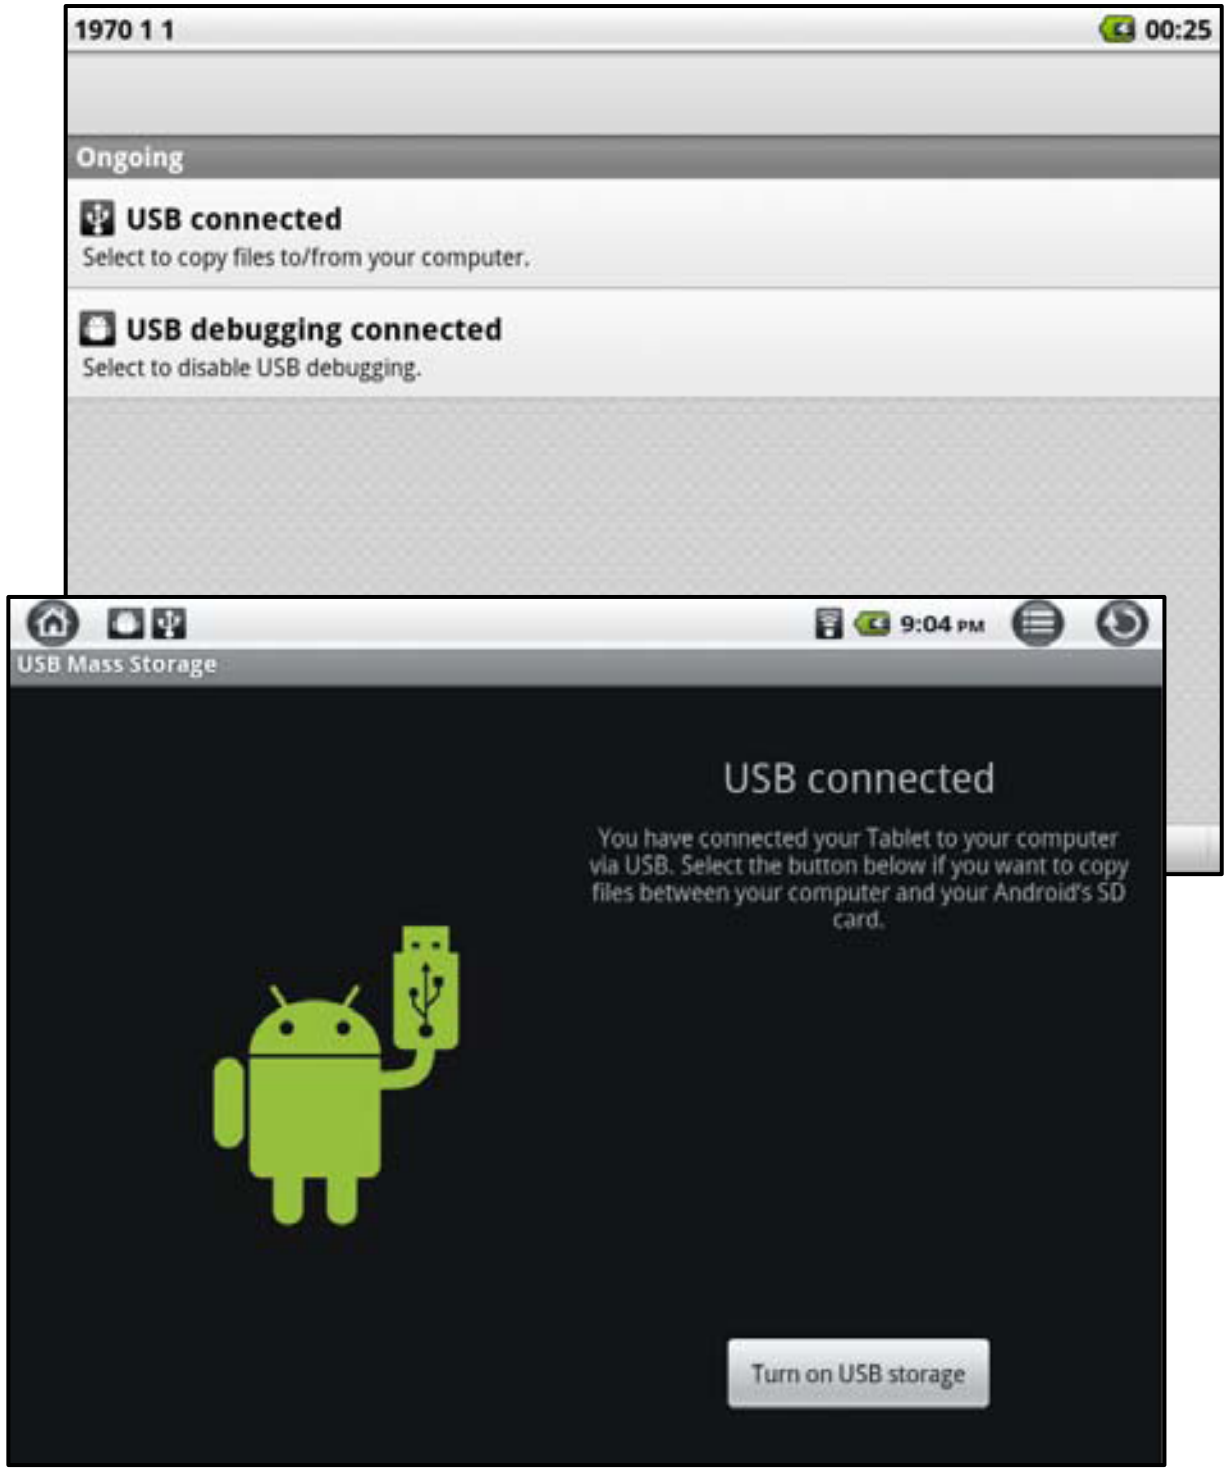
1970 1 1
00:25
Ongoing
9:04 PM
USB Mass Storage
Turn on USB storage

USB connected

Select to copy files to/from your computer.

USB debugging connected

Select to disable USB debugging.

USB connected

You have connected your Tablet to your computer via USB. Select the button below if you want to copy files between your computer and your Android's SD card.

The dialog at left will open.
Select “USB Connected”
Click on the button: “Turn on USB Storage”
The USB device should now be enabled.

Before removing USB device, click on “Turn off USB Storage” to eject the device.

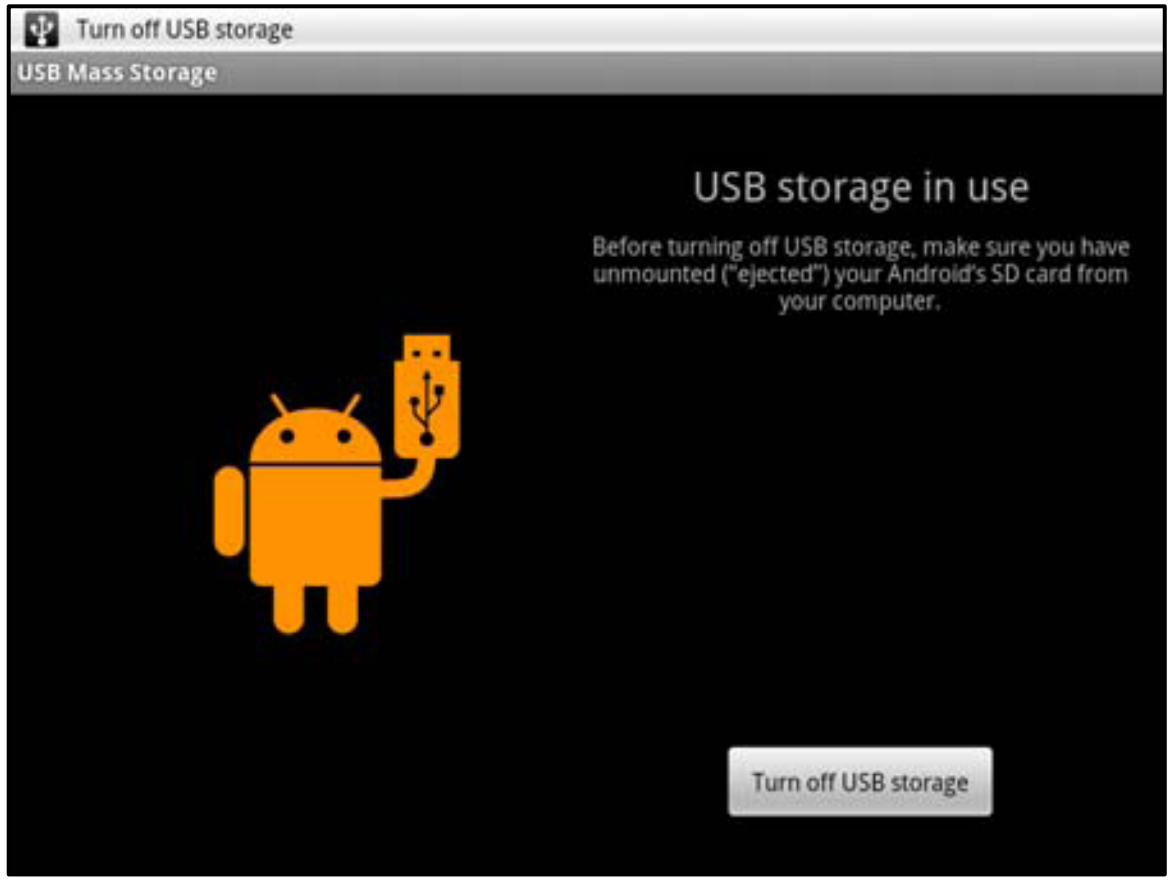
Turn off USB storage
USB Mass Storage
Turn off USB storage

USB storage in use

Before turning off USB storage, make sure you have unmounted (“ejected”) your Android's SD card from your computer.

Wi-Fi Settings

Touch: “Menu Key” > “Wireless & Networks” > “Wi-Fi Settings”

1. Click Wi-Fi (turn on Wi-Fi). Tablet will start searching for available networks.
2. Choose available network, input password and click “Connect”.

For advanced settings, touch menu icon at right of status bar and choose “Advanced”

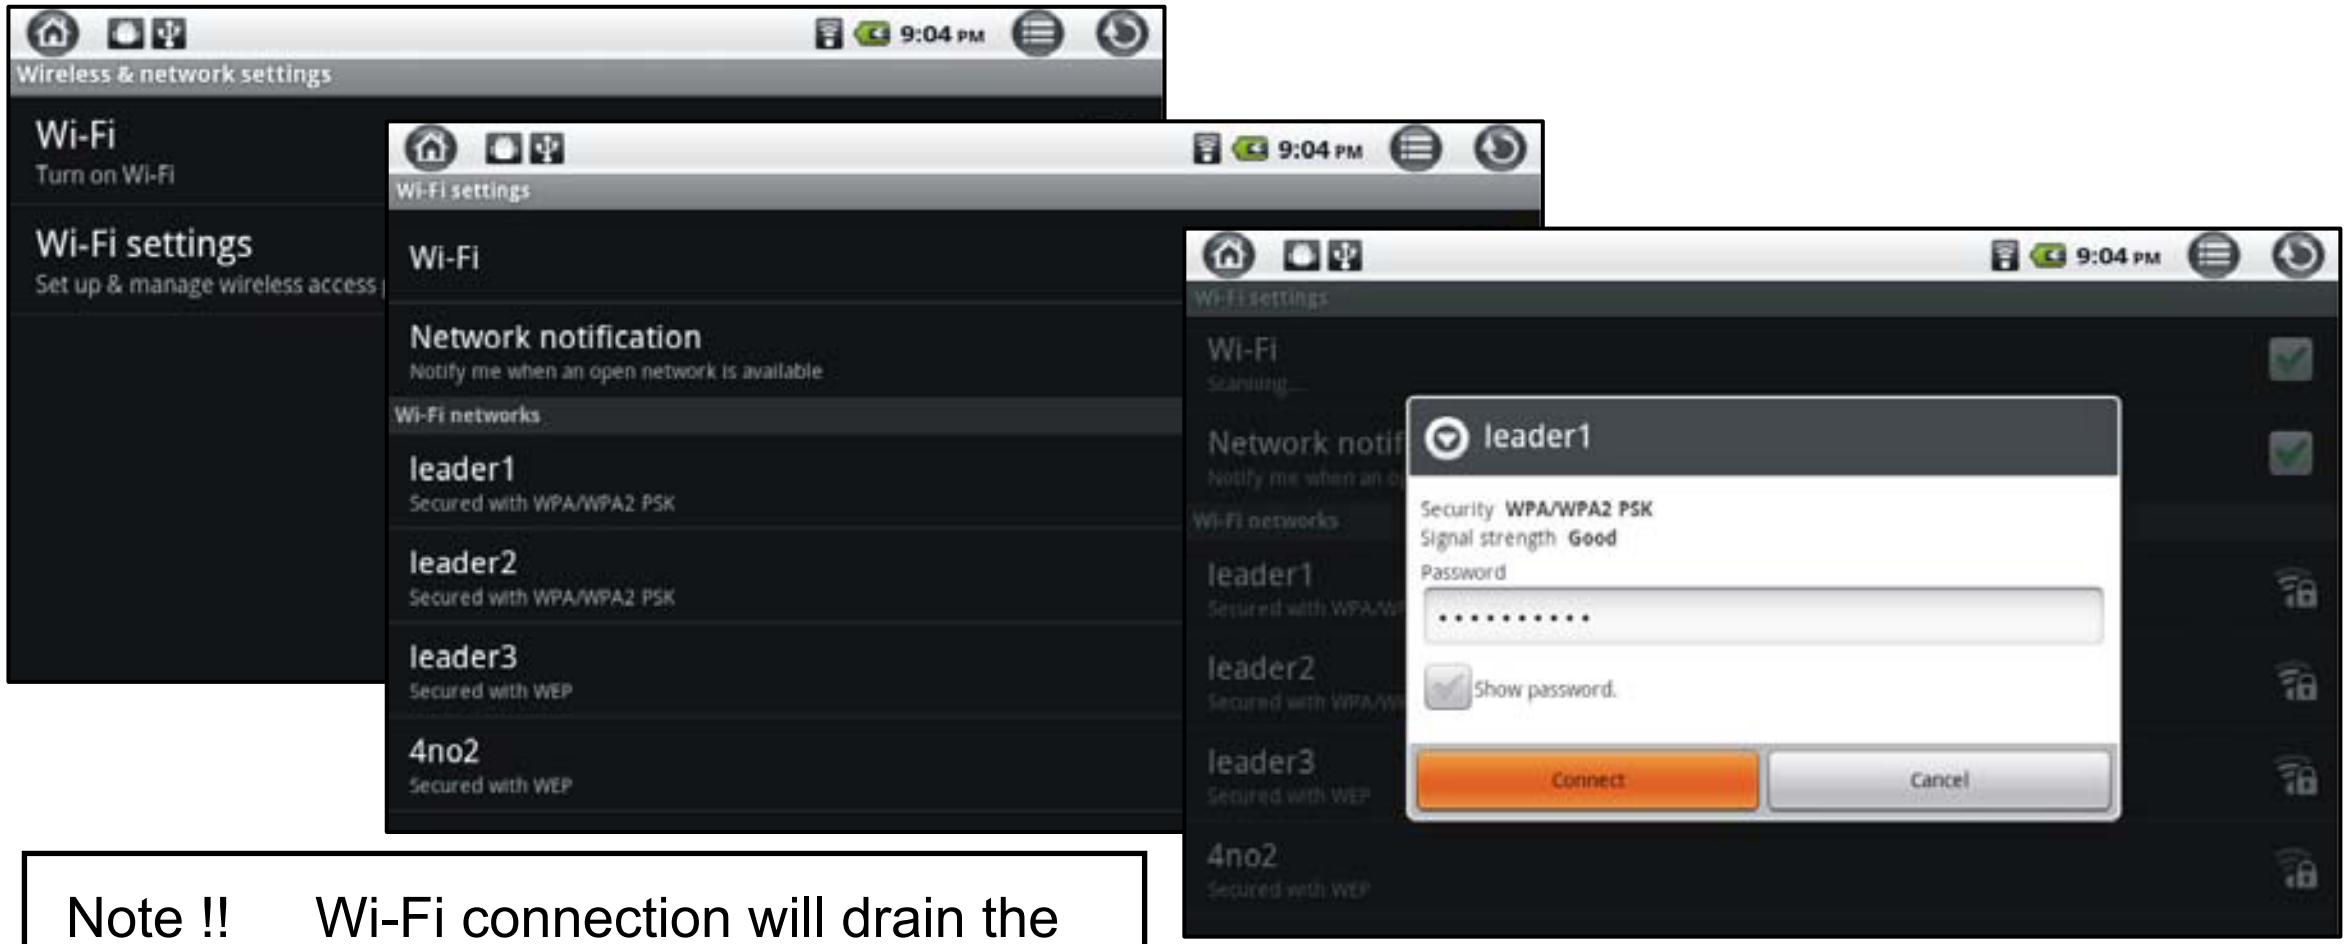

9:04 PM

Wireless & network settings

Wi-Fi
Turn on Wi-Fi

Wi-Fi settings
Set up & manage wireless access

9:04 PM

Wi-Fi settings

Wi-Fi

Network notification
Notify me when an open network is available

Wi-Fi networks

leader1
Secured with WPA/WPA2 PSK

leader2
Secured with WPA/WPA2 PSK

leader3
Secured with WEP

4no2
Secured with WEP

9:04 PM

Wi-Fi settings

Wi-Fi
Scanning...

Network notif
Notify me when an o

Wi-Fi networks

leader1
Secured with WPA/W

leader2
Secured with WPA/W

leader3
Secured with WEP

4no2
Secured with WEP

leader1

Security WPA/WPA2 PSK
Signal strength Good
Password
•••••••••••

☑ Show password.

Connect | Cancel

Note !! Wi-Fi connection will drain the battery quickly. Turn off when not in use.

Camera/ Camcorder

In the application list, click the “Camera” icon:

Note: Make sure you have an SD Card installed to use the Camera/Camcorder

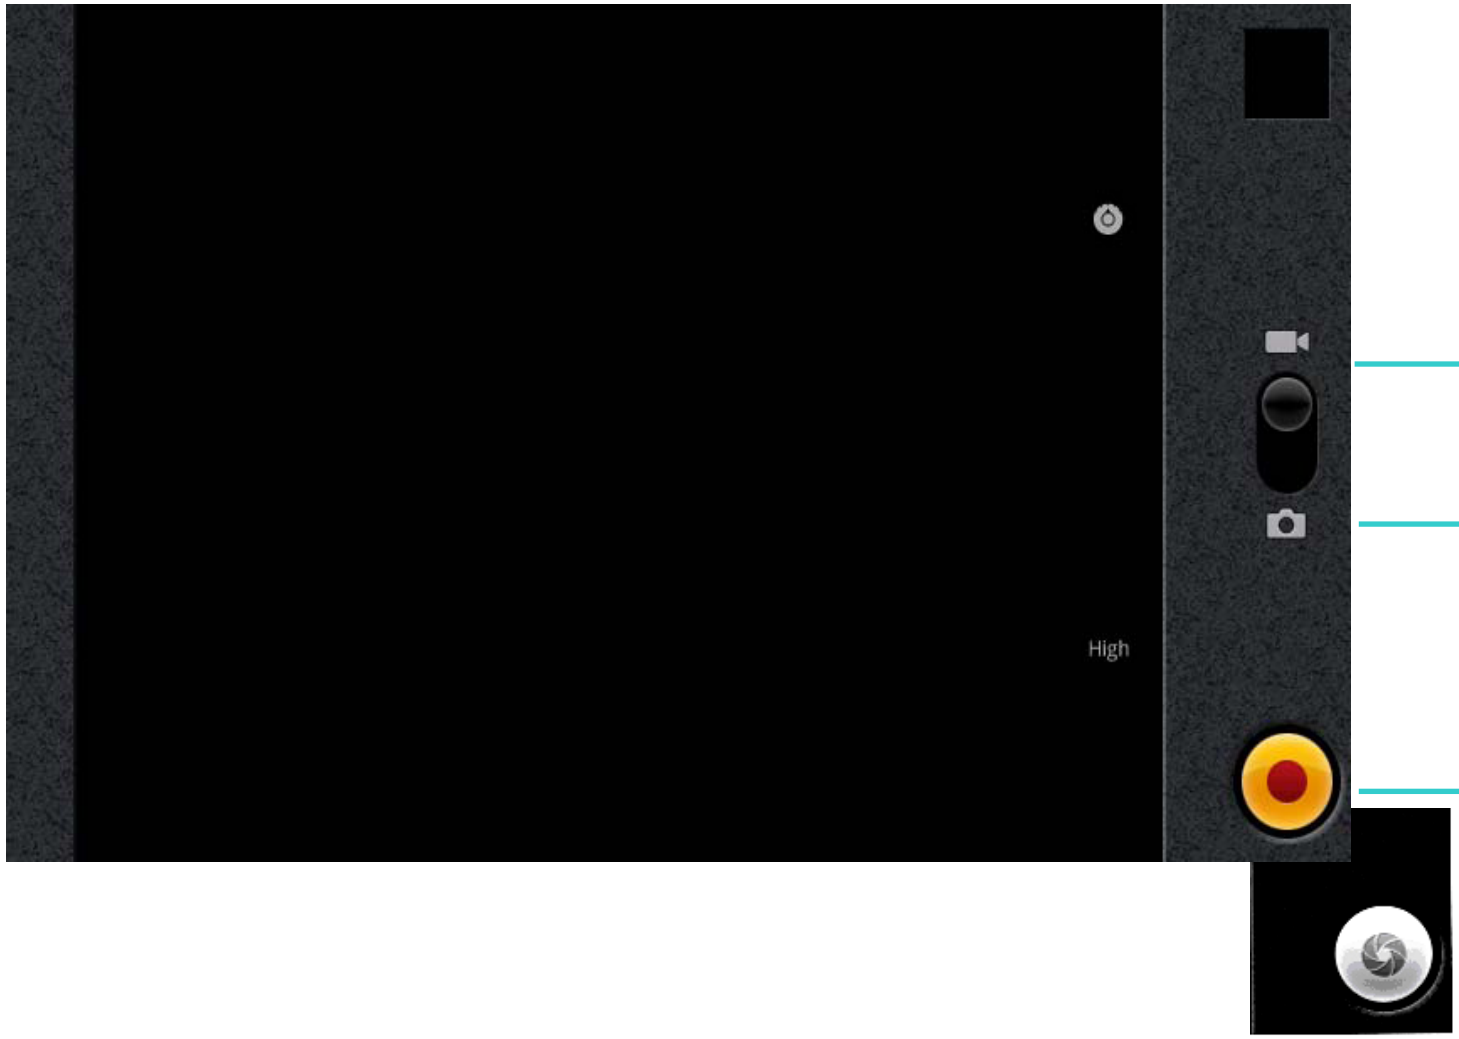

Camcorder Mode

Camera Mode

Start/Stop Video

Take Picture

Browsing

Before using the internet browser, please make sure Wi-Fi service is turned on.
Click the “Browser” icon to open the browser.
Click on the menu icon at the right side of the status bar for browser commands.

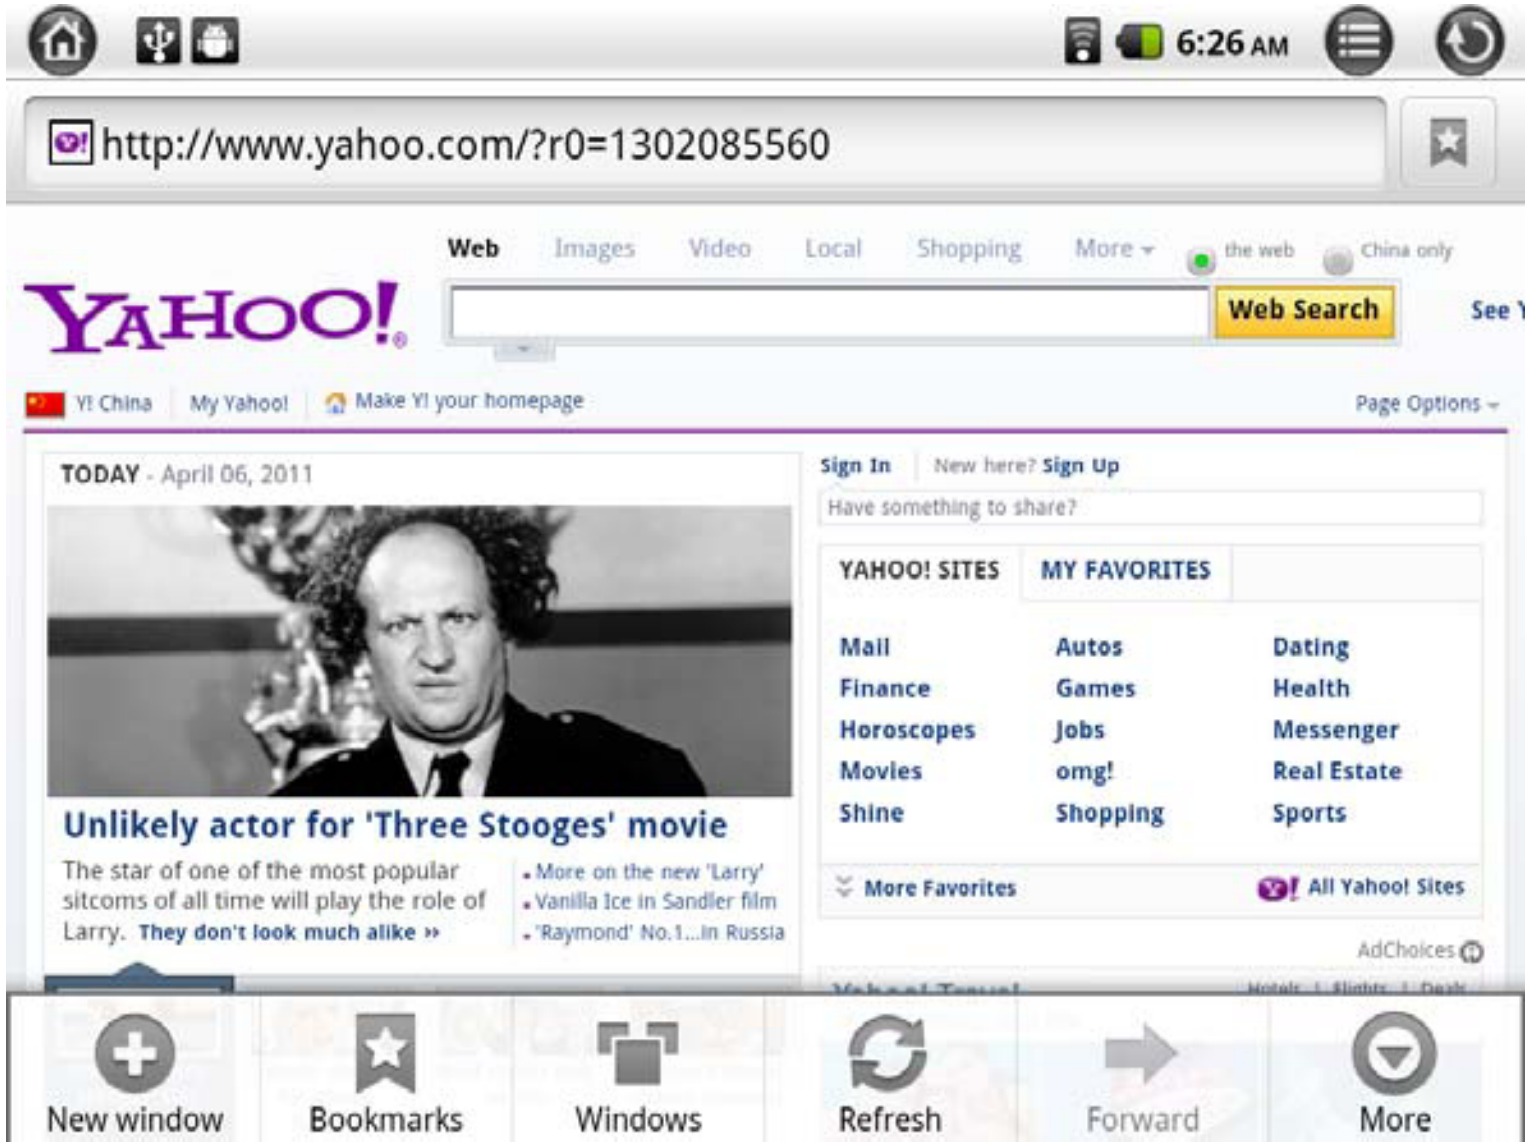
6:26 AM
http://www.yahoo.com/?r0=1302085560
Web
Images
Video
Local
Shopping
More
the web
China only
YAHOO!
Web Search
Y! China
My Yahoo!
Make Y! your homepage
Page Options
TODAY - April 06, 2011
Unlikely actor for 'Three Stooges' movie
Sign In
New here? Sign Up
Have something to share?
YAHOO! SITES
MY FAVORITES
Mail
Autos
Dating
Finance
Games
Health
Horoscopes
Jobs
Messenger
Movies
omg!
Real Estate
Shine
Shopping
Sports
More Favorites
All Yahoo! Sites
AdChoices
New window
Bookmarks
Windows
Refresh
Forward
More

Application Installer

In the application list screen, click the “APK Installer” icon:

1 Choose application location (or choose Uninstall)

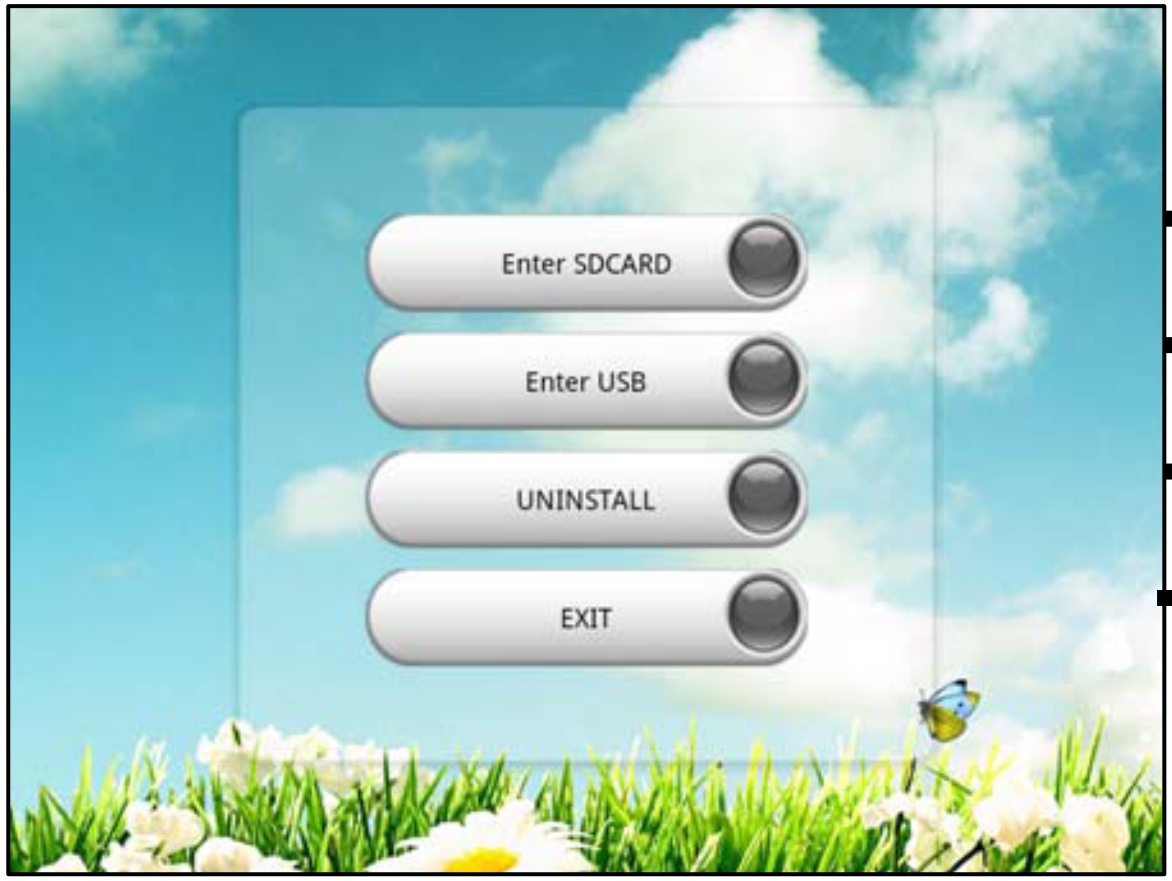
Enter SDCARD
Enter USB
UNINSTALL
EXIT

Enter Into Micro SDcard Direct

Enter Into USB Host Direct

Click To Uninstall App

Exit Software

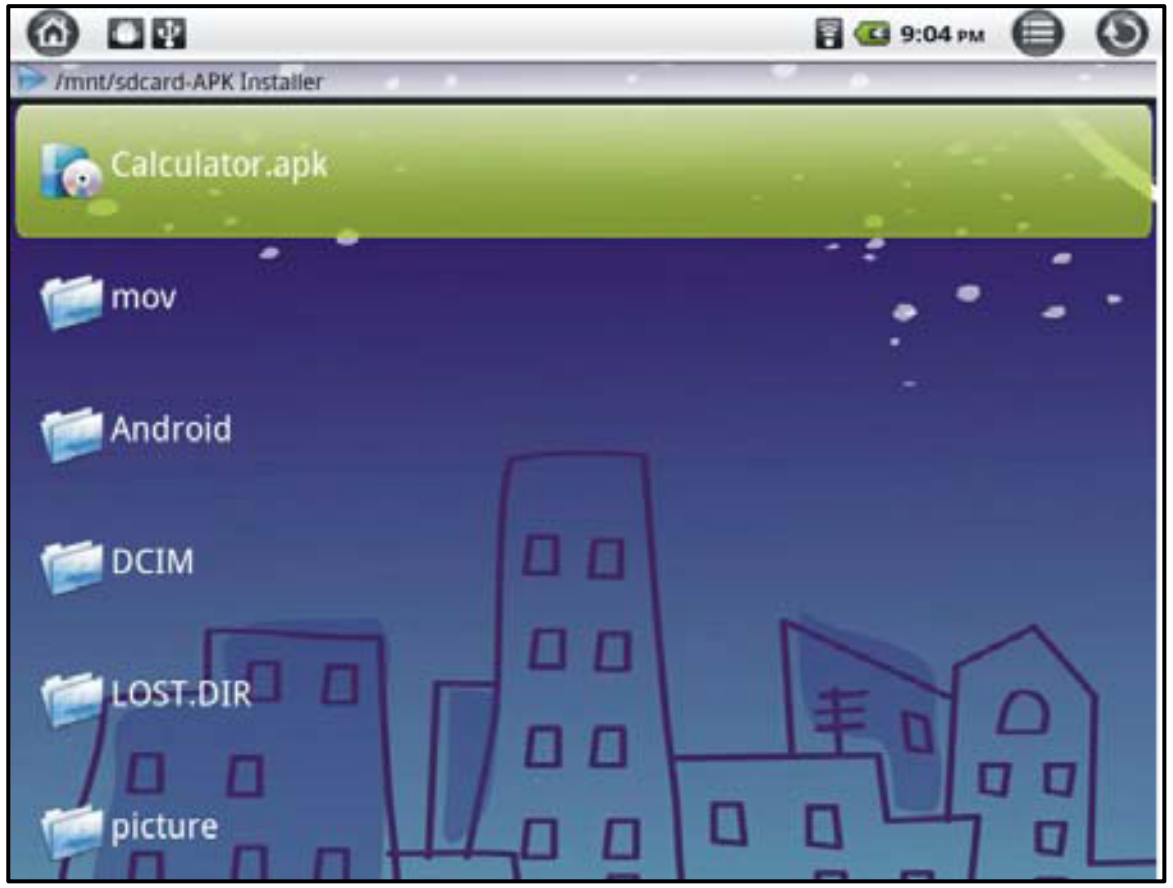
9:04 PM
/mnt/sdcard-APK Installer
Calculator.apk
mov
Android
DCIM
LOST.DIR
picture

2 Select application.

3 Click Install or cancel.

File Manager

In the application list screen, click the “Task Manager: icon:

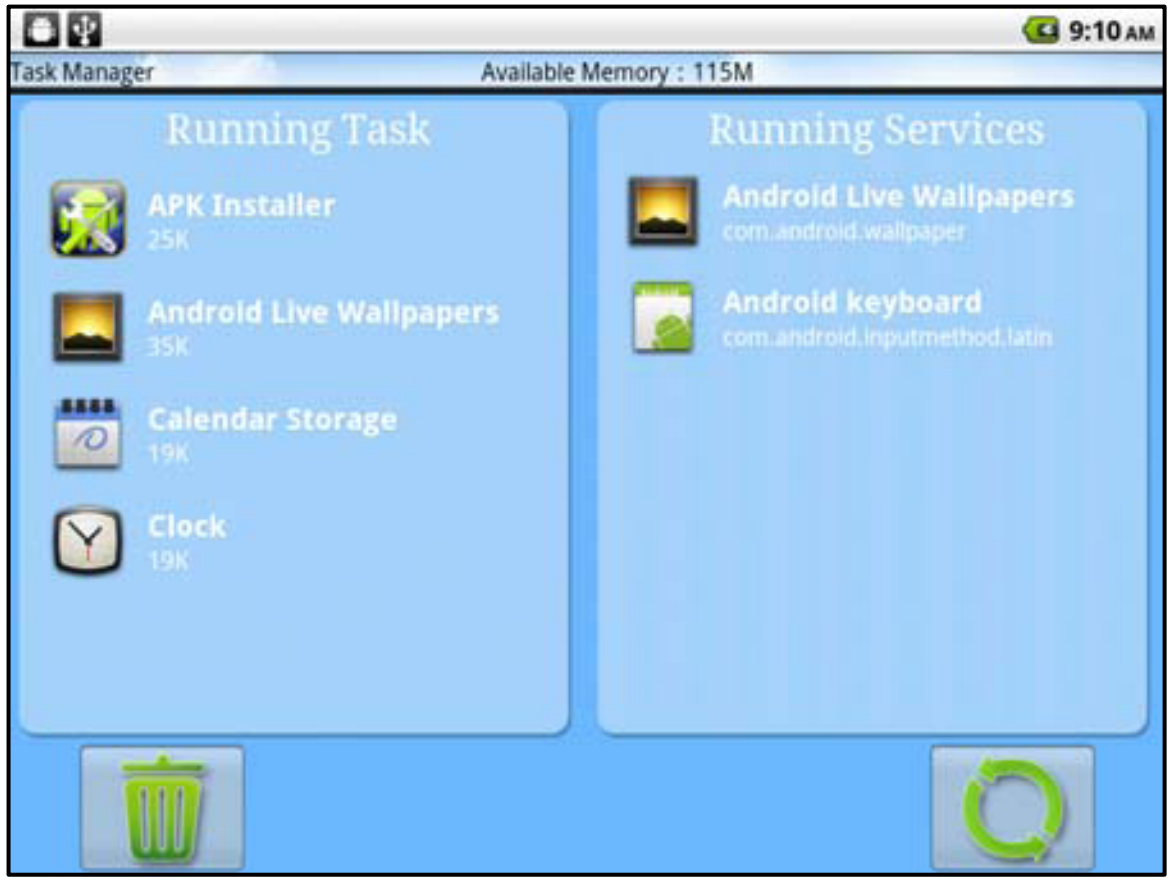
9:10 AM
Task Manager
Available Memory : 115M
Running Task
APK Installer
25K
Android Live Wallpapers
35K
Calendar Storage
19K
Clock
19K
Running Services
Android Live Wallpapers
com.android.wallpaper
Android keyboard
com.android.inputmethod.latin

The Task Manager shows all the running applications and how much memory they are using.

Click on an application to end it (kill it)or uninstall it.

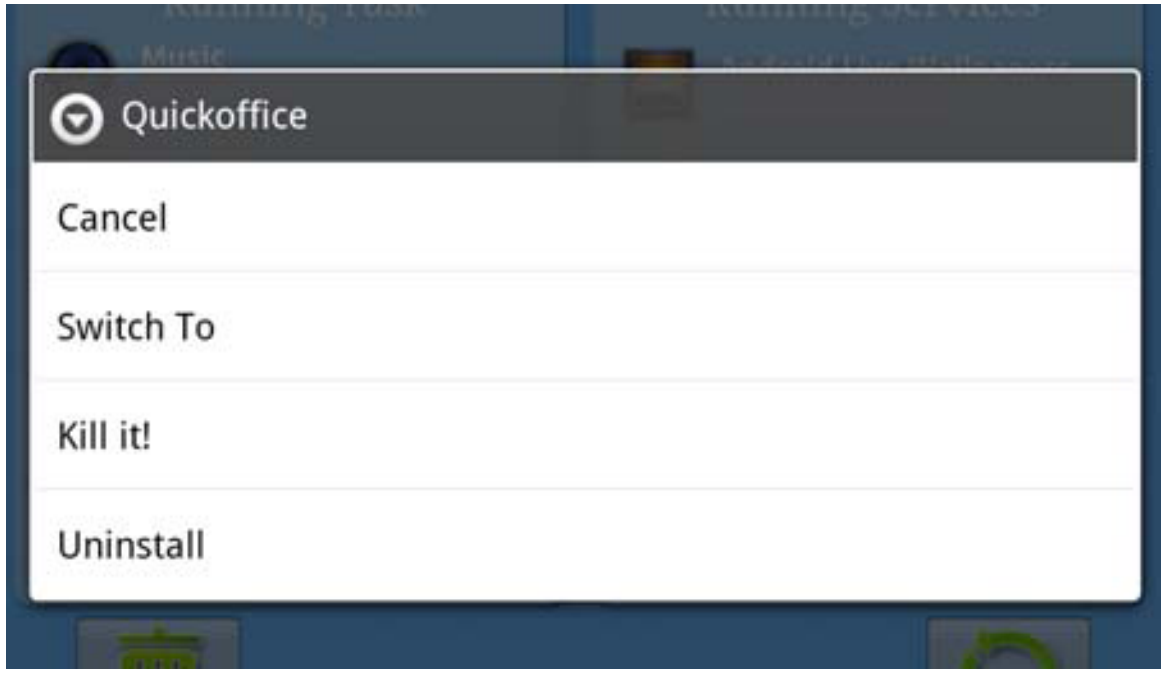
Quickoffice
Cancel
Switch To
Kill it!
Uninstall

Warning: Use this screen with caution to avoid accidentally removing applications.

File Manager

In the application list screen, click the “File Manager” icon: File Manager

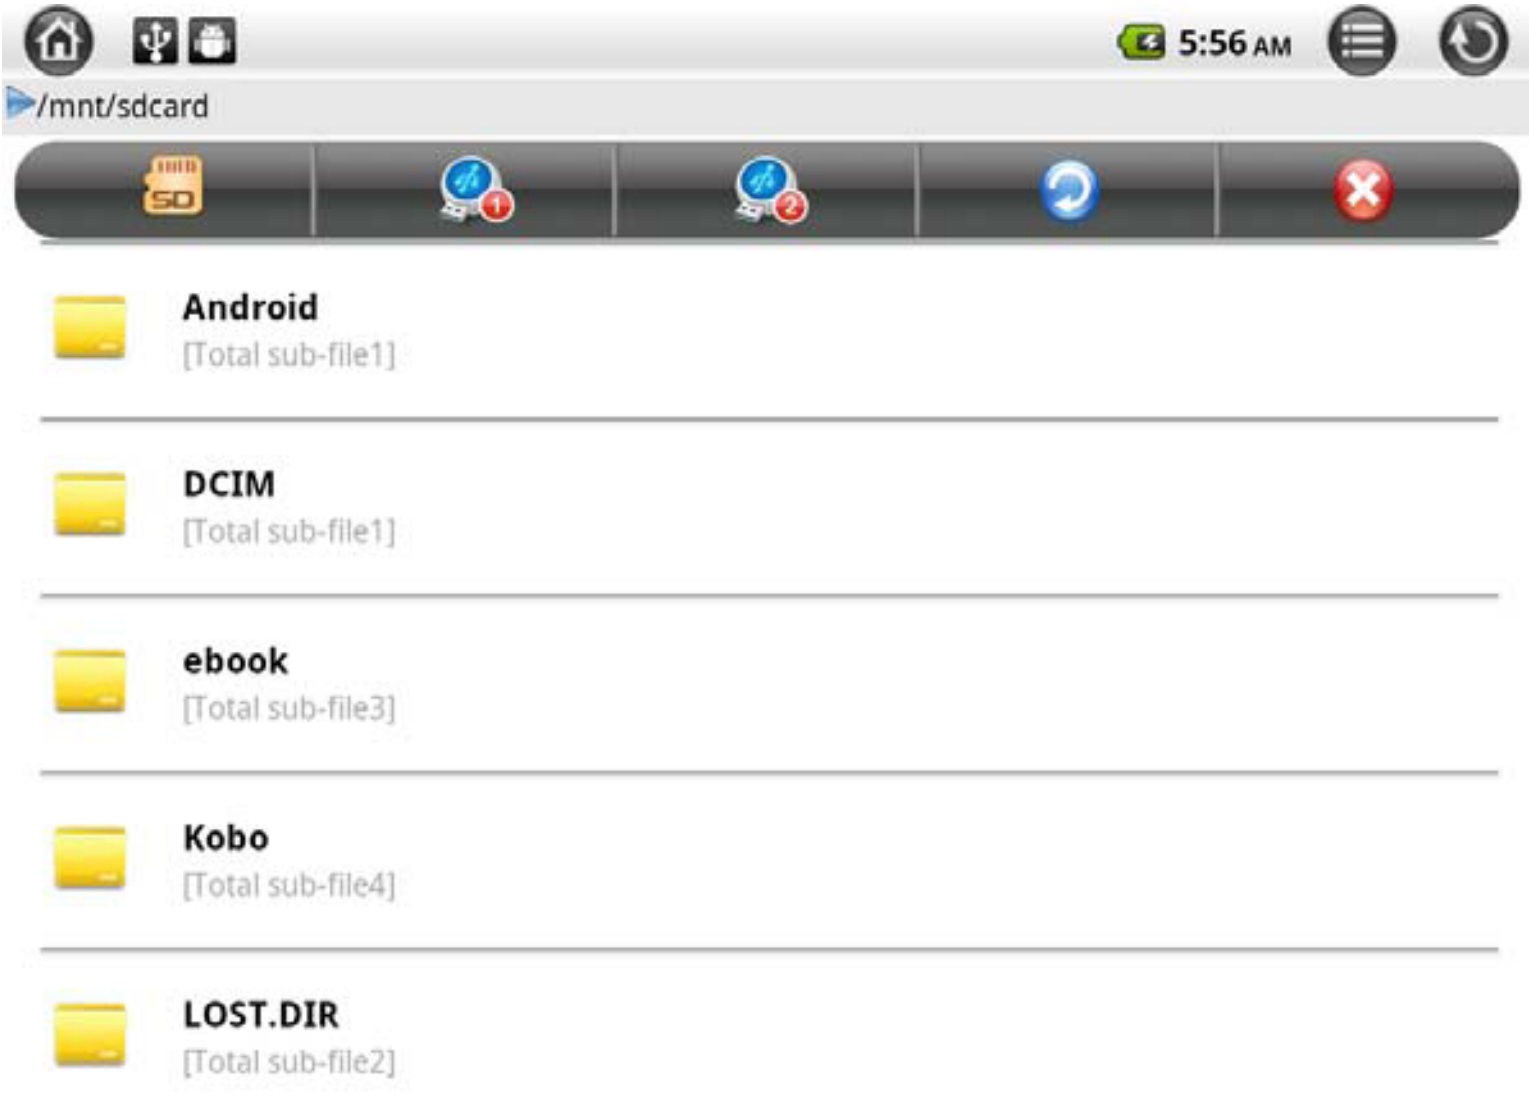

Android
[Total sub-file1]

DCIM
[Total sub-file1]

ebook
[Total sub-file3]

Kobo
[Total sub-file4]

LOST.DIR
[Total sub-file2]

Use the file manager to organize files.

The icons across the top are for navigating to files on the SD card, USB 1 & 2 and to move up and down within the folders.

Click on the menu button on the right side of the status bar to show the bottom menu. Use this to add a new folder or file.

The Kobo App in I10

Kobo offers FREE eReading applications for the I10. This means that you can browse, search, buy and read your favorite eBooks and download them directly to your device at anytime.

Opening Kobo and the Accounts screen

You use the Kobo application to read eBooks, please ensure that you’ve connected Wi-Fi network before you open it.

Open Kobo

Touch the Kobo icon kobo on the home screen or launcher.

The first time you open the Kobo, it will show you the new version details on the screen.

Press “OK” or back icon ↺ to close it.

Sign in or Create a new account

When you open the Kobo on your device at the first time, your library will be empty. You need sign in your account(If you have before) or Create a new account on Kobo to view your library, and also you can visit their store to find hundreds of free titles to get you started.

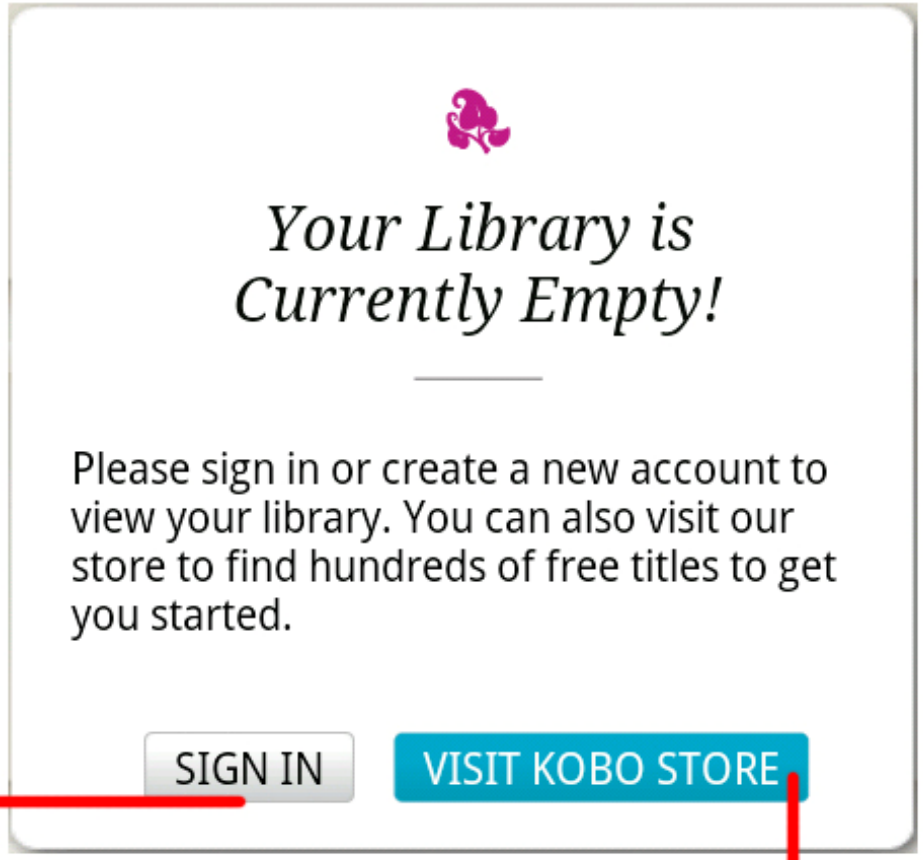

Your Library is Currently Empty!

Please sign in or create a new account to view your library. You can also visit our store to find hundreds of free titles to get you started.

Press here to find free titles to get your started

Press here to sign in or create a new account to view your library

After you sign in, then you can search the books you need, and also you can buy it.

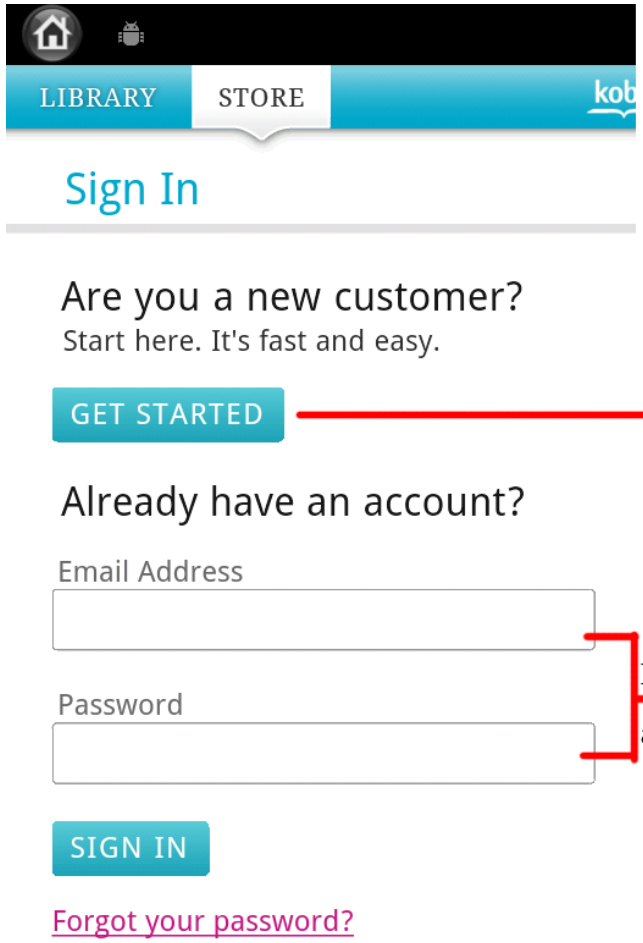
LIBRARY
STORE
kob

Sign In

Are you a new customer?

Start here. It's fast and easy.

GET STARTED

Already have an account?

Email Address

Password

SIGN IN
Forgot your password?

Press here to create a new account

If you have an account already, please type your account and password here

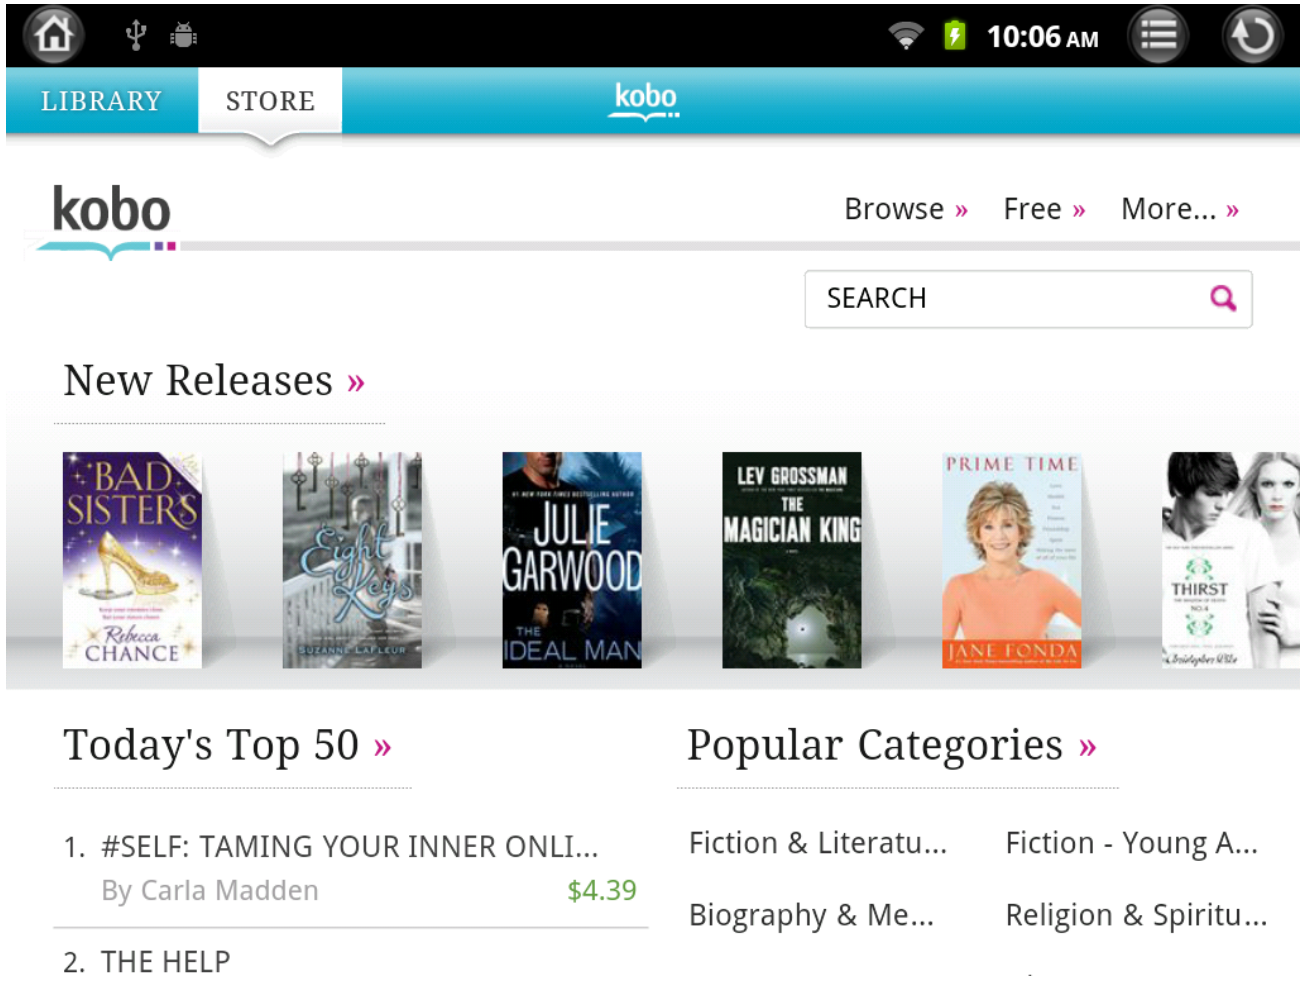
10:06 AM
LIBRARY
STORE
kobo
kobo
Browse »
Free »
More... »
SEARCH

New Releases »

BAD SISTERS
Rebecca CHANCE
Eight Keys
SUZANNE LAFLEUR
JULIE GARWOOD
THE IDEAL MAN
LEV GROSSMAN
THE MAGICIAN KING
PRIME TIME
JANE FONDA
THIRST

Today's Top 50 »

1. #SELF: TAMING YOUR INNER ONLI...
By Carla Madden $4.39

2. THE HELP

Popular Categories »

Fiction & Literatu...
Fiction - Young A...
Biography & Me...
Religion & Spiritu...

SAM （SlideMe）

SAM（SlideMe） provides direct access to applications and games to download and install on your tablet.

Opening SAM and finding applications

Open SAM to browse and search for free and paid applications.

Open SAM

Touch the Market icon in the Launcher or on the Home screen.

When you open SAM for the first time, you must read and accept the terms of service to continue, as the following picture:



SlideME Application End User Agreement

PLEASE READ THE FOLLOWING TERMS AND CONDITIONS CAREFULLY BEFORE DOWNLOADING OR USING the SlideME APPLICATION Management software (sam) and/or applications made available by SlideME (Applications) through the SlideME application marketplace (the Marketplace). THIS AGREEMENT GOVERNS YOUR USE OF the sam and any application made available to you through the marketplace.

SlideME is willing to license the sam and applications to you only upon the condition that you accept all the terms contained in this Agreement. By downloading, displaying or USING the SAM and/or applications, you indicate that you have read and understand this Agreement and accept all of its terms without limitation. If you do not accept all the terms of this Agreement you will not be AUTHORIZED to download, display OR USe the SAM and/or applications.

License and Purchase.

(a)Grant. Subject to the terms of this Agreement, SlideME grants you a non-exclusive and non-transferable license to download and use the SAM, for purposes of (i) accessing and displaying SlideMEs marketplace and catalog of Applications and (ii) downloading and managing Applications purchased through SlideMEs marketplace. SlideME and its licensors reserve all rights in the SAM not

After you accept it, you will see the following picture:



SlideME Marketplace

Chapayev

Kynitex

Fun & Games (2696)

E-books (1515)

Entertainment (1201)

Utilities (887)

Educational / Reference (835)

Then you can choose the type of application and touch it to open.
And you will see the following picture:



10:23 AM

SlideME - Entertainment

Magic 8 Ball
★★★★★ v1.5.12
MDBSoftwares 15 Mar 11 FREE

dailystats.anthonykim
☆☆☆☆☆ v1
infinitemonkeys 26 Apr 11 FREE

Flowers postcards
★★★★★ v1.0
roces 20 May 10 FREE

Movie Finder
★★★★☆ v1.6.3
ikamobile 24 Aug 09 FREE

TechnoRadio
★★★★★ v1.0
flyingflicks 05 Aug 11 FREE

Draw and Share new
★★★★★ v2.5

Touch anyone you want to download and then press “Download” to download the application you chose to your Micro SD card.

When the downloading finished, the device will remind you install the application or not automatically.

Press “Install”

Then the application you download from SAM has already installed in your tablet.

Music Player

In the application list screen, click the “Music” icon:

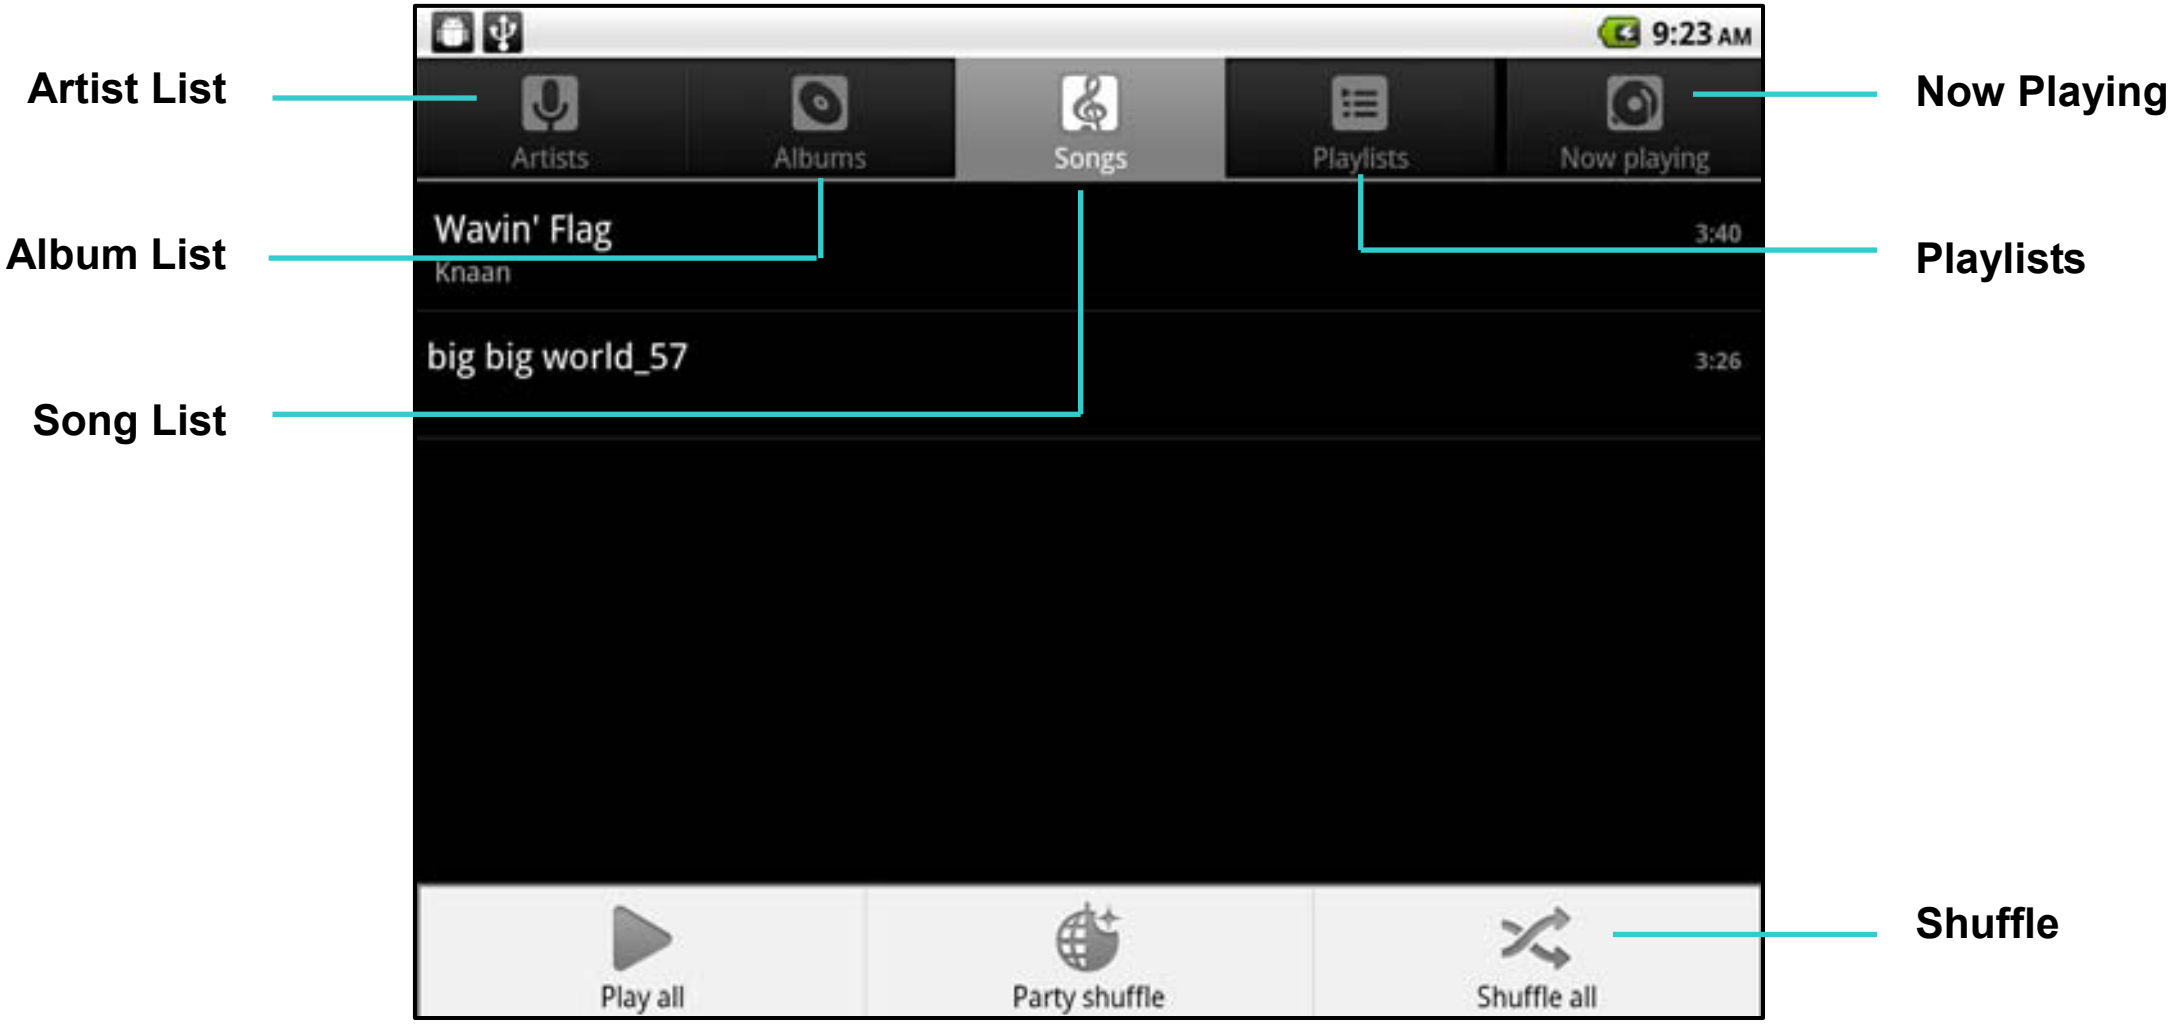
Artist List
Album List
Song List
Now Playing
Playlists
Shuffle
9:23 AM
Artists
Albums
Songs
Playlists
Now playing
Play all
Party shuffle
Shuffle all

Wavin' Flag 3:40
Knaan

big big world_57 3:26

Song Screen

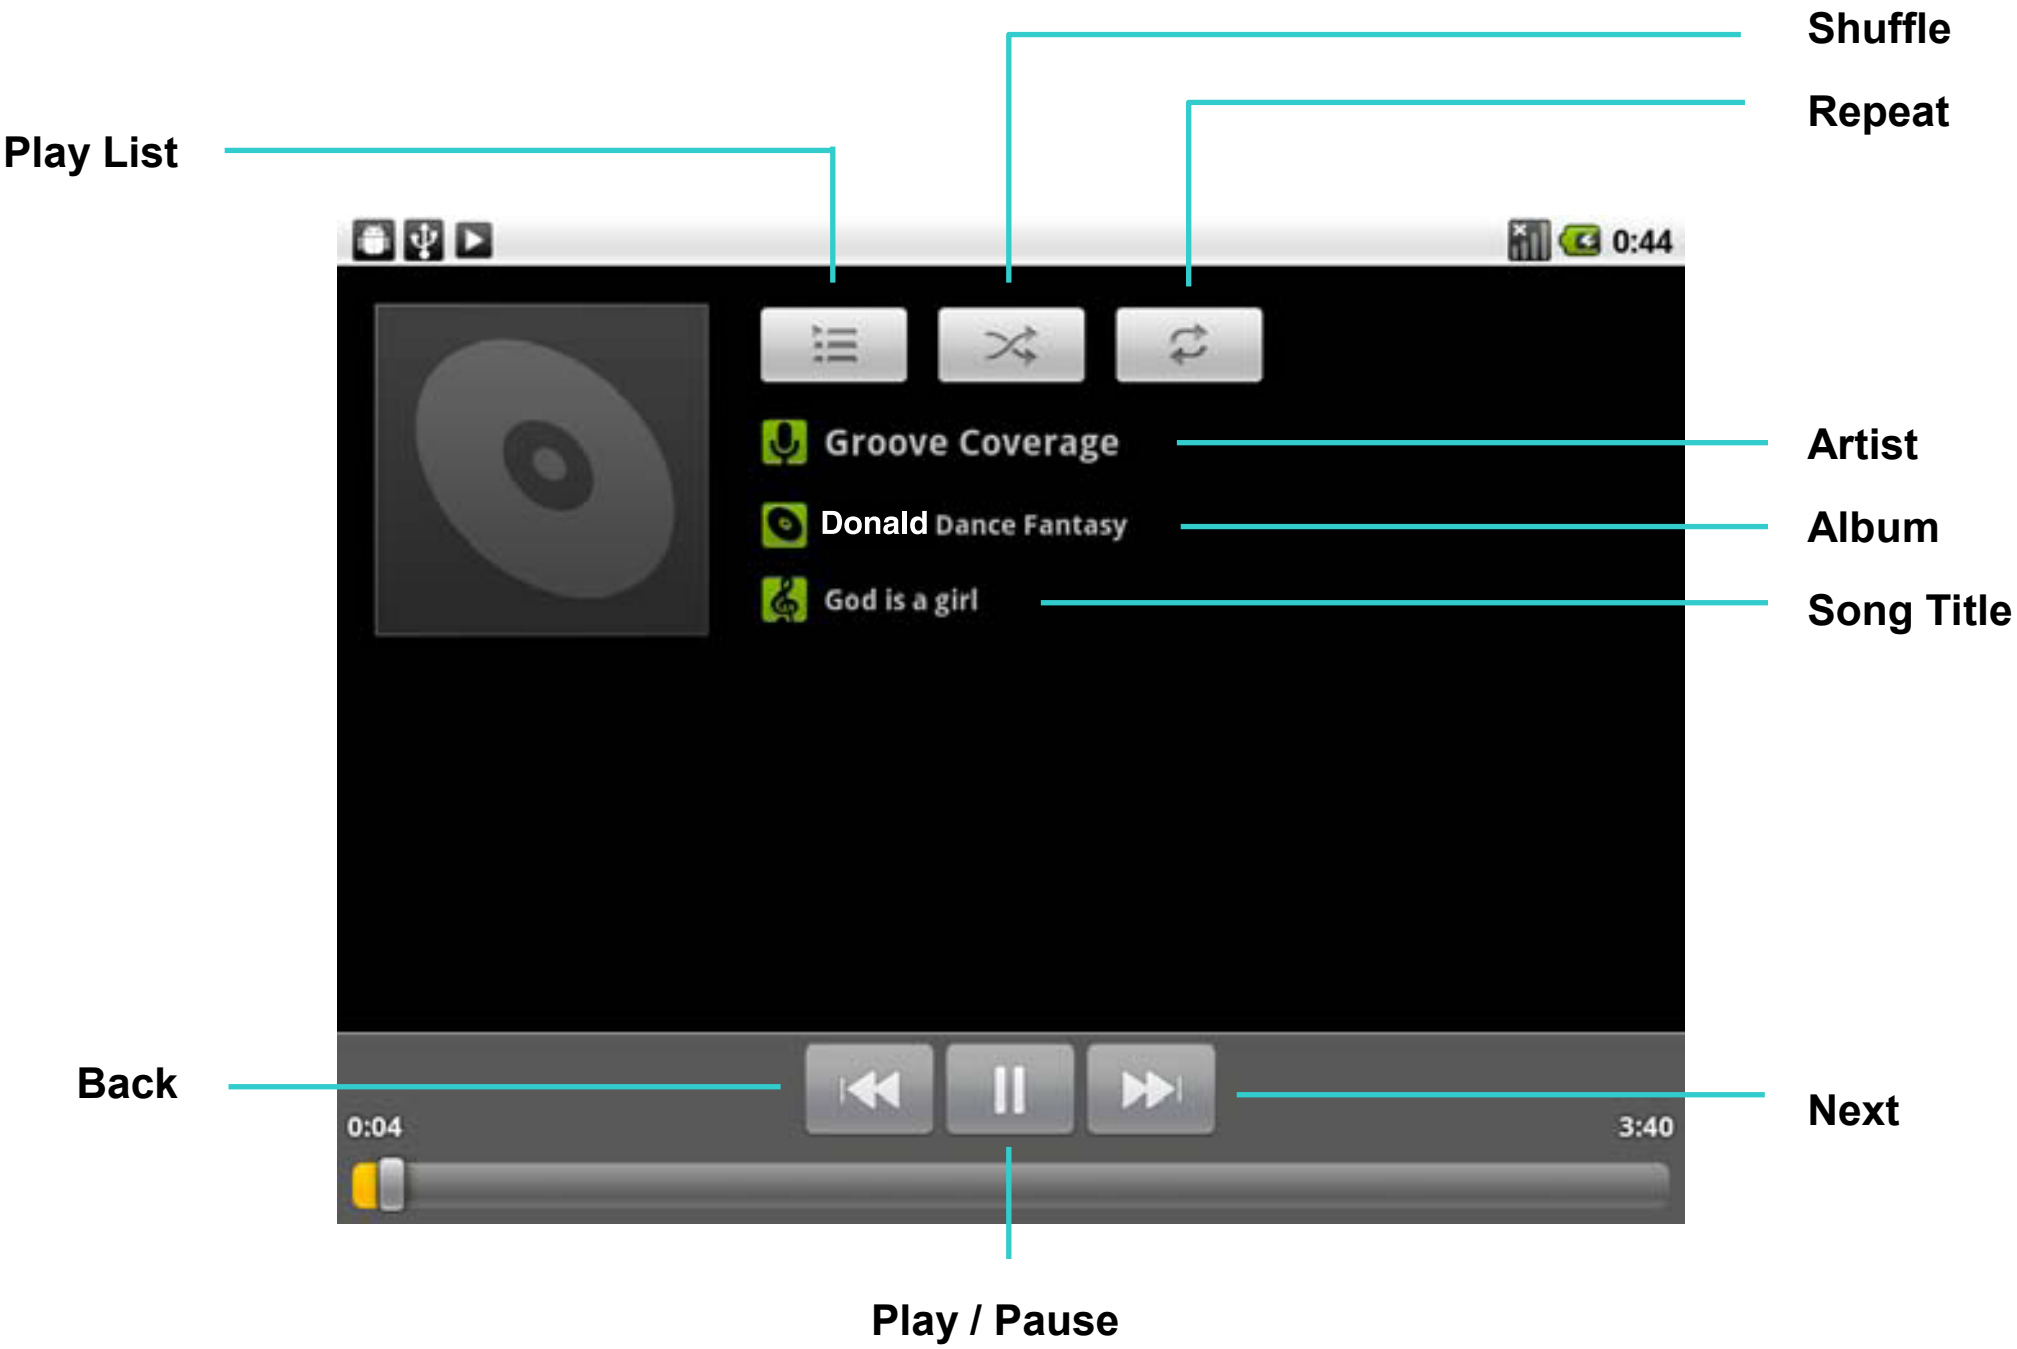
Shuffle
Repeat
Play List
0:44
Artist
Album
Song Title
Back
Next
Play / Pause
0:04
3:40

Groove Coverage

Donald Dance Fantasy

God is a girl

Video Player

In the application list screen, click the “Video Player” icon:

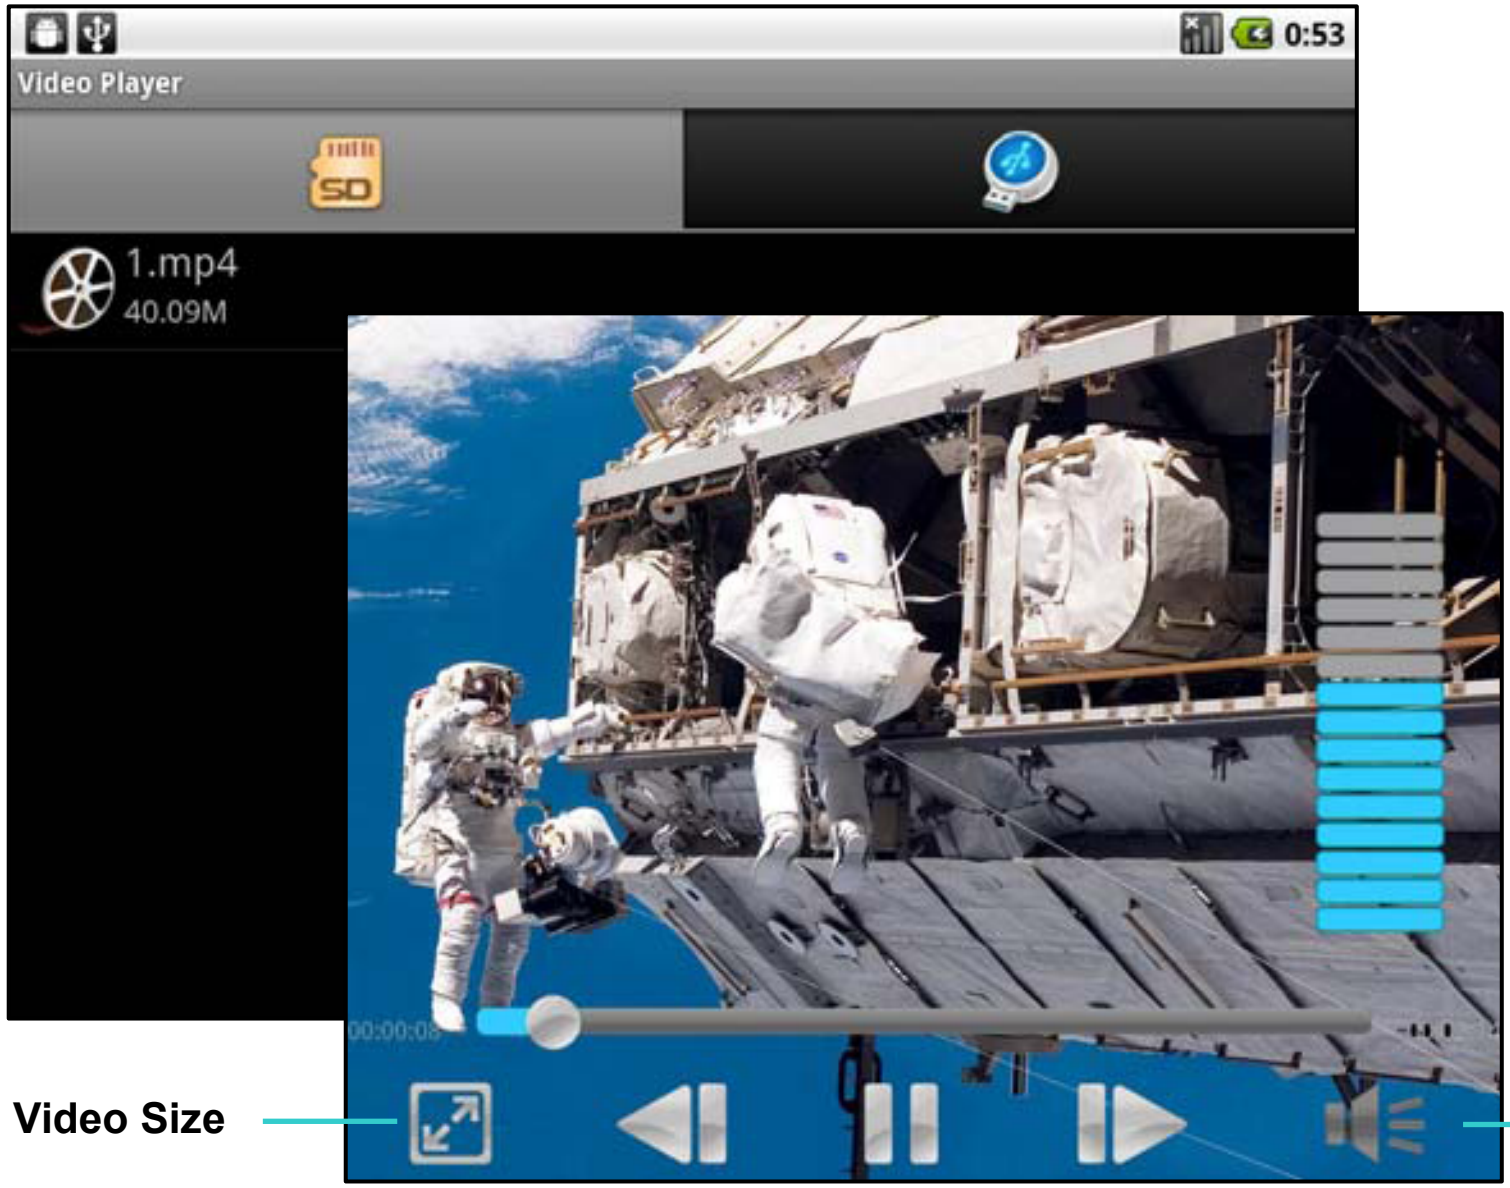

Video Size

Volume

1. **Select SD card source or USB**
2. **Select video from list**
3. **Video screen will appear and video will start.**

- **Click Video Size button to toggle between full screen and original size.**
- **Tap screen to hide controls.**
- **Press and hold screen to pause video.**

Picture Browser

In the Application List screen, click the “Gallery” icon:

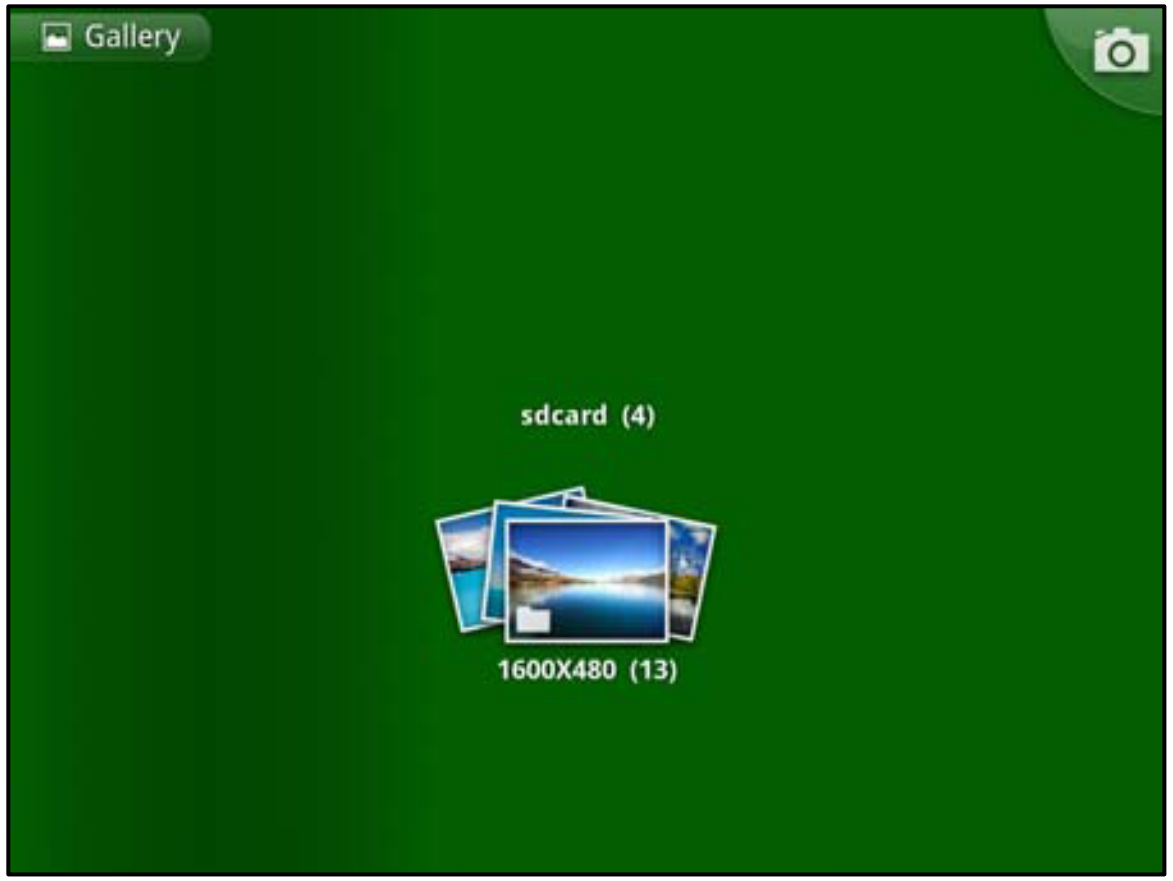
Gallery
sdcard (4)
1600X480 (13)

1. **SD card and USB sources will automatically be scanned for pictures and videos.**
2. **Touch the folder to open the picture browser.**

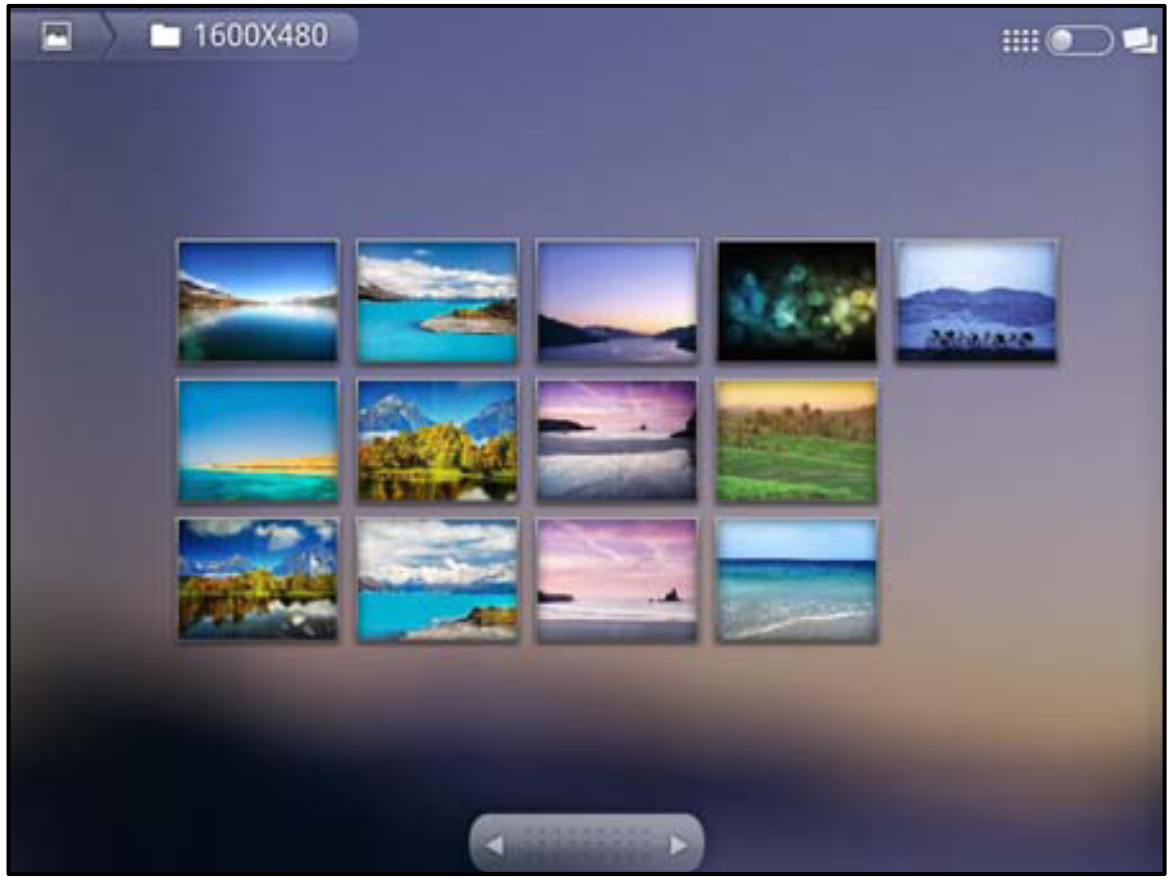

3. **Tap to select a picture or video.**

   Touch and “Swipe” to view all the photos / videos

Pictures

Touch screen and “Swipe” left or right to view the next or previous picture.
Touch screen with 2 fingers and spread apart to zoom (or use +/- buttons).

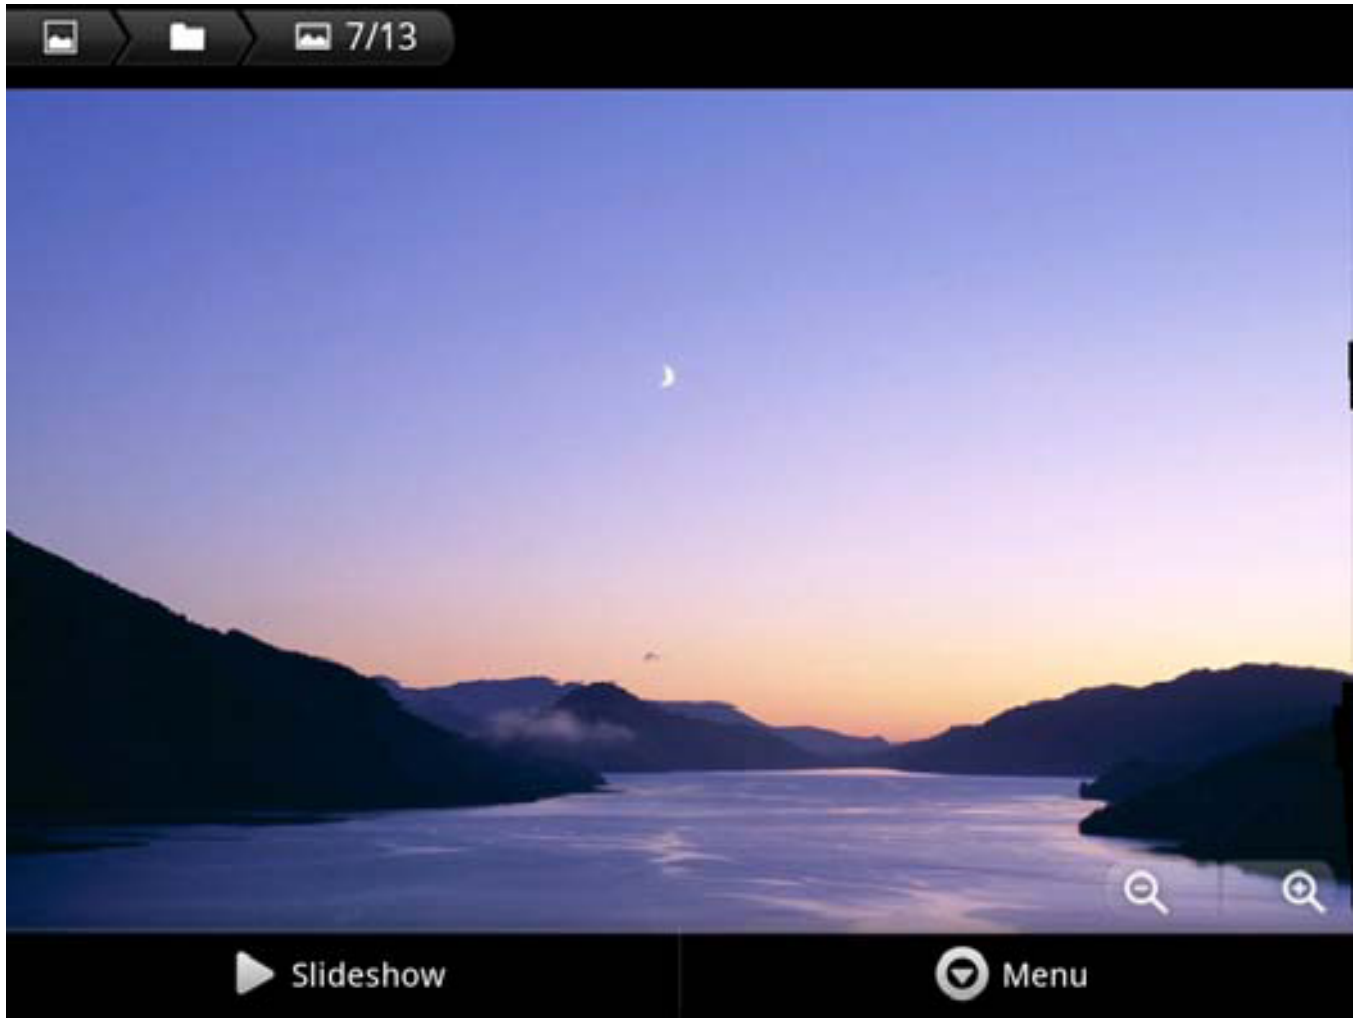

- Tap screen to show / hide menu
- Select “Slideshow”
- Tap “Menu” for more options
  - Delete
  - Share with Bluetooth device
  - More:
    - Photo details
    - Set as wallpaper
    - Crop
    - Rotate Left
    - Rotate Right

Email Setup

In the Application List screen, click the “EMAIL” icon:

1 Input email address and password.

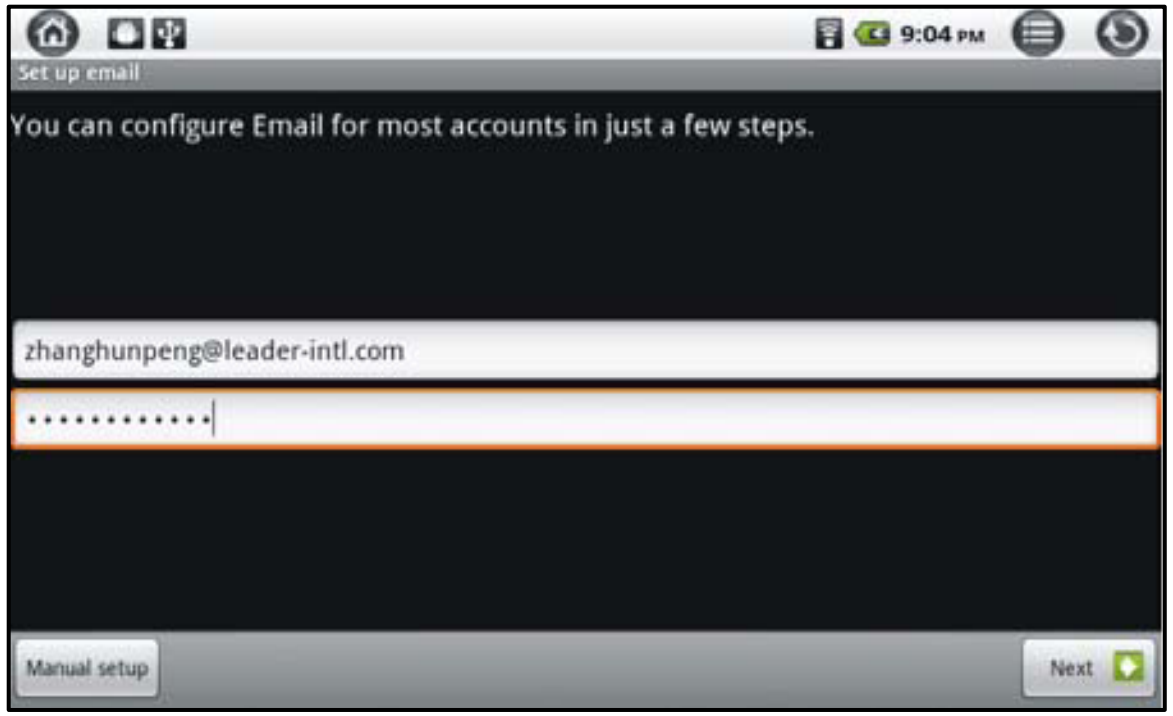

Set up email

You can configure Email for most accounts in just a few steps.

zhanghunpeng@leader-intl.com

••••••••••••

9:04 PM
Manual setup
Next

Click “Next”.

2 Select type of email account.

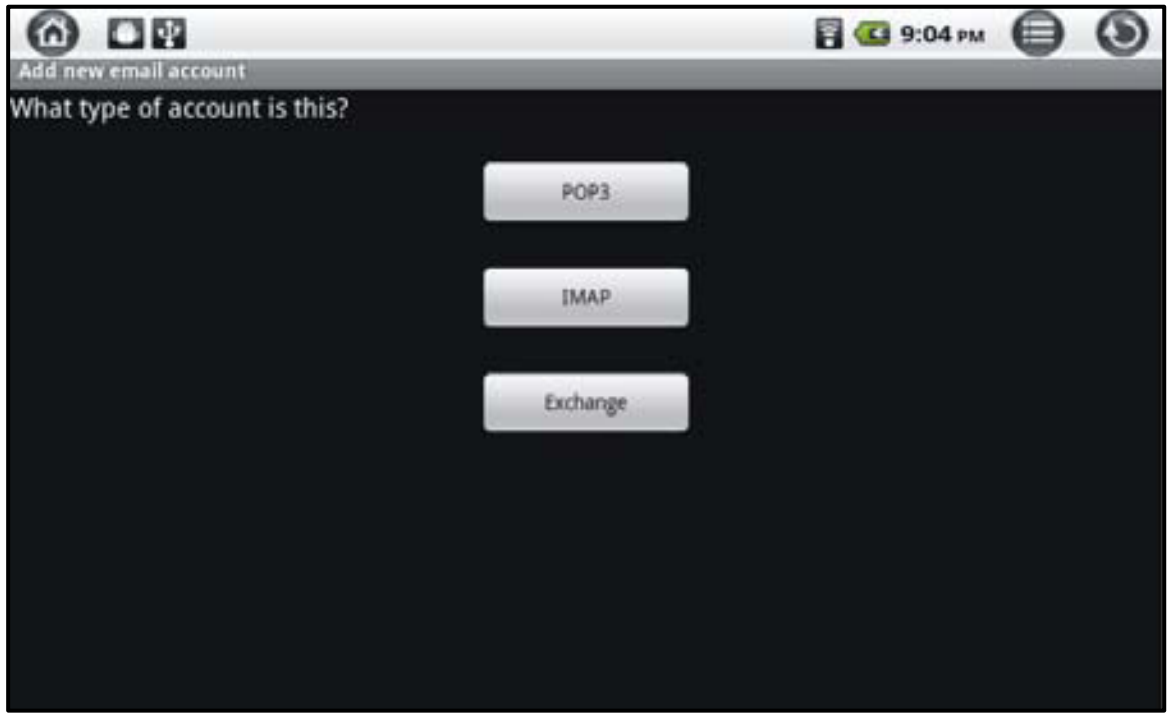

Add new email account

What type of account is this?

9:04 PM
POP3
IMAP
Exchange

Email Setup (continued)

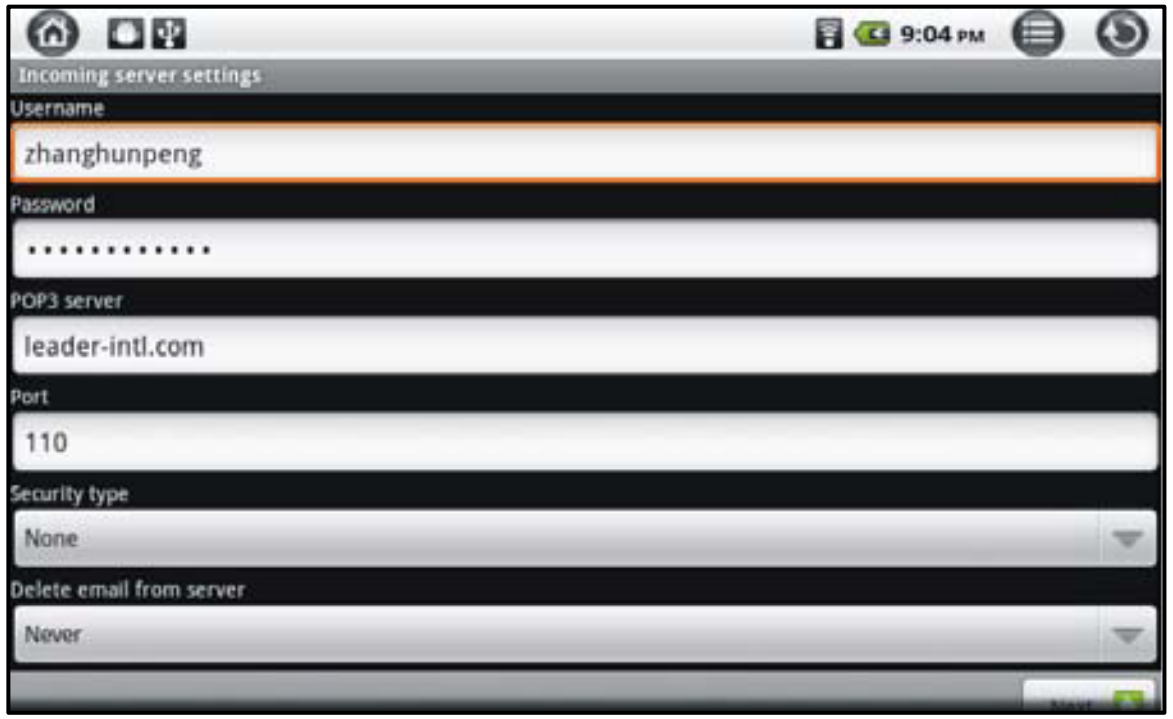

Incoming server settings

Username: zhanghunpeng

Password: •••••••••••••

POP3 server: leader-intl.com

Port: 110

Security type: None

Delete email from server: Never

3 Follow the prompts to set up your email account.

Note: The values in the fields on the left are for illustration only. Set all fields to the appropriate settings for your account.

Select “Next” to go to the next screen.

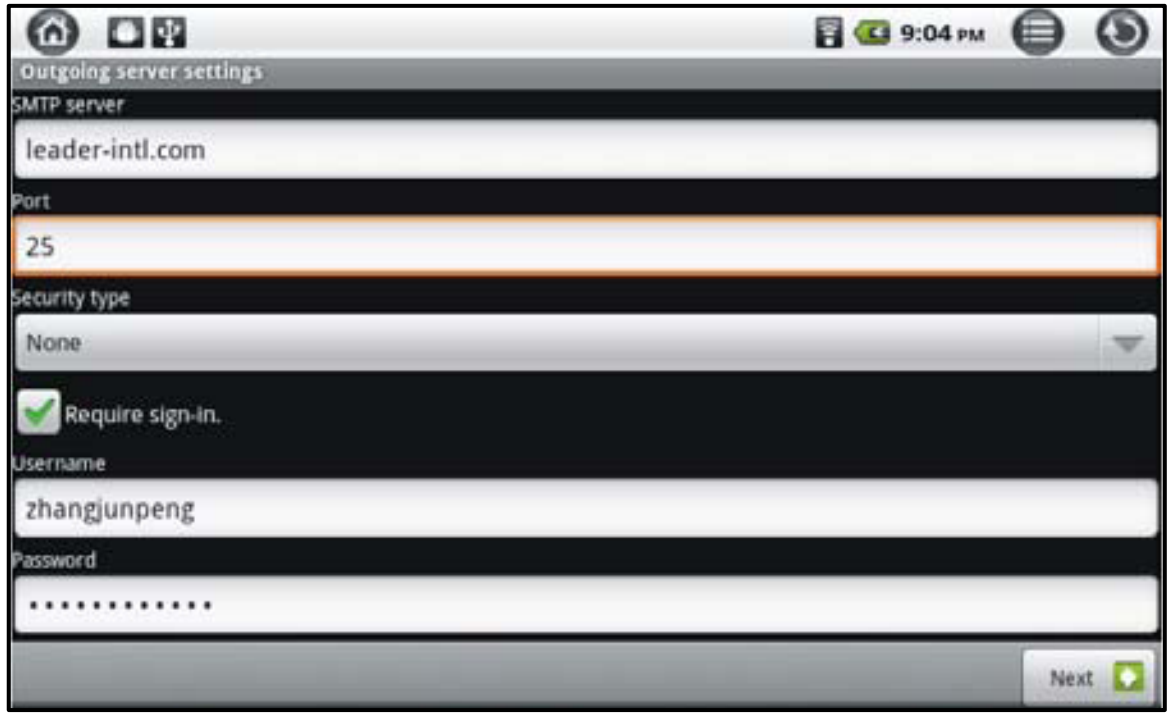

Outgoing server settings

SMTP server: leader-intl.com

Port: 25

Security type: None

☑ Require sign-in.

Username: zhangjunpeng

Password: •••••••••••••

If you are unsure about the settings, contact your email host for details.

Select “Next” to go to the next screen.

Email Setup (continued)

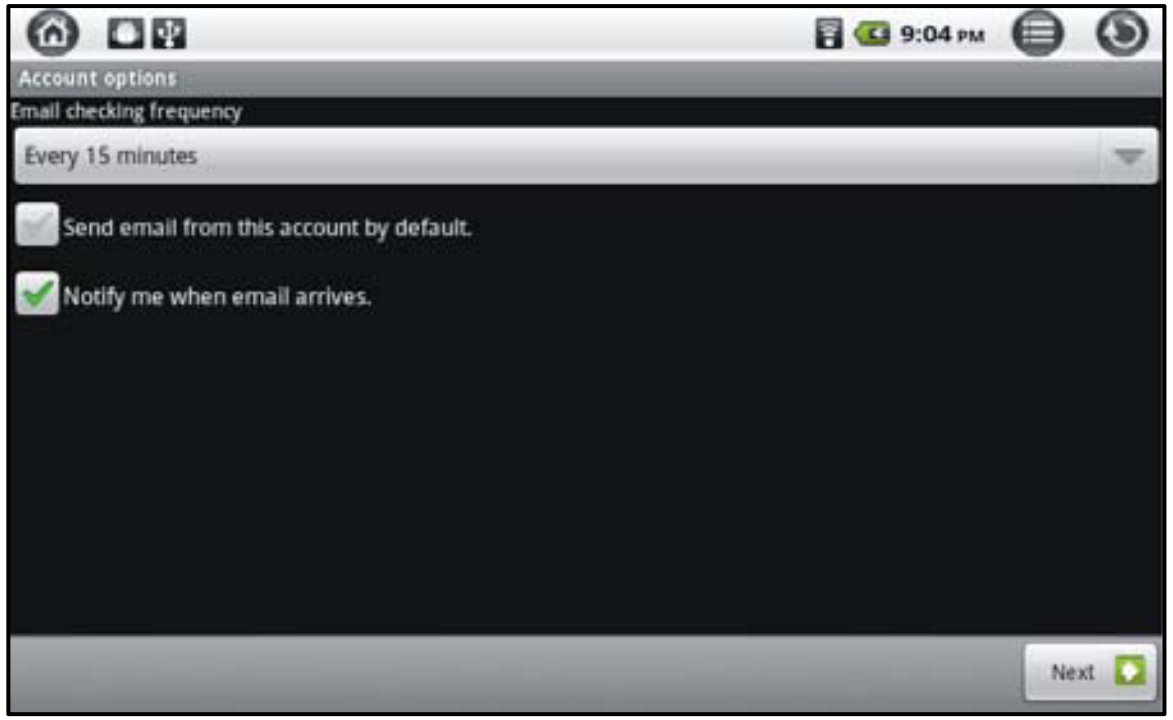

Account options

Email checking frequency: Every 15 minutes

☐ Send email from this account by default.

☑ Notify me when email arrives.

Select how often to check for new email.

Enable / disable email notification.

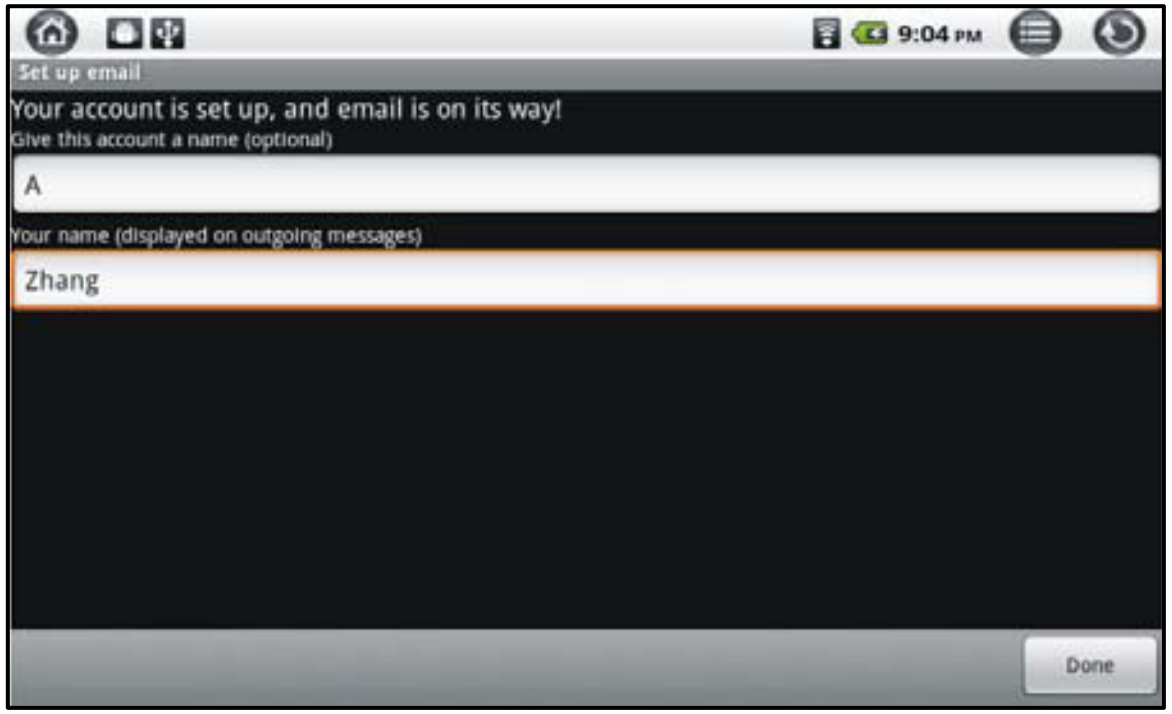

Set up email

Your account is set up, and email is on its way!

Give this account a name (optional): A

Your name (displayed on outgoing messages): Zhang

Enter a name for this email account.

Enter how you want your name to be displayed for outgoing messages.

Select “Done”

Clock Settings

In the Application List screen, click the “Clock” icon:

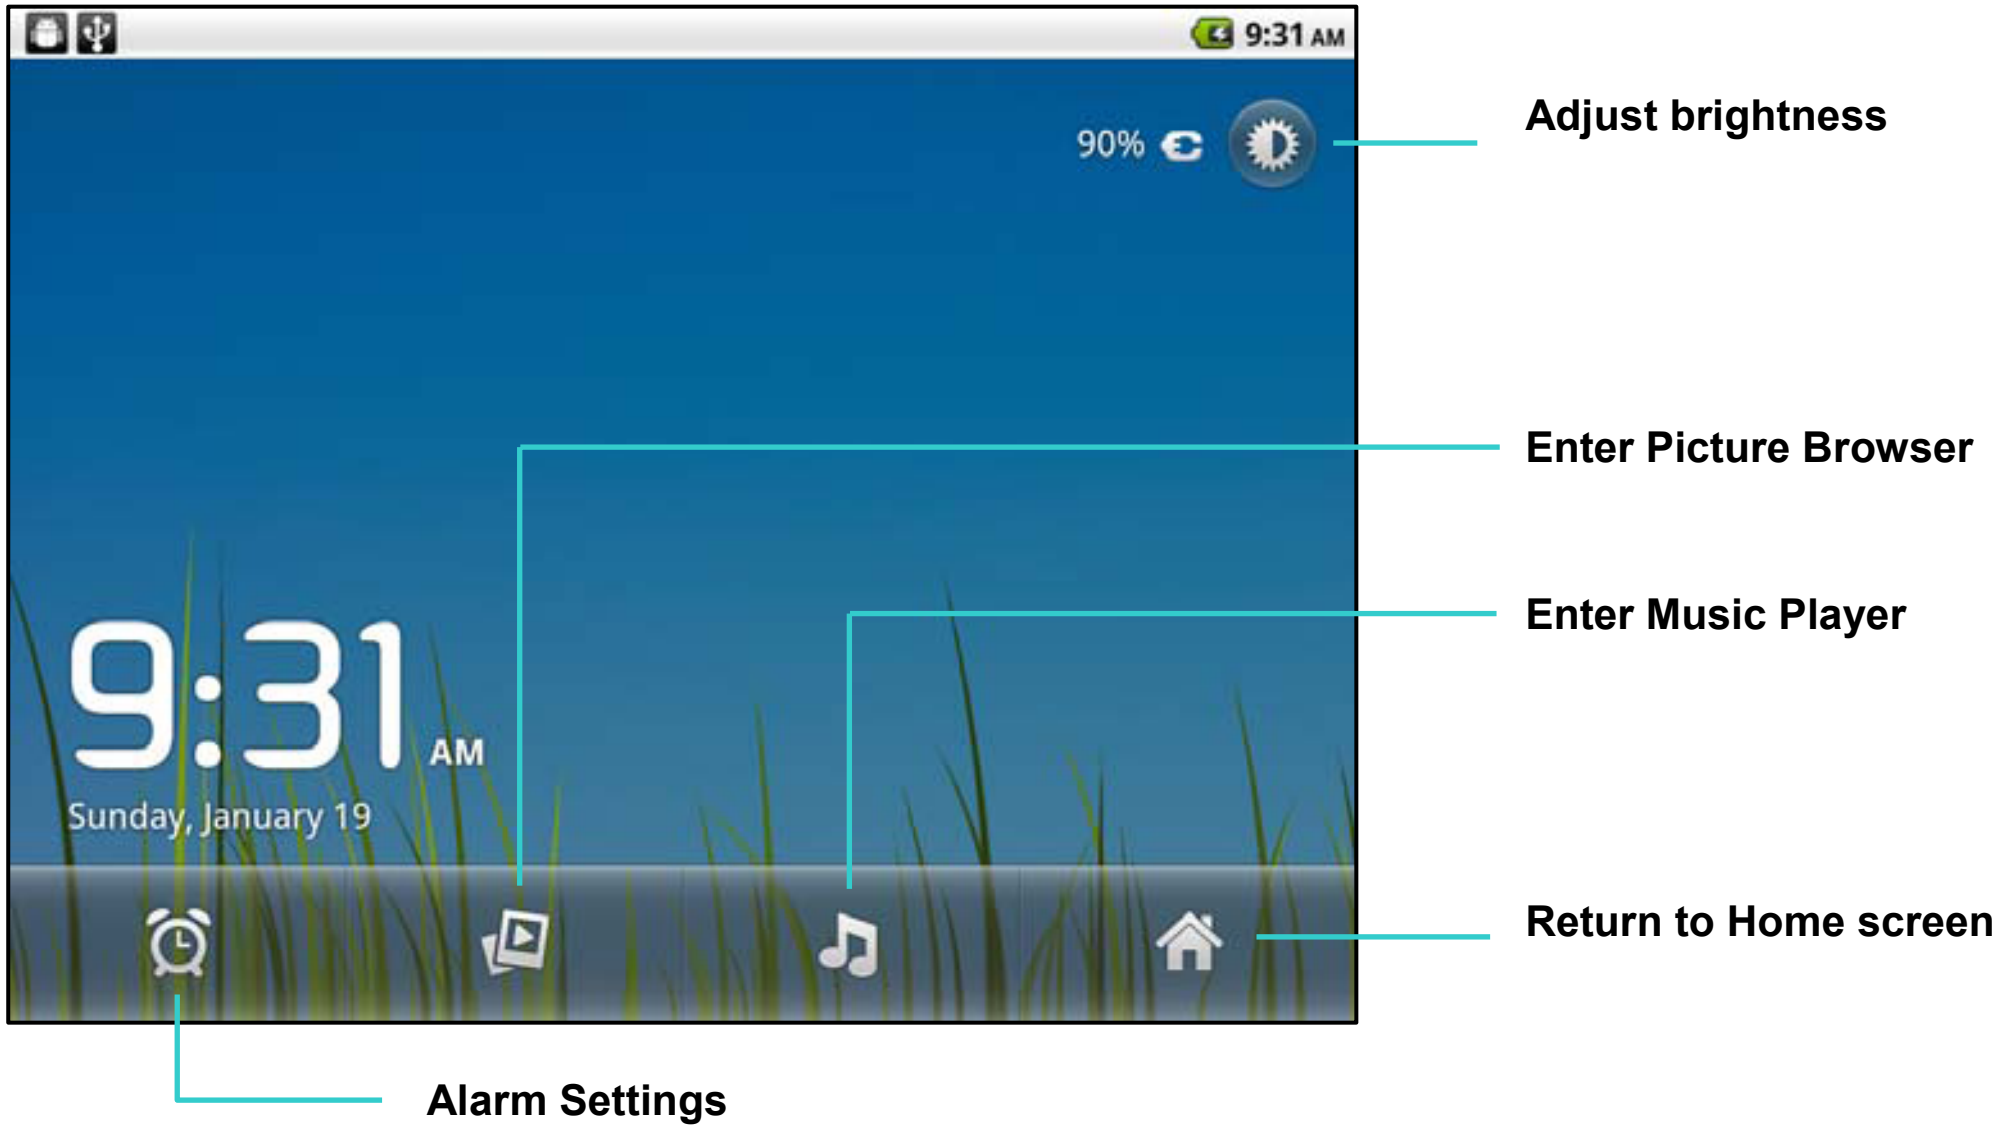
9:31 AM
90%
9:31 AM
Sunday, January 19
Adjust brightness
Enter Picture Browser
Enter Music Player
Return to Home screen
Alarm Settings

Alarm & Time Settings

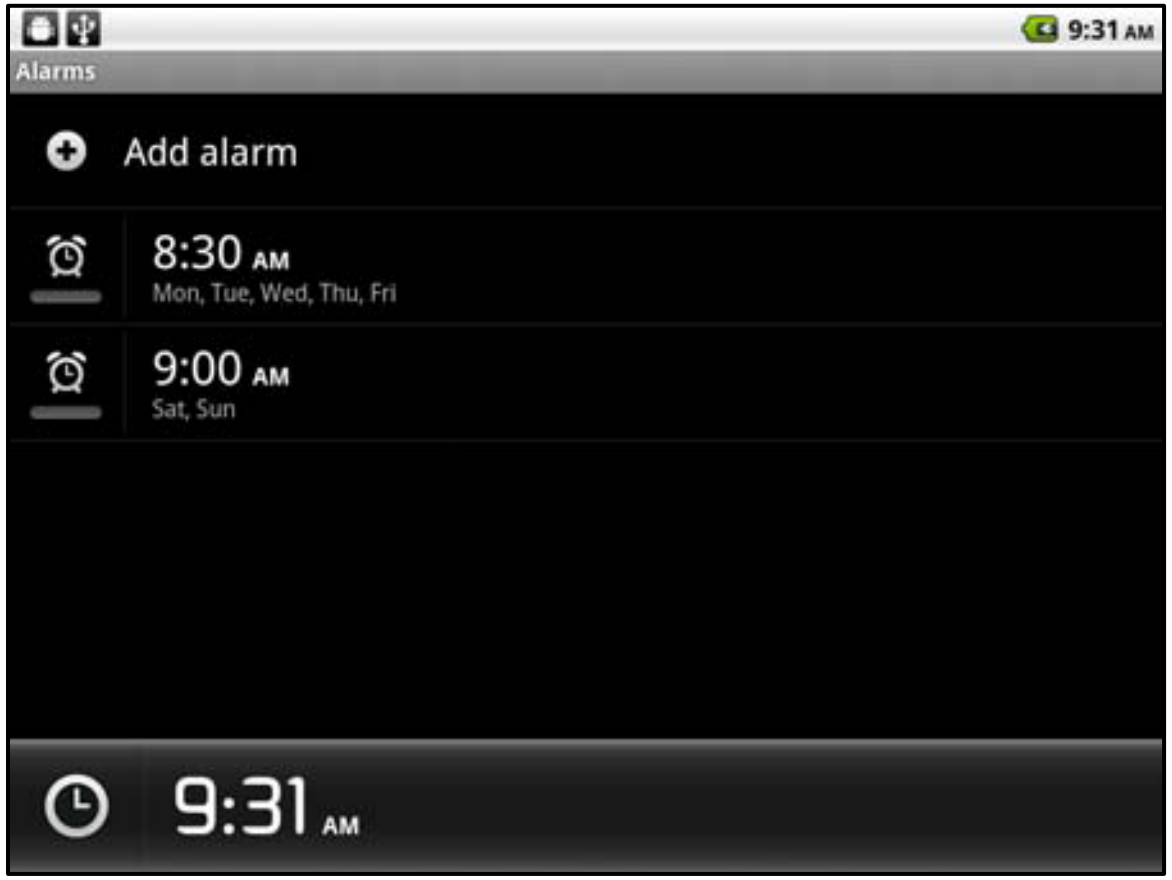

Alarms

Add alarm

8:30 AM
Mon, Tue, Wed, Thu, Fri

9:00 AM
Sat, Sun

9:31 AM

Enter “Alarm Settings” screen (see page 36)
Click “Add Alarm”
Set Time

Set time and alarm options

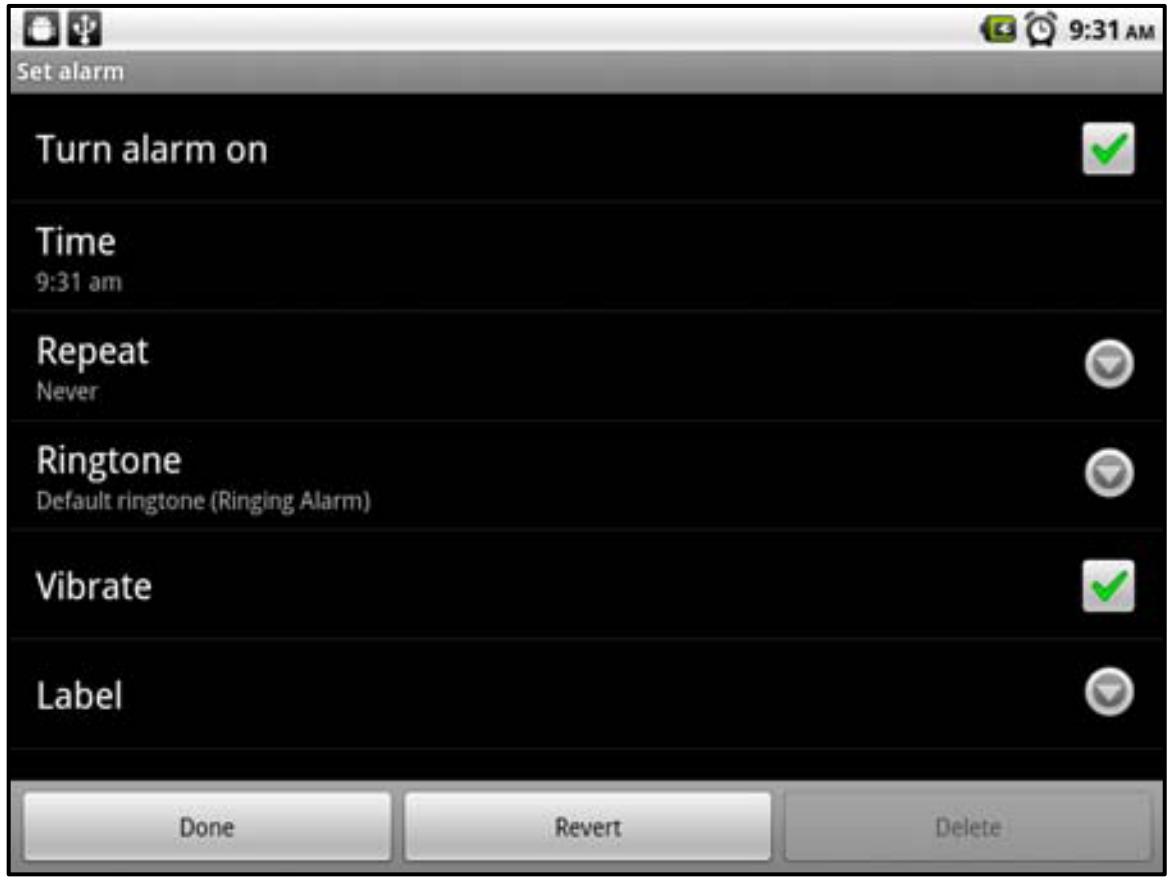

9:31 AM

Set alarm

Turn alarm on ☑

Time
9:31 am

Repeat
Never

Ringtone
Default ringtone (Ringing Alarm)

Vibrate ☑

Label

Done
Revert
Delete

Specifications

CPU		Samsung Cotex A8 – 1GHz
Screen	Display	9.7 inch Touch Panel, IPS Screen,
	Resolution	1024*768
Memory	Flash ROM	512MB NAND
	RAM	512MB Mobile DDR
Antenna		Built-in Antenna
Wifi		802.11 b/g/n
G-Sensor		Support
Camera		2M pixel Front Camera
Audio		MP3, AAC
Video		MPEG4 H264, H263
Photo		JPG, PNG

Input/Output	Touch Panel	Capacitive type Touch Panel
	Speaker	Built–in Speaker
	Headphone	3.5mm stereo Jack
	MIC	Internal Microphone
	SD / MMC	Micro SD Slot, capacity up to 32GB (support TF HC)
	USB	USB 2.0 Device (Mini Port) x1, USB2.0 Host (A type) x 2
	HDMI	MINI HDMI, Support 1080P Video Play
Buttons / Switches		1. Hardware Power ON/OFF Switch and Reset Switch 2. Volume Up, Volume Down 3. Back Key, Home Key, Menu Key, Search Key 4. Photo Key
Battery	Type	Built-in Rechargeable 3.7V 6800mAh Li-Polymer
	Active	5~7 hrs battery life on full power mode with backlight setting on mid range
Car Charger	Output	Φ3.5mm DC-Jack, 5V, 2.5A
Certification & Regulation		CE, FCC, RoHS

FCC Statement

FCC Caution:

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

·Reorient or relocate the receiving antenna.
·Increase the separation betweenthe equipment and receiver.
·Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
·Consult the dealer or an experienced radio/TV technician for help.

FCC Compliance:

·To assure continued compliance, follow the attached installation instructions.
·Use only the provided shield interface cables when connecting to computer.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with part 15 subpart B of the FCC Rules. Operation is subjected to the following conditions: (1)This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This product may receive radio interference caused by mobile telephones or other products during operation. If such interference is apparent, please increase separation between the product and the mobile telephone orother product.

Industry Canada Requirement:
This Class B apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme á la norme NMB-003 du Canada.

Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned. The TM ar®l marks are not used to identify registered trademarks and trademarks in these instructions.

This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of Leader International Inc.. Any unauthorized distribution of this manual is expressly forbidden

Leader International Inc may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals or other information, be sure to visit our website at:
www.leaderinternationalinc.com

Or write to us at:
Leader International Inc
225 S. Lake Avenue, Suite 300
Pasadena, CA 91101
USA

Copyright © 2011